

FLAME-THROWER COIL APPLICATIONS						
Use with:	System Voltage	Cylinders	Primary Resistance	Recommended Flamethrower Coils		
				Black	Chrome	Epoxy
Ignitor Only	12V	8	1.5 ohms	40011	40001	40111
Ignitor Only	12V	4 & 6	3.0 ohms	40511	40501	40611
Ignitor Only	6V*	8	0.6 ohms	45011	45001	45111
Ignitor Only	6V	4 & 6	1.5 ohms	40011	40001	40111
Agricultural & Industrial						
Ignitor Only	12V	1,2,3,4, & 6	2.9 ohms	28010 (Can also use 40511, 40501, 40611)		
Ignitor Only	12V	8	1.5 ohms	40011	40001	40111
Ignitor Only	6V	1,2,3,4, & 6	1.5 ohms	40011	40011	40111
Ignitor Only	6V*	8	0.6 ohms	45011	45001	45111
*NOTE: Flamethrower (II) coils are 12V coils and are recommended for use on 6V systems.						
NOTE: REMOVE OR BYPASS EXTERNAL BALLAST RESISTOR OR RESISTANCE WIRE WHEN INSTALLING THE RECOMMENDED FLAME-THROWER (II) COIL.						

LIMITED WARRANTY


Pertronix, Inc. Warrants to the original Purchaser of its solid-state ignition system (product) that the Ignitor, magnet assembly and wiring (components) shall be free from defects in material and workmanship for a period of (30) months from the date of purchase.

If within the period of the foregoing warranty Pertronix finds, after inspection, that the product or any component thereof is defective, Pertronix will, at its option, repair such products or component or replace them with identical or similar parts PROVIDED that within such period Purchaser:

- Promptly Notifies Pertronix, in writing, of such defects.
- Delivers the defective products product or component to Pertronix (ATTN: Warranty) with proof of purchase date; and
- Has installed and used the product in a normal and Proper manner, consistent with Pertronix printed instructions.

THE FORGOING LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED, INCLUDING AND IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PURPOSE.

THE FURNISHING OF A REPAIR OR REPLACEMENT COMPONENTS SHALL CONSTITUTE THE SOLE REMEDY OF PURCHASER AND THE SOLE LIABILITY OF PerTronix WHETHER ON WARRANTY, CONTRACT OR FOR NEGLIGENCE, AND IN NO EVENT WILL PerTronix BE LIABLE FOR MONEY DAMAGES WHETHER DIRECT OR CONSEQUENTIAL.

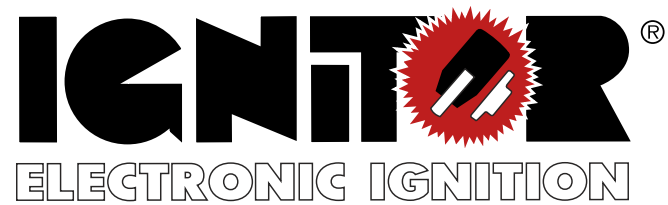

12-Volt Negative Ground Instructions

For Part Number: ML-189

Before installing, please read the following important information...

- The Ignitor is designed for 12-volt negative ground systems.
- See back page for coil recommendations.** The Ignitor is compatible only with a "resisted style" coil. Eight cylinder applications require a minimum of 1.5 ohms of primary resistance. Four & six cylinder applications require a minimum of 3.0 ohms of primary resistance.
- REMOVE OR BYPASS EXTERNAL BALLAST RESISTOR OR RESISTANCE WIRE WHEN INSTALLING THE RECOMMENDED FLAME-THROWER COIL.**

DISASSEMBLY


- PRIOR TO INSTALLATION TURN IGNITION SWITCH OFF OR DISCONNECT THE BATTERY**
- Remove distributor cap and rotor from distributor. Do not disconnect spark plug wires from cap. Examine cap and rotor for wear or damage. Replace as needed.
- Remove the points wire from the (-) terminal of the Ignition coil.
- Remove and retain the points and condenser. Installing the Ignitor does not alter the internal configuration of your distributor. Therefore, the points, condenser and hardware can be used as backup.
- Clean all dirt and excess oil from the point cam.

IGNITOR INSTALLATION

- Install the Ignitor into the distributor housing, align the Ignitor to the breaker plate as shown in figure 3. Fasten the plate into place using the original screws.
- Install magnet sleeve over the distributor shaft, onto point cam. Rotate the sleeve until a slight locating position is felt before applying pressure. Press down firmly insuring sleeve is fully seated.
- Insert wires through the wire exit hole in distributor housing. Pull the rubber grommet into place. Make sure wires do not interfere with any moving parts.
- Re-install the rotor and distributor cap. Make sure all spark plug wires are securely attached.
- See Wiring Instructions.



440 E. Arrow Highway, San Dimas, CA. 91773
909-599-5955 www.pertronix.com


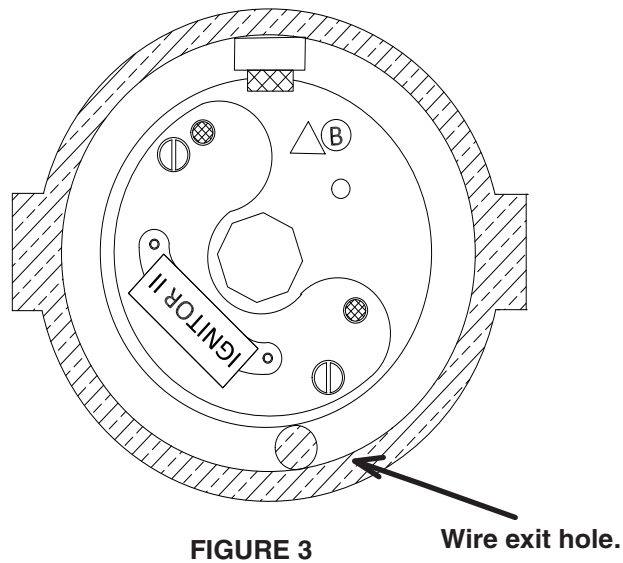


WIRING INSTRUCTIONS

NOTE: A BALLAST RESISTOR OR RESISTANCE WIRE MAY OR MAY NOT BE INCLUDED IN THE ORIGINAL EQUIPMENT.

REMOVE OR BYPASS EXTERNAL BALLAST RESISTOR OR RESISTANCE WIRE WHEN INSTALLING THE RECOMMENDED FLAME-THROWER COIL. SEE BACK PAGE FOR FLAME-THROWER COIL RECOMMENDATIONS.

1. Connect the Ignitor black wire to the negative (-) terminal of the ignition coil.
2. For installations that do not use a primary ballast resistor or resistance wire, connect the Ignitor red wire to the positive (+) terminal of the ignition coil. (See Figure 1)
3. For installations that use a primary ballast resistor, connect the Ignitor red wire to the ignition switch side of the ballast resistor. (See Figure 2).
4. For installations that use a resistance wire, connect the Ignitor red wire to a 12V switched ignition source.
5. Reconnect battery and make sure all wires are connected.
6. The engine can now be started. Let the engine run for a few minutes and then set the timing in the conventional manner.

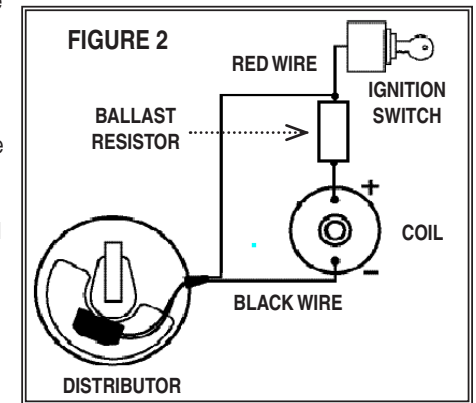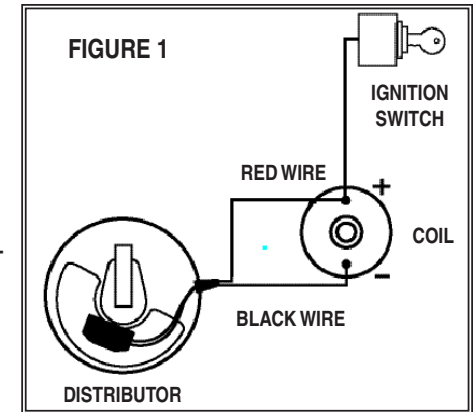

Ignitor COMMON QUESTIONS AND ANSWERS

Q. What is the first thing I should check if the engine would not start?

A. Make certain all wires are connected securely to the proper terminals.

Q. The engine will not start or runs rough. Are there any tests I can do?

A. Yes, remove the red ignitor wire from the coil. Connect jumper wire from the positive side of the battery to the red ignitor wire just removed from the coil. If the engine starts, then you have a low voltage problem. Remember this is just a test. Not intended for permanent installation.

Q. How can I fix a low voltage problem?

A. First, if you have an external ballast resistor or resistance wire, connect the red ignitor wire to the ignition wire prior to the ballast resistor or resistance wire. Second, if you do not have an external resistor you must connect the ignitor red wire to a 12-volt source that is controlled by the ignition switch.

Q. Should I remove the starter bypass wire?

A. No, the starter bypass wire is needed to provide voltage while starting (cranking).

Q. What type of coil do I need?

A. The ignitor is compatible only with a "points type" coil. Eight cylinder engines require a minimum of 1.5 Ohms of resistance in the primary circuit. Four & six cylinder engines require a minimum of 3.0 Ohms of resistance (primary).

Q. How do I check my coil for resistance?

A. First you need an ohmmeter. Remove all the wires from the coil. Attach the ohmmeter to both the positive and negative terminals. The reading should be 1.5 Ohms or greater for eight cylinder engines and 3.0 Ohms or greater for six cylinder engines. (Your local auto parts store can do this for you if you don't have an ohmmeter)

Q. What do I do if my coil does not have enough resistance?

A. You may purchase and install a ballast resistor from your local auto parts store. You may also choose to purchase a Flamethrower 40,000-volt coil, which provides resistance internally. Note: Many vehicles come with ballast resistor or resistance wire. These applications do not need an additional resistor.

Q. What happens if you leave the ignition switch on when the engine is not running?

A. This can cause your coil to overheat, which may cause permanent damage to the coil and the ignitor.

Q. May I modify the length of the wires?

A. Yes, you can cut the wires to any length your application may require. You may also add length of wire if needed (20-gauge wire). Please make sure all wire splice are clean and connections are secure.

Q. Will the shift interrupter on an OMC stern drive boat work with the ignitor?

A. The ignitor is compatible with all OMC stern drive applications, when equipped with a "diode fix". If you purchased a kit that does not include the "diode fix" diagram, call our tech line.

Q. How can I get additional help?

A. Call our tech line (909-547-9058) for any further instructions or questions.