

# Instructions

## Front Control Arm Bushings

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*

- Proceed to remove front wheels. Continue to remove from control arms from vehicle.

- Remove the front bushing including the steel outer shell - you will require a Press or use a drill/hacksaw to cut a slit in outer shell.

- Remove rear bushing also - careful of control arm spindle.

- Push in new supplied bushings. Grease bushing internal diameter and side faces with supplied grease only.

- Push in supplied steel tube to front bushing.

- Re-fit arm to vehicle.


- A wheel alignment will be required.

- Re-check all bolts after 100kms travelled.

**Application** - Nissan Sentra 1991-1999  
- Nissan NX 1991-94

*Always refer complete catalogue listing*

**Contents** - Bushing 9032 x2  
- Bushing 91563 x4  
- Steel tube 22.2x14.3x 61 x2  
- Grease

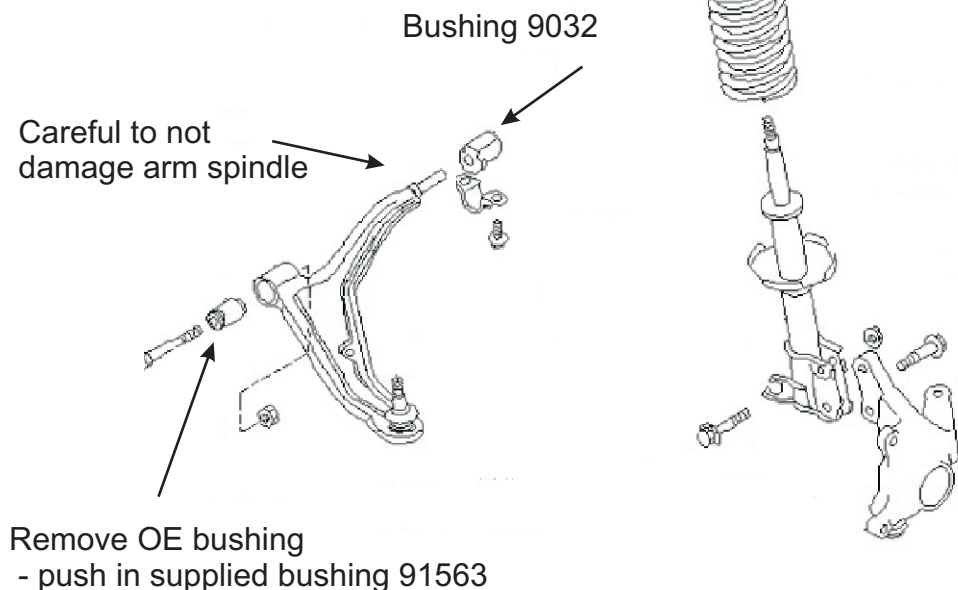

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.