

Instructions

Engine Mount - Inserts

Page 1 of 3

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Honda Civic
- Honda Acura

Always refer complete catalogue listing




- Raise vehicle evenly and safely support.

Note - this kit will service the front and rear mounts only.

- Use a jack and timber to support engine while removing each mount. Best to service only one mount at a time. Only lift engine just high enough to remove mount.

Contents - Insert 91459 x 1
- Insert 91460 x 1
- Insert 91461 x 1
- Insert 91462 x 1

Rear Mount - near Firewall

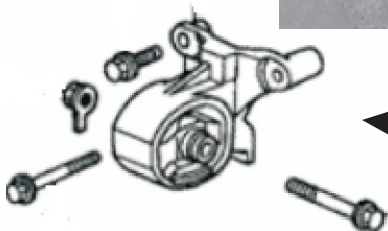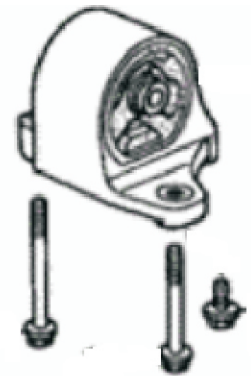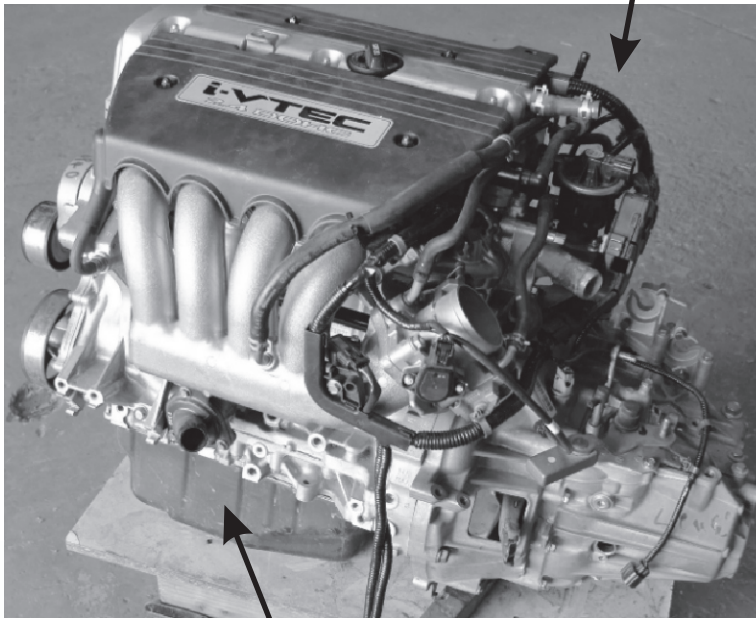

Front Mount - near Radiator

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Instructions



Engine Mount - Inserts

Continued - Page 2 of 3

Front Mount

- Un-bolt and completely remove aluminium mount.
- Check rubber mount condition for major wear.

It may be best to replace if mount is excessively worn.

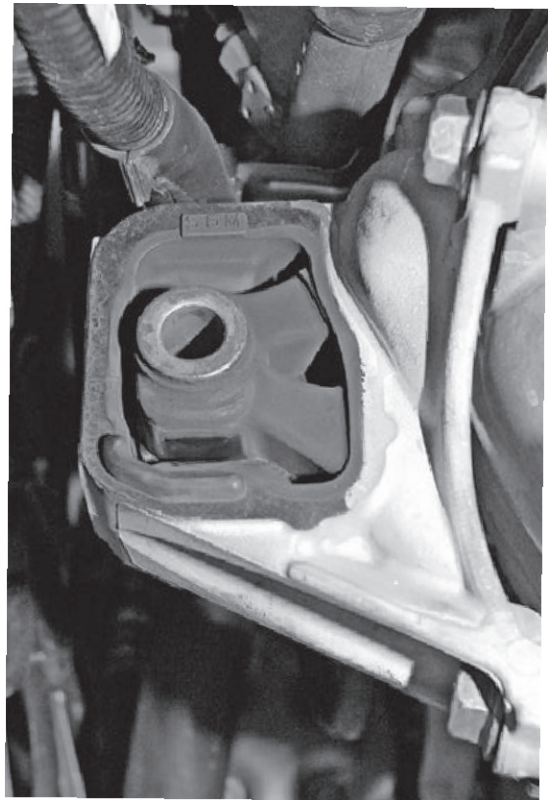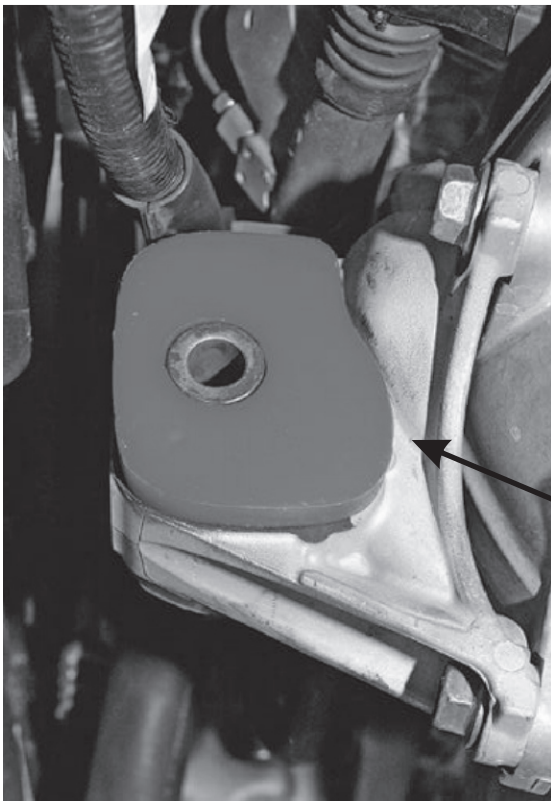

- Note - remove any excess rubber flashing and dirt etc

- Push in supplied Inserts
- part numbers -

- **91461** - LH side
- **91462** - RH side

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.



Instructions

Engine Mount - Inserts

Continued - Page 3 of 3

Rear Mount

- Un-bolt and completely remove steel mount.
- Check rubber mount condition for major wear .
It may be best to replace if mount is excessively worn.

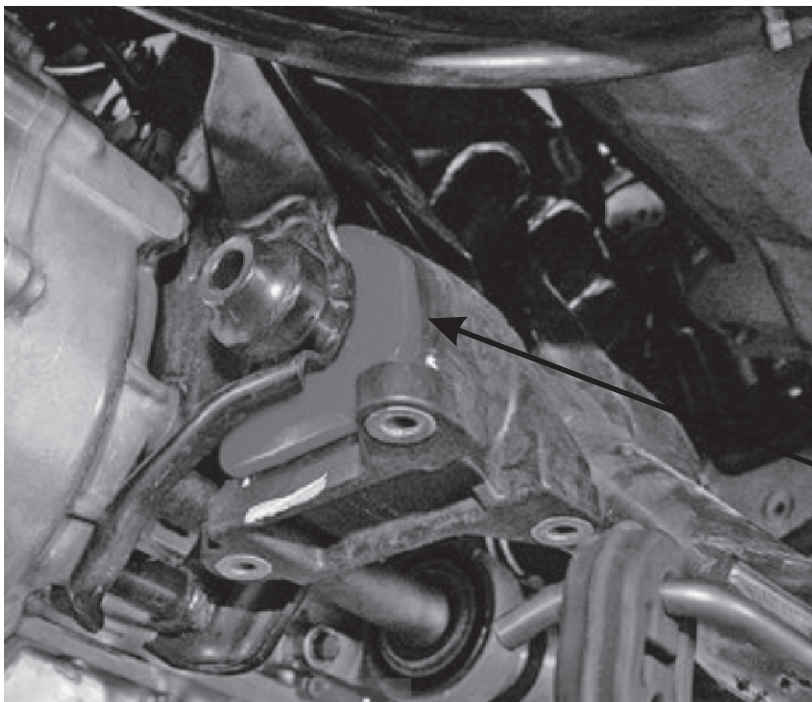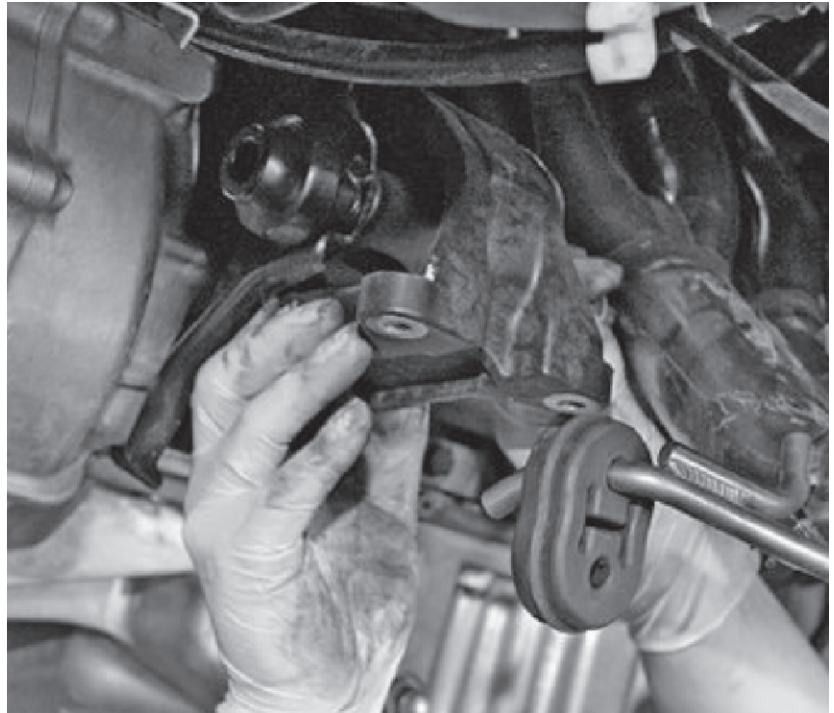

- Note - remove any excess rubber flashing and dirt etc
- Push in supplied Inserts
- part numbers -
 - **91459** - LH side
 - **91460** - RH side
- Re-use factory bolts -
tighten to manufacturers spec.