

# Instructions

## Rear Beam Axle Bushing

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

**Application** - Honda Civic FN/FK

*Always refer complete catalogue listing*

**Note** - you may be able to remove bushing while Beam still in vehicle.

**Contents** - Bushing 91497 x 2  
 - Flat washer x2  
 - Steel tubes x2  
 - Grease

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*


- Proceed to un-bolt one beam bushing. The original bushings have a plastic outer shell - they can be cut or drilled out of Beam Eye.
- Remove original bushing and clean Beam Eye of any dirt/oil.

Before pushing new supplied bushing in, place supplied flat washer on bushing and seat up against flange.

- Grease bushing internal diameter and side face with supplied grease only.
- Push in supplied steel tubes.

- Bolt Beam back in vehicle.

- Re-check bolts after 100kms travelled.

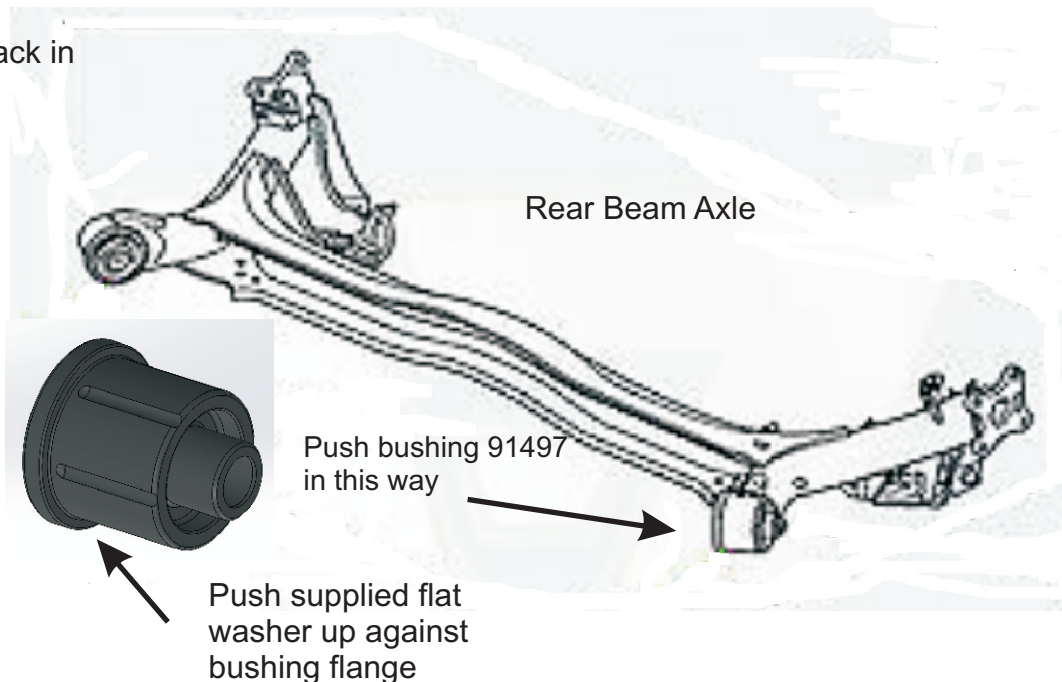

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.