

Install Guide Front Lower Control Arm - Rear Bushings

Install guide - suggested method

- Raise vehicle evenly and safely support with a hoist or stands.


Never rely on a Jack only

- Proceed to remove front wheels.
- Remove control arms from vehicle - start by un-bolting the ball joint's 3 nuts. Next the front bushing horizontal bolt and rear vertical bolt.

Note - a hydraulic press will be required to press out old bushing.

- Once arm is removed, inspect the front bushing. Replace if necessary.
- Proceed to press out old bushing. Make sure to press out the steel shell also.
- Clean arm of any grease or burrs.

Refer page 2

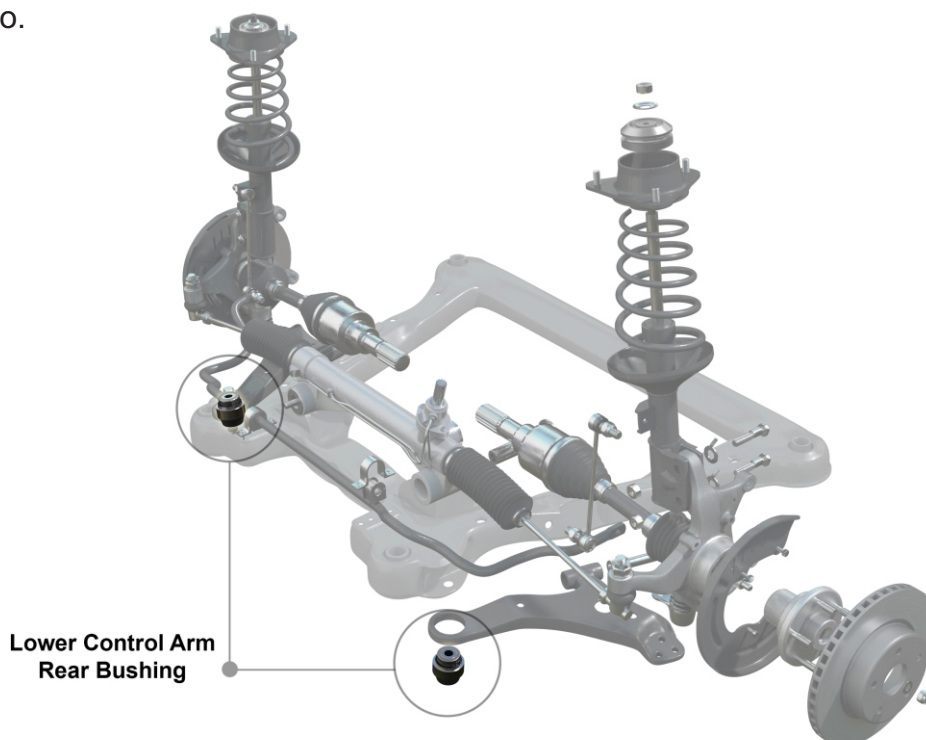

Application - Toyota Rav 4 205-2018
- Toyota Corolla 2007-2019
- Toyota Prius 2009-on

(Always refer current catalogue listing)

Contents - Bushings 3588 x2
- Bushings 3588A x4
- Steel tubes 25.8x16.3x60mm x2
- Grease

Note: These components must be fitted by a qualified person only, as per the manufacturers service manual. Also, that all relevant safety procedures are followed in addition to above.


Install Guide Front Lower Control Arm - Rear Bushings

Page 2 -

- Proceed to press in new bushing **3588** into clean control arm. Press evenly into arm.
- Apply a small amount of supplied grease to the bushing internal diameter.
- Push in supplied steel tube.
- Lastly, add the poly spacers **3588A** to top and bottom of bushing. Add a small amount to grease to the top and bottom spacers also.

Refer below image

- Re-fit arms to vehicle using original bolts - tighten to manufacturers spec.
- Carry out a wheel alignment soon after install.
- Re-check all bolts after 500kms

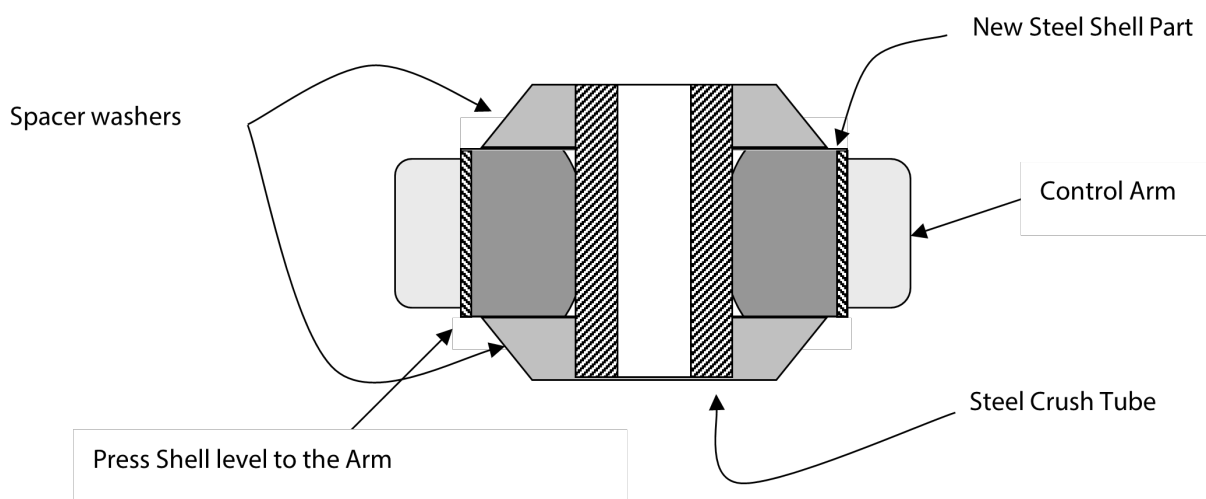

Note: the orientation of the Spacer Washers.

Note: These components must be fitted by a qualified person only, as per the manufacturers service manual. Also, that all relevant safety procedures are followed in addition to above.