

Instructions

Front Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Remove and service only 1 arm at a time.

IMPORTANT - do not remove OE upper bushing steel outer shells. Remove rubber only.

- Using heat, delaminate rubber from upper shells. Clean away any excess rubber/dirt/oil.

- Press new bushing **91856** into upper arm - use soapy water to assist with pressing in.

- For lower arm - press out old bushing including the steel outer shell. The lower bushing is a 3-piece design - refer image below.

- Grease bushings internal diameter and side face with supplied grease only.

Application - Honda Prelude SH
- 1997-2001


Always refer complete catalogue listing

Contents - Bushing 91854 x4
- Bushing 91855 x2
- Bushing 91856 x4
- Steel tube 22.2x12.2x57 x2
- Steel tube 22.2x10.2x47.5 x4
- Grease

Upper arm
Press new bushing in from outside of arm



Assemble lower bushings as per image.

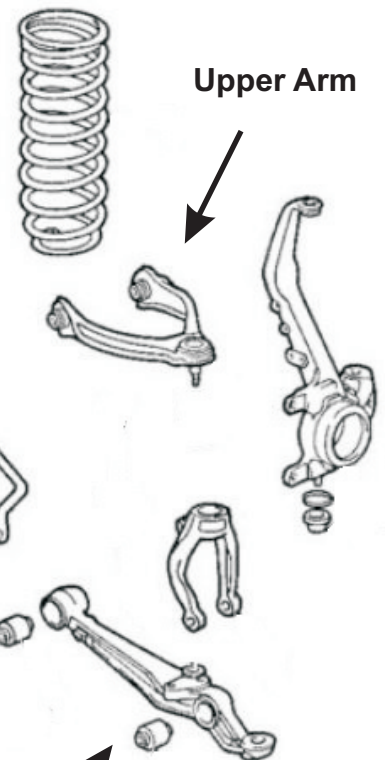

Upper Arm

Lower Arm
This kit does not service the shock bushing

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.