

Instructions

Steering Rack Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

Start by making sure steering wheel is pointing straight and lock in position.

- Remove wheels, and under cover trays.

Note - best to un-bolt ABS sensors and hang out of the way.

- Un-bolt steering shaft from column, remove front swaybar and remove tie rod ends from hubs.
- Un-bolt power-steering lines, radiator lower brackets,


Note - the Rack can be removed from RH side of vehicle.

- Use a Press to remove old vertical bushings.
- Push in new supplied bushings - use a small amount of grease to help with the install.
- Re-fit Rack to vehicle - note replace copper washers and split pins for Tie rods.
- a wheel alignment is required after install.
- Re-check all bolts after 200kms.

Application - Mazda Miata
- 2006-2014

Always refer complete catalogue listing

Contents - Bushing 91780 x1
- Bushing 91781 x4
- Steel tube 22.2x14.3x37.7 x2
- Grease

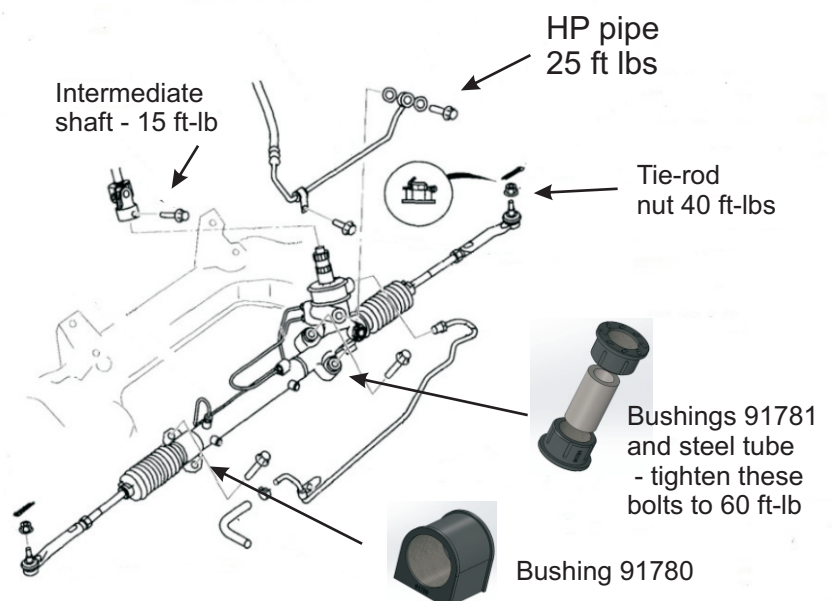

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.