

Instructions

Front Control Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- **You may wish to mark the wheel alignment eccentrics on the lower inner point prior to control arm removal.**

- Disconnect ball joints and remove arms
- we recommend removing 1 arm at a time

- The original bushings will need to be pressed or cut out.
Remove the complete bushing - careful not to damage the control arm.

- Push in supplied bushings as per image below. Grease bushing ID and face with supplied grease only.

- Carry out wheel alignment after install. Re-check bolts after 100kms.


Application - Toyota Supra
- 1987-1992

(Refer current catalogue listing)

Contents - 4x bushing 91197
- 4x bushing 91204
- 4x bushing 91205
- 4x steel tubes 22mm OD
- 4x steel tubes 25.4mm OD
- Grease

Generic image -

Bushing 91205
for lower arm
(facing rear of vehicle)

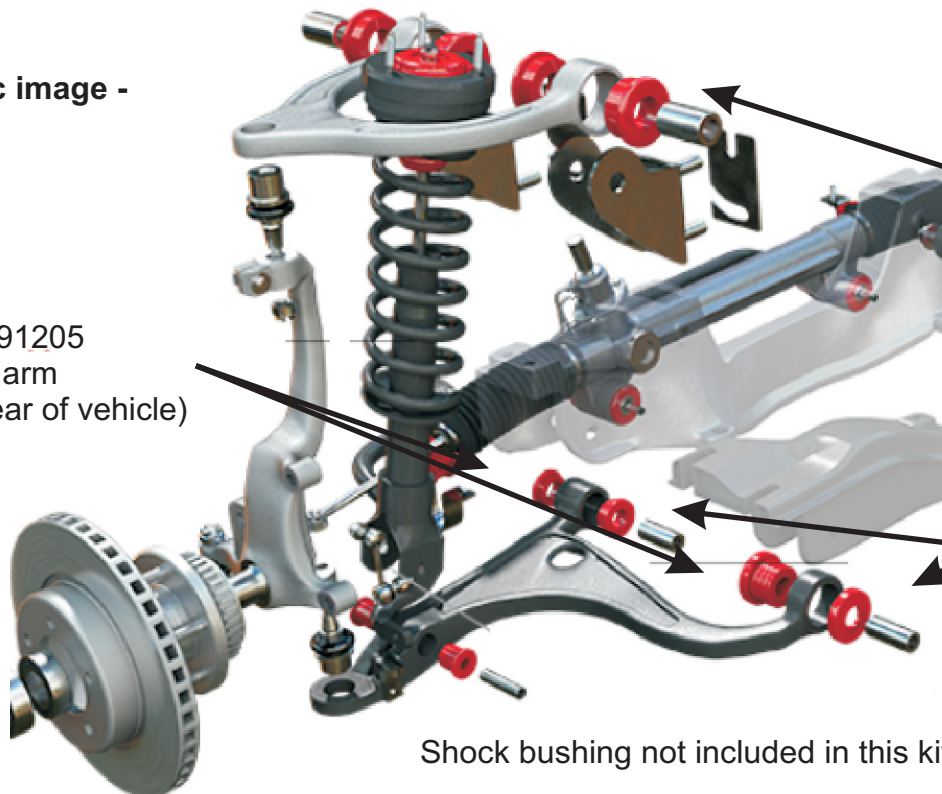

Bushings 91197
for upper arm

Bushing 91204
for lower arm
(facing front of
vehicle)

Shock bushing not included in this kit.

N.B: It is recommended that a licenced workshop or Tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.