

Instructions

Rear Trailing Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Important - the re-use of the OE front steel pin is required.

Application - Dodge Neon SRT-4
- 2003-05

(Refer current catalogue for complete listing)

Contents - Bushing 91614 x4
- Bushing 91615 x2
- Grease

- Raise vehicle evenly and safely support.

Never rely on a Jack only

- Proceed to un-bolt trailing arms.
- Using a Press, press out the front bushing. Alternatively, use a knife to cut one side (one flange) off - then push bushing out of arm.
- The steel pin will need to be retained - cut away the rest of the rubber.
- Place steel pin on buffing wheel and clean away all rubber.
- Grease new bushing internal diameter with supplied grease only.
- Using soapy water, press new 91615 bushing into arm. Then press OE pin into 91615 bushing.



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.