

Instructions Fifth Wheel Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.


- Remove Fifth wheel and clean thoroughly.
- Remove old pivot bushings and clean housings.
- Grease only the new supplied bushing internal diameter with supplied grease only.
- Install new bushings into clean housing.
- Re-fit Fifth wheel.

Application - Holland 5th wheel

Always refer complete catalogue listing

Contents - Bushing 91809 x2
- Grease

Grease new bushing internal diameter with supplied grease only - install into clean housing.

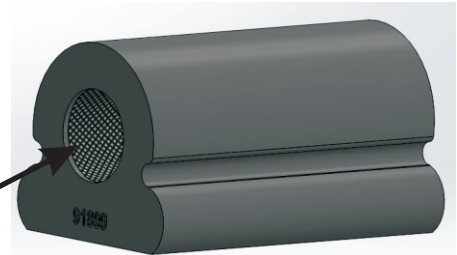

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.