

JBA


PERFORMANCE EXHAUST

A PerTronix Performance Brand ~ www.pertronixbrands.com ~ 909 599-5955

Installation Instructions & Warranty Information

40-9004 ~ 2007-18 Toyota Tundra 4.6/4.7/5.7L

Cat Back Dual Side Exit Exhaust

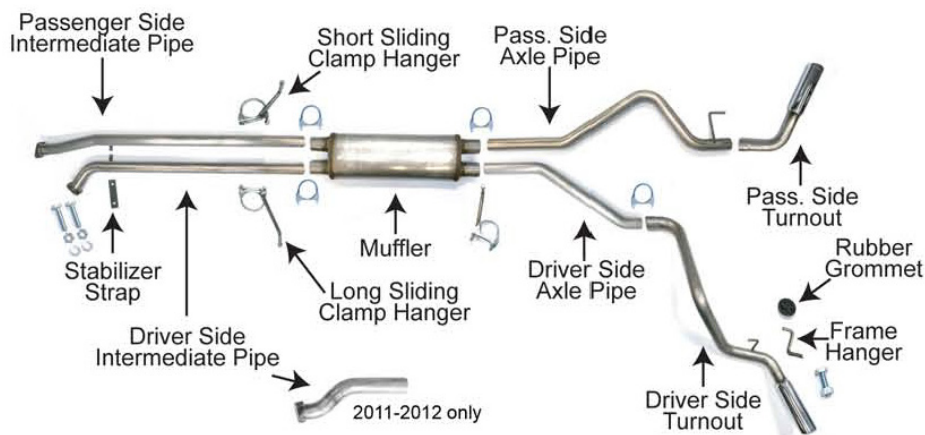

4

This product is considered a Replacement part per CARB and EPA regulations for emissions compliance and is legal for sale and use on all vehicles in all 50 states when installed according to the Manufacturer's Application Guide and Installation Instructions.

⚠ WARNING:

This product can expose you to chemicals including Lead, Nickel, Cadmium and Chromium which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

REV. 3 2-8-21 DSL

PLEASE READ BEFORE PROCEEDING

PerTronix® thanks you for choosing a JBA Performance Exhaust Product. To realize the potential of JBA's engineering and excellent fit, Please Read and Understand these instructions completely prior to starting the installation.

Check that you received all the parts listed on the parts list, if you have any concerns, please contact PerTronix before continuing.

Work Smart – Work Safe! Most Exhaust Installations are best performed on a lift. If a lift is not available, raise the vehicle and support on quality Jack Stands on level ground. Do not rely on a jack!

Before starting, allow the vehicle to cool, disconnect the battery, and spray penetrating oil on all hardware and fittings that will need to be removed. Silicone spray on rubber hangers will make them easier to remove and install.


1. With the vehicle raised and properly supported, Remove bolt from tailpipe clamp




2. Remove clamp from tailpipe.



3. Remove tailpipe from vehicle

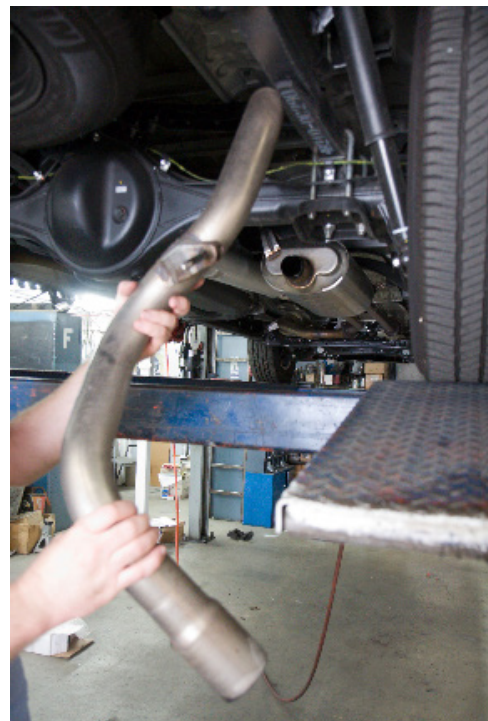

4. Remove bolts attaching muffler assembly to vehicle.

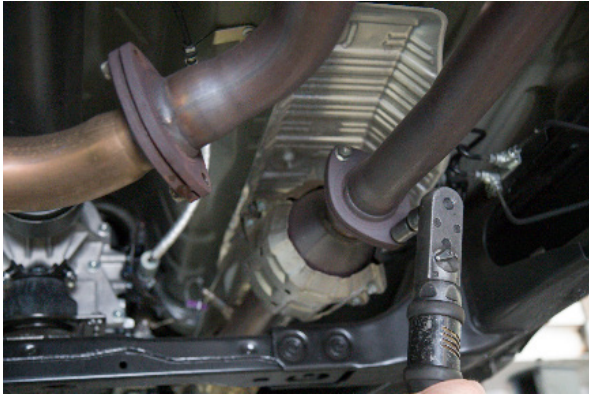

5. Remove muffler assembly from vehicle



6. Install intermediate pipes



7. Tighten securely



8. Slip clamps over intermediate pipes



9. Install muffler. Check to insure full insertion




10. Install connecting strap using hardware provided.



11. Install rear muffler hanger.



12. Install left axle pipe.

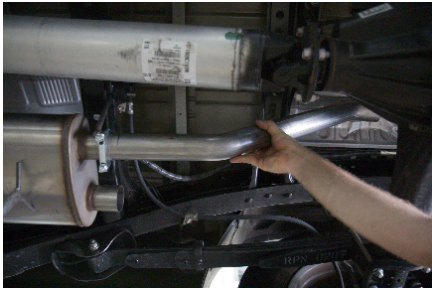

13. Position clamp on muffler outlet.




14. Install right axle pipe.



15. Insert hanger rod into rubber isolator.



16. Install hanger bracket into existing hole on left rear frame

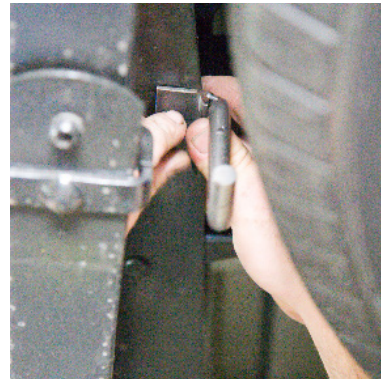

17. Tighten securely




18. Install left tailpipe onto axle pipe, and into new hanger.

20. Install both turn outs.

19. Slip clamp onto right side axle pipe.



21. Align exhaust, tighten clamps securely and tack weld slip joints

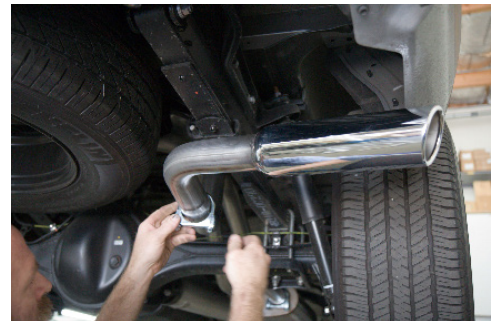

Parts list

1	Muffler	1	Passenger Side Intermediate Pipe
1	Rubber grommet	1	Driver Side Intermediate Pipe
1	Driver Side Axle Pipe	1	Passenger Side Intermediate Pipe
1	Driver Side Tail Pipe	1	Passenger Side Tail pipe
1	Clamp Hangar	1	5/16 x 1" Bolt and Nut
2	1/4" x 1 Bolt and Nut	5	2 1/2" Clamp
1	Frame hangar	1	Stabilizer Strap
1	3 U-bolt clamp with Hangar		

JBA LIMITED WARRANTY

All JBA Headers and Exhaust products are guaranteed, to the original purchaser, to be free of defects in materials and workmanship for one year. This warranty covers the replacement or repair of the product only and does not cover the cost of removal and installation, customer applied aftermarket coatings or any discoloration or corrosion of finished surfaces.

Damage or product failure resulting from collision, improper installation, off-road use, road hazards, the use of exhaust insulating wrap or like products or rust occurring after installation, is not covered by the warranty. The warranty extends only to the original purchaser.

Should a part become defective it should be returned to the original selling retailer and must be accompanied with the sales receipt. If there is no retailer in your area, call the factory for a return authorization and return your part prepaid to the factory for inspection. PerTronix reserves the rights to replace or repair the alleged defective part and return the part freight collect.