



PERFORMANCE EXHAUST

A PerTronix Performance Brand ~ www.pertronixbrands.com ~ 909 599-5955

Installation Instructions & Warranty Information

40-2645 ~ 2015-17 Mustang 5.0 GT

For stock convertors or JBA 6689SD mid pipes
3" Dual Cat Back Exhaust



This product is considered a Replacement part per CARB and EPA regulations for emissions compliance and is legal for sale and use on all vehicles in all 50 states when installed according to the Manufacturer's Application Guide and Installation Instructions.

WARNING:

This product can expose you to chemicals including Lead, Nickel, Cadmium and Chromium which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

REV. 4 2-4-21 DSL

PLEASE READ BEFORE PROCEEDING


PerTronix® thanks you for choosing a JBA Performance Exhaust Product. To realize the potential of JBA's engineering and excellent fit, Please Read and Understand these instructions completely prior to starting the installation.

Check that you received all the parts listed on the parts list, if you have any concerns, please contact PerTronix before continuing.

Work Smart – Work Safe! Most Exhaust Installations are best performed on a lift. If a lift is not available, raise the vehicle and support on quality Jack Stands on level ground. Do not rely on a jack!

Before starting, allow the vehicle to cool, disconnect the battery, and spray penetrating oil on all hardware and fittings that will need to be removed. Silicone spray on rubber hangers will make them easier to remove and install.

1. The middle section of the exhaust and mufflers are one unit and need to be removed as one. At the front there are two clamps that attach the mid section to the cat pipes. Loosen the clamps and slide them backwards (see picture below). At the mufflers you need to slide the hangers from the rubber mounts.
 2. Offer the JBA X-Pipe up to the stock cat pipes using the original Ford clamps.
 3. Install the JBA mufflers onto the rubber hangers WD 40 will ease installation.
 4. Slide the JBA Muffler over the end of the JBA X-Pipe with the 3" Accu Seal Clamps.
 5. With the axle pipes in the muffler assemblies adjust mufflers to be flat, and the tips an equal distance from the bumper cover, Then tighten all clamps securely.
 6. Using a soft cloth, wipe the new JBA tips clean.
4. Reconnect the battery and start the vehicle to check for leaks.

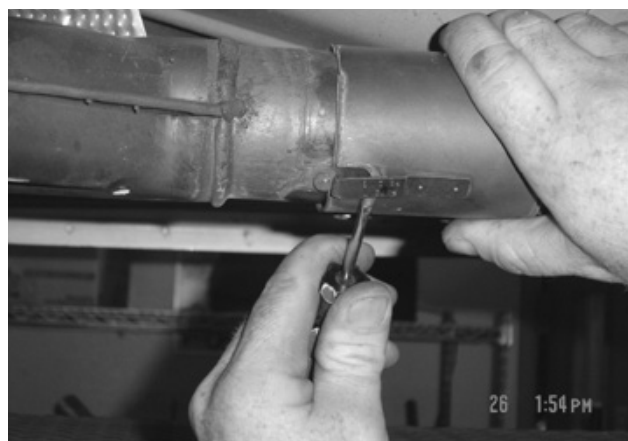

NOTES:

1.) All exhaust systems expand about 1" rearward when exhaust temperature rises so keep this in mind when adjusting your system.

To get more power out of your Mustang, JBA offers Cat4Ward and long tube headers and for the 5.0L. For more information about these and other quality performance products from JBA Visit us online at www.pertronixbrands.com

Parts List:

- 1 X-Pipe
- 1 Driver's Side Muffler
- 1 Pass Side Muffler
- 2 3" Accu Seal Clamps

JBA LIMITED WARRANTY

All JBA Headers and Exhaust products are guaranteed, to the original purchaser, to be free of defects in materials and workmanship for one year. This warranty covers the replacement or repair of the product only and does not cover the cost of removal and installation, customer applied aftermarket coatings or any discoloration or corrosion of finished surfaces.

Damage or product failure resulting from collision, improper installation, off-road use, road hazards, the use of exhaust insulating wrap or like products or rust occurring after installation, is not covered by the warranty. The warranty extends only to the original purchaser.

Should a part become defective it should be returned to the original selling retailer and must be accompanied with the sales receipt. If there is no retailer in your area, call the factory for a return authorization and return your part prepaid to the factory for inspection. PerTronix reserves the rights to replace or repair the alleged defective part and return the part freight collect.