


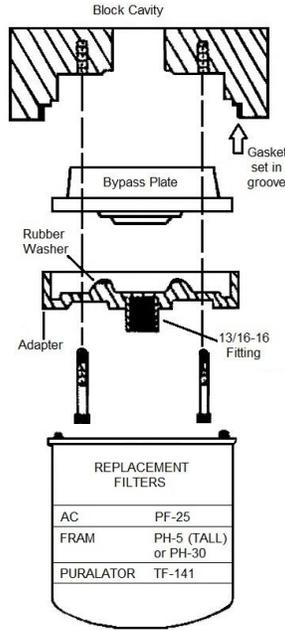

**OIL FILTER CONVERSION KIT #1270
FOR CHEVY V-8 1967 & EARLIER
INSTALLATION INSTRUCTIONS**

- Remove old filter assembly (retain bypass plate).
- Remove old gasket positioned in block groove.
- Clean groove, block cavity, and bypass plate thoroughly with solvent.
- Place Mr. Gasket Blue Thread Locking Compound #78091G on all threads of adapter and screw the 13/16-16 fitting in by hand.
- Install gasket in block cavity groove being sure that it is not twisted.
- Place rubber washer on adapter as shown. Position bypass plate on adapter, align holes, and then bolt assembly to block. Be sure to use Mr. Gasket Blue Thread Locking Compound #78091G on these mounting bolts also.




**199R11376
Date: 7-19-17**



**OIL FILTER CONVERSION KIT #1270
FOR CHEVY V-8 1967 & EARLIER
INSTALLATION INSTRUCTIONS**

- Remove old filter assembly (retain bypass plate).
- Remove old gasket positioned in block groove.
- Clean groove, block cavity, and bypass plate thoroughly with solvent.
- Place Mr. Gasket Blue Thread Locking Compound #78091G on all threads of adapter and screw the 13/16-16 fitting in by hand.
- Install gasket in block cavity groove being sure that it is not twisted.
- Place rubber washer on adapter as shown. Position bypass plate on adapter, align holes, and then bolt assembly to block. Be sure to use Mr. Gasket Blue Thread Locking Compound #78091G on these mounting bolts also.

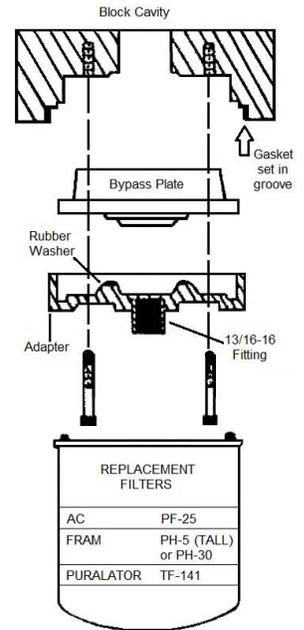


**199R11376
Date: 7-19-17**



**OIL FILTER CONVERSION KIT #1270
FOR CHEVY V-8 1967 & EARLIER
INSTALLATION INSTRUCTIONS**

- Remove old filter assembly (retain bypass plate).
- Remove old gasket positioned in block groove.
- Clean groove, block cavity, and bypass plate thoroughly with solvent.
- Place Mr. Gasket Blue Thread Locking Compound #78091G on all threads of adapter and screw the 13/16-16 fitting in by hand.
- Install gasket in block cavity groove being sure that it is not twisted.
- Place rubber washer on adapter as shown. Position bypass plate on adapter, align holes, and then bolt assembly to block. Be sure to use Mr. Gasket Blue Thread Locking Compound #78091G on these mounting bolts also.

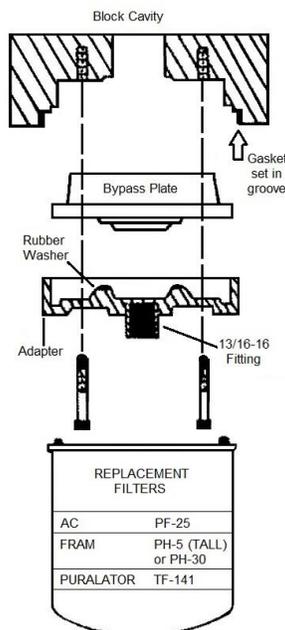


**199R11376
Date: 7-19-17**



**OIL FILTER CONVERSION KIT #1270
FOR CHEVY V-8 1967 & EARLIER
INSTALLATION INSTRUCTIONS**

- Remove old filter assembly (retain bypass plate).
- Remove old gasket positioned in block groove.
- Clean groove, block cavity, and bypass plate thoroughly with solvent.
- Place Mr. Gasket Blue Thread Locking Compound #78091G on all threads of adapter and screw the 13/16-16 fitting in by hand.
- Install gasket in block cavity groove being sure that it is not twisted.
- Place rubber washer on adapter as shown. Position bypass plate on adapter, align holes, and then bolt assembly to block. Be sure to use Mr. Gasket Blue Thread Locking Compound #78091G on these mounting bolts also.

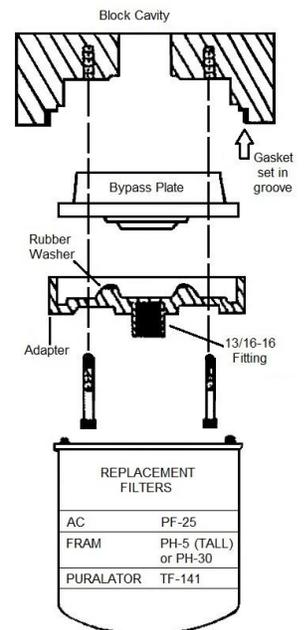

**199R11376
Date: 7-19-17**