

DMCK054


Parts List:

5	3/8-15x1.5 bolts	10	3/8 flat washers
1	3/8-16x2 bolt	4	3/8 lock washer
1	3/8-15x2.5 bolt	1	3/8 thick washer
1	3/8-16 locknut	2	3/8 spacers
4	3/8-16 nuts	1	rubber boot
1	3/8-24 nut	1	3/8 female hiem joint
1	3/8-24x3.75 pedal rod	1	adapter bracket



Instructions:

1. Remove your original master cylinder and pedal rod.
2. The new master cylinder adapter mounts in the same holes that your original master cylinder used. Line up the holes on your master cylinder adapter and bolt in place. Install using the supplied 3/8"-16x1.25 bolts.
3. Install your new master cylinder and proportioning valve. When attaching the hiem use the appropriate spacer that keeps the push rod lined up straight into the master cylinder.
4. Adjust pedal rod and hiem joint so it doesn't pre load the master cylinder with the pedal in the full up position. Make sure the master cylinder being used has a deep hole (approximately 1") were the push rod installs or retain a pedal return spring that holds the pedal in the "up" position. After final adjustments are made be sure to tighten the jam nut firmly against the hiem joint to prevent the rod from working loose.

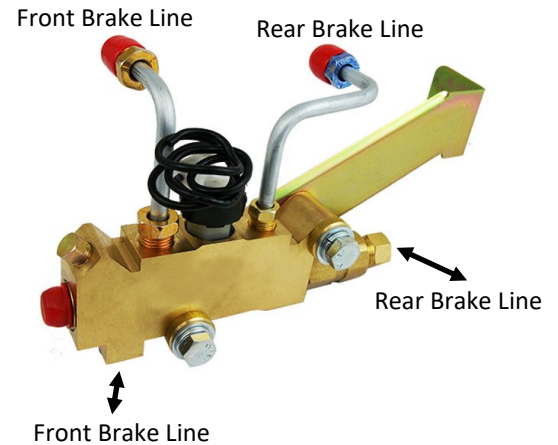

Brothers Install Youtube Link:

https://www.youtube.com/watch?v=_eyhUseqNq8

