

#TL100180

# CI100020-E

APR TSI Intake Adapter

INSTALLATION MANUAL

**APR**






---

Notes:

These instructions were written for mounting CI100035 or CI100039 to a TSI car, which does not have a Mass Air Flow (MAF) sensor from the factory.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommend that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.

These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.

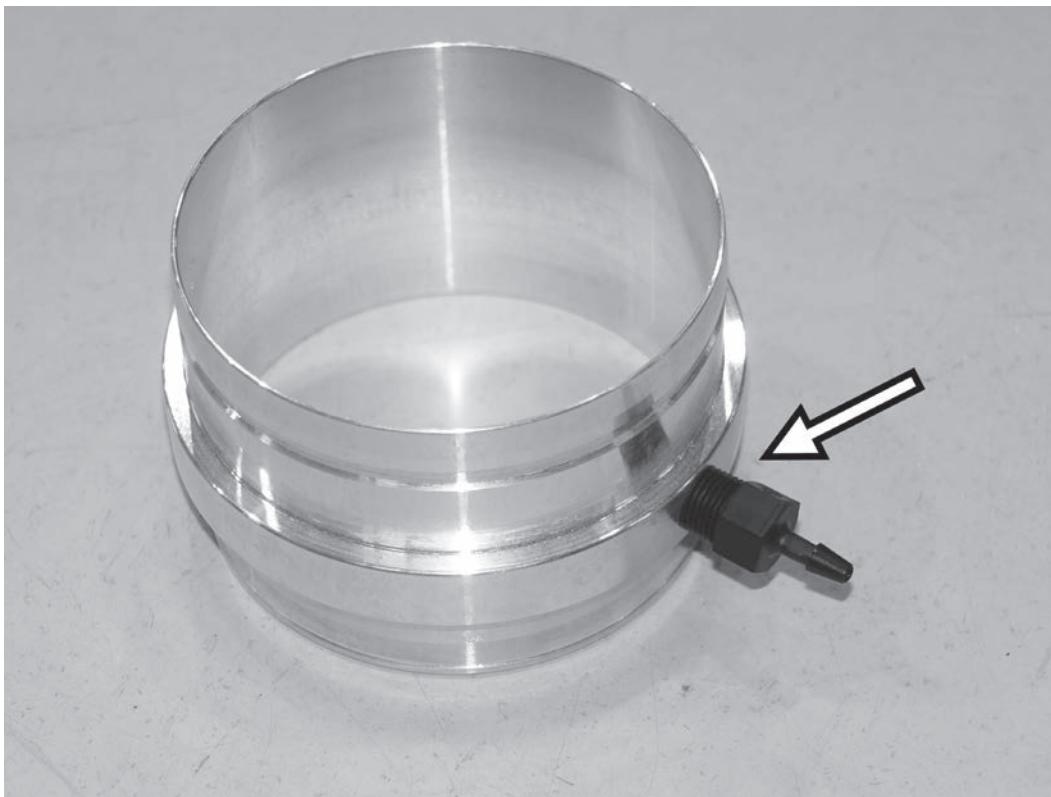

1) Securely screw the vacuum fitting into the side of the APR TSI inlet adapter.

---

**APR**

---

2) Attach the vacuum line to the vacuum fitting on the inlet adapter. Mount the inlet adapter to the back of either CI100035 or CI100039 with the silicone coupler and hose clamps supplied with the intake.

Be sure to connect the vacuum line to the the car when mounting the intake assembly.



**TL100180**

---

3) Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.

4800 US HWY 280 W. OPELIKA, AL 36801

**APR**

AIR INTAKE SYSTEM

CARB

**D-783-2**

---

**APR**

---

---

TL100180

#TL100180

***GO APR.com***