

#TL100174

CI100037-A

APR Carbon Fiber Inlet Pipe – B8 / B8.5 3.0T

INSTALLATION MANUAL

APR



Notes:

These instructions were written for a North American-specification B8 S4. Other vehicles, like the B8.5 S4 and S5's, are similar.


When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommended that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the driver's seat of the car.

These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.



1) Raise the hood on the car, and then loosen the hose clamp on the back side of the accordian intake tube at the throttle body. Disconnect the vacuum line from the back of the intake tube by the throttle body.

2) Loosen the hose clamp on the accordian tube at the APR intake heat shield. Detach the rubber hose that is clipped on the side of the accordian tube. Carefully twist and remove the stock inlet tube assembly out of the car, disconnecting it from the back of the APR airbox and from the throttle body inlet.

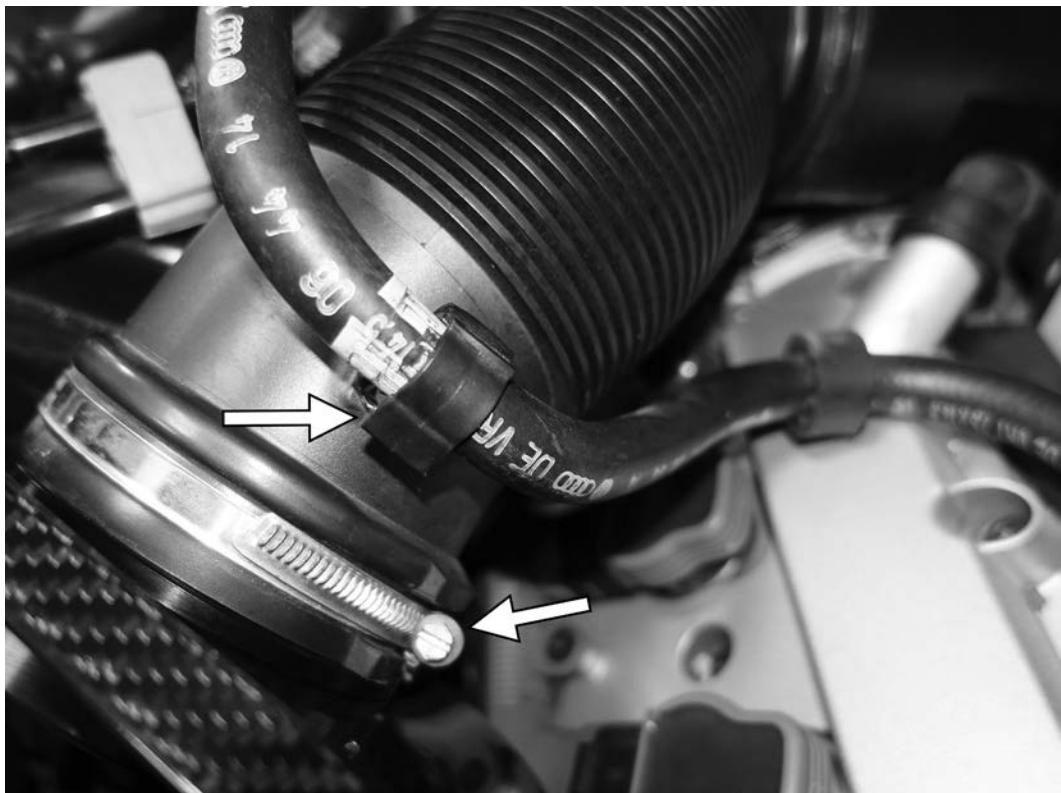

TL100174



3) Loosely build the shown assembly with the four hose clamps, two couplers, and APR inlet tube. After peeling off the adhesive backing, attach the APR logo in the indented location on the inlet tube.

APR

4) Install the APR inlet hose assembly on the car, connecting to the throttle body inlet and to the back of the airbox. Make sure the hose that was connected to the top of the factory inlet is on top of the APR inlet assembly. Reconnect the vacuum line to the the port on the APR inlet tube. Position and tighten all four hose clamps to 1.2Nm (18in-lbs).



TL100174

4800 US HWY 280 W. OPELIKA, AL 36801

APR

AIR INTAKE SYSTEM

CARB

D-783-2

5) Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.

APR

#TL100174

GO APR.com