

#TL100155

EM100050

APR Throttle Booster

INSTALLATION MANUAL

APR



Notes:

These instructions were written for a North American specification Mk7 VW GTI, but other models are similar.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommended that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.


These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.




1) Pry open the back of the APR wireless switch. Install the three supplied button batteries.

APR

2) Connect the wiring harnesses to the throttle booster module. The white harness goes in the white connector, and the black harness goes into the black connector on the module.

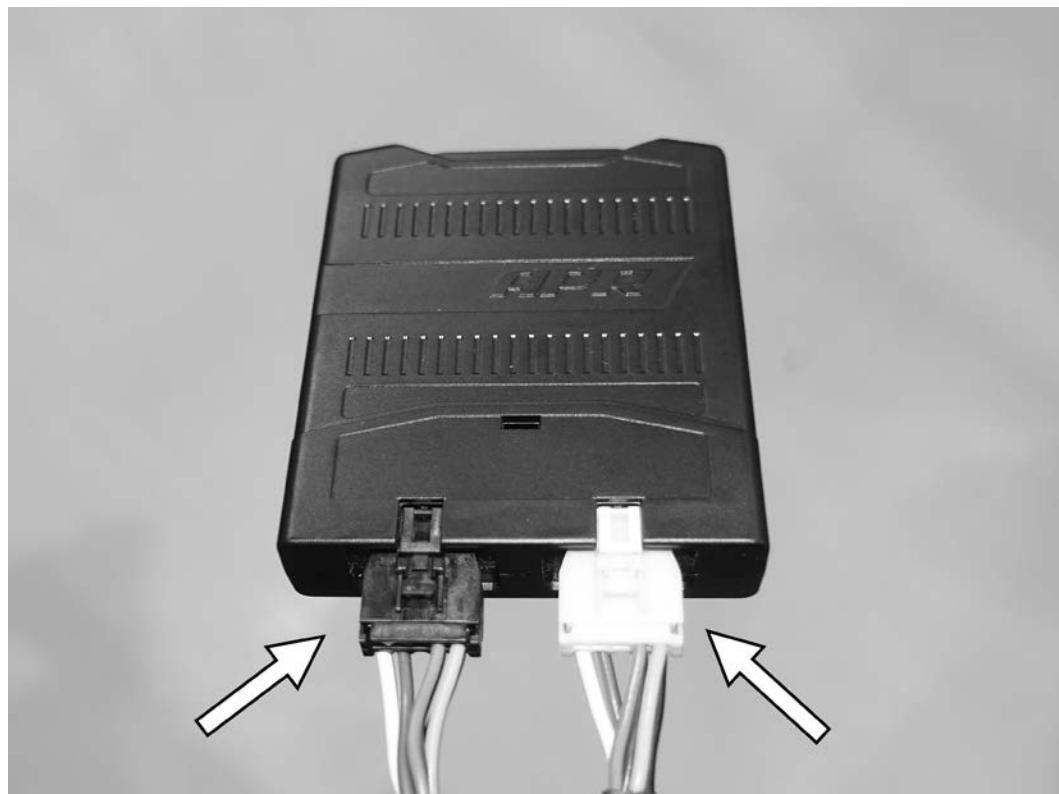


TL100155

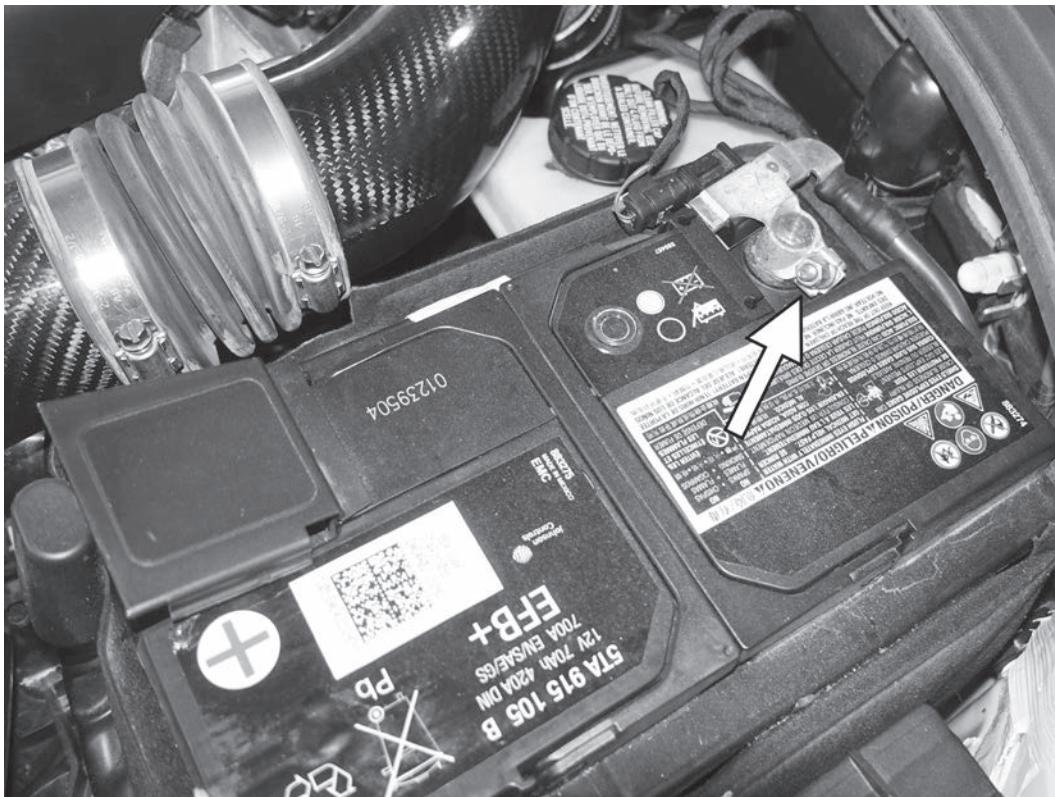

3) Disconnect the negative battery terminal with a 10MM wrench.

4) Remove the T25 screw from the center console cover, near the throttle pedal.

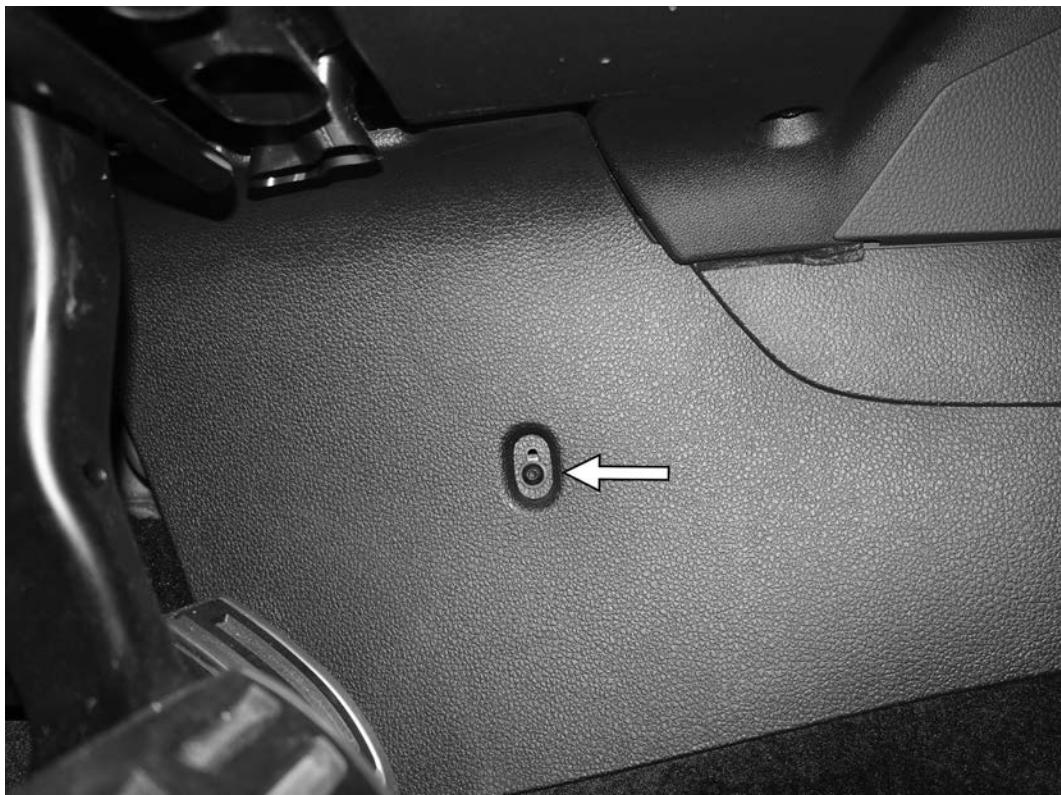

TL100155




5) Pull the panel down and away to remove it from the car.

6) Mount the throttle booster module with the supplied cable ties to the center console bracket, in front of the heater core. Make sure there is ample space between the module and the heater core.




TL100155

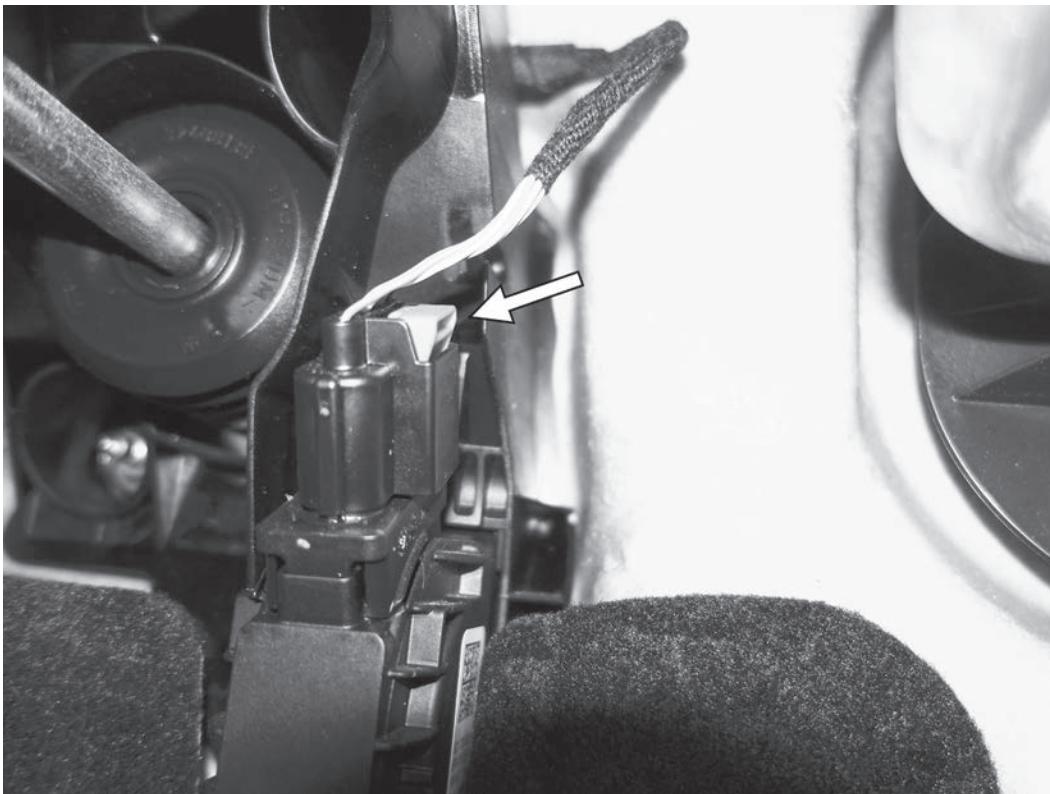


7) On the top of the throttle pedal assembly, disconnect the electrical connector to the throttle pedal. Pull the red tab up and away from the connector before squeezing the red tab to release the connector.

8) Plug the matching connector from the APR throttle control module into the matching connector on the factory wiring harness. Then, plug the other connector from the APR module into the top of the throttle pedal.

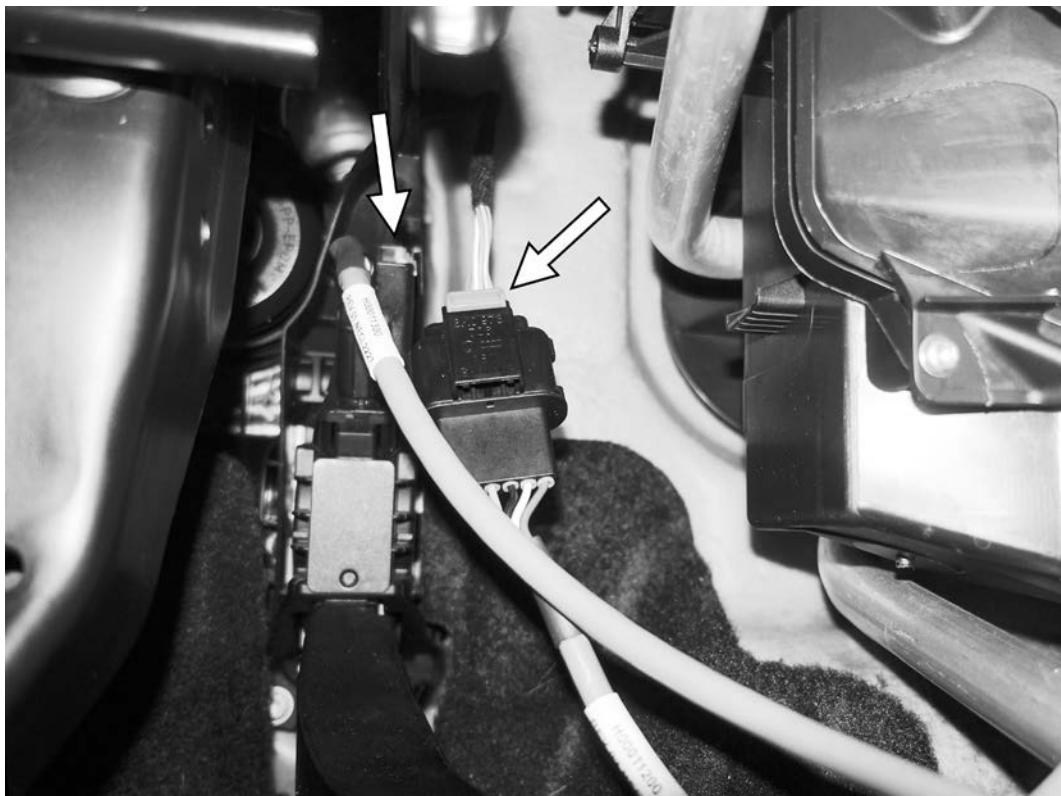


TL100155

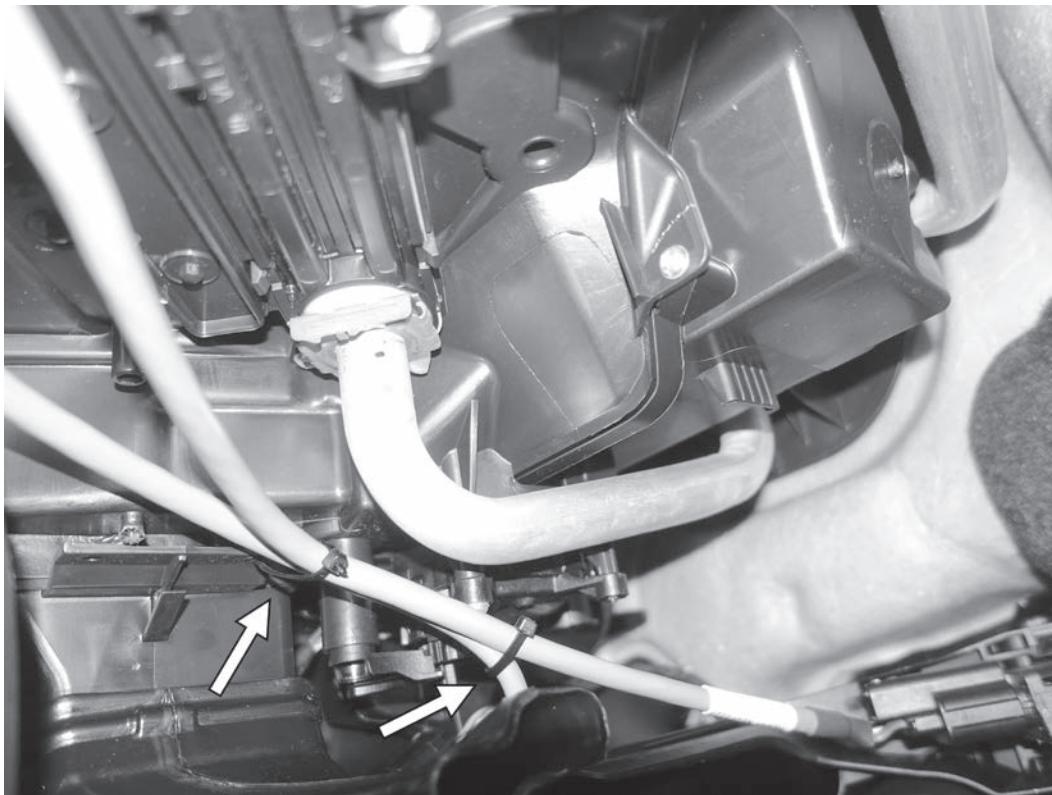


9) Use the remaining cable ties to secure the two cables out of the way.

10) Reinstall the side panel to the center console. Secure the side panel with the original T25 screw.

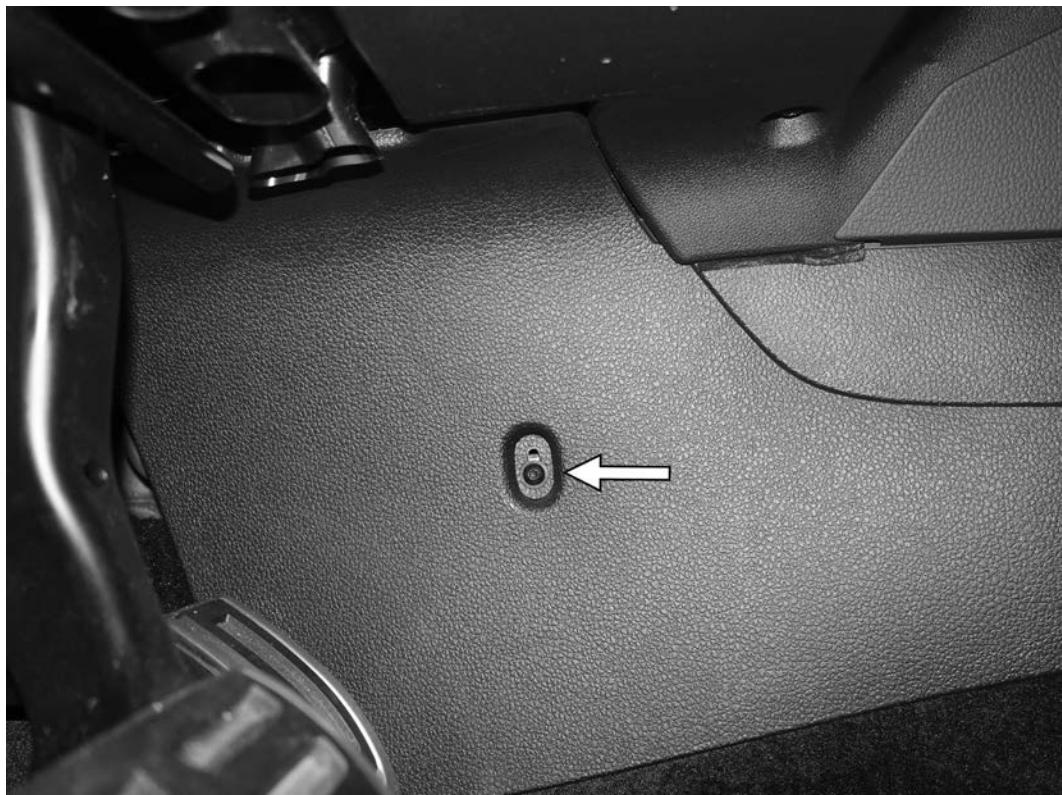

TL100155

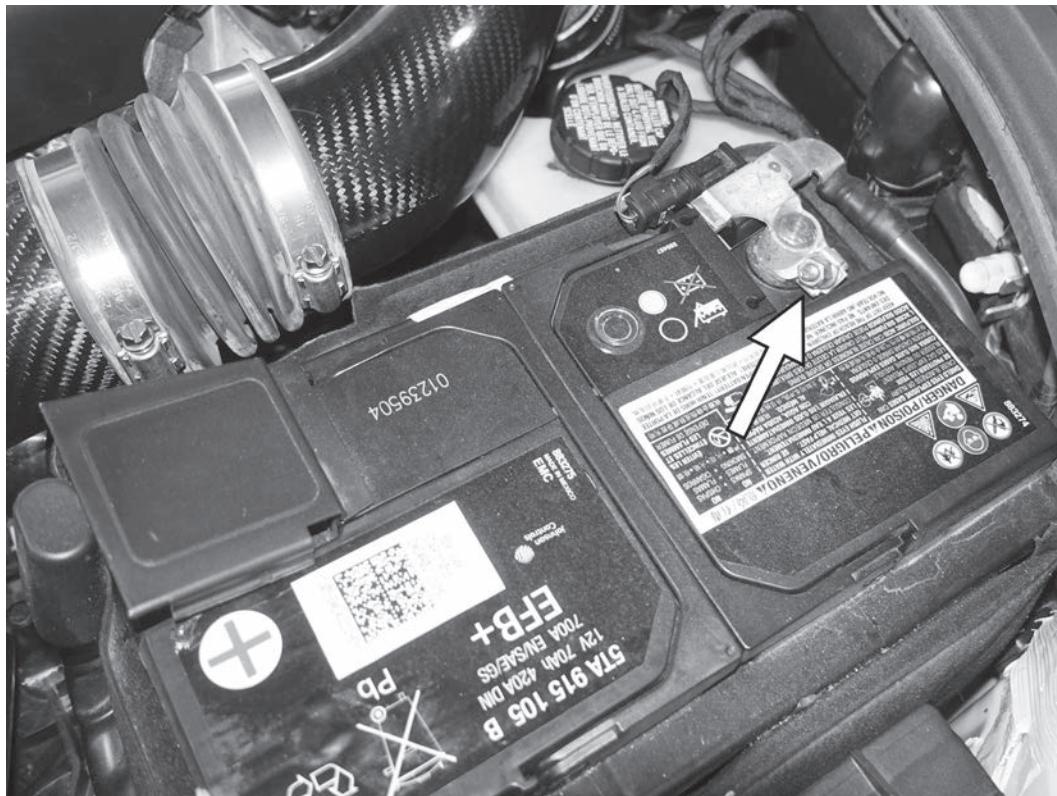

11) Reconnect the negative battery terminal. with a 10MM wrench.

APR

TL100155

#TL100155

GO APR.com