

#TL100179

INSTALLATION MANUAL

# CI100020-D

APR Adapter Bracket for TT

**APR**





---

## Notes:

These instructions were written for any mounting CI100035 or CI100039 onto an Audi TT.

When disassembling the car, be sure to keep all fasteners so they can be reused. It is recommend that you get some kind of compartmented tray to organize the fasteners, such as a fishing tackle box or several large ice cube trays. Fasteners that are not reused for reinstallation are noted in the instructions. All directions used in this manual (right, left, front, etc.) are based on if you were sitting in the drivers seat of the car.


These instructions assume that you have basic mechanical skills and several varieties of basic hand tools in order to install the kit. If you have any questions about the install, feel free to contact your APR representative.



WWW.GOAPR.COM

4800 US HWY 280 West Opelika Alabama 36801

**TL100179**

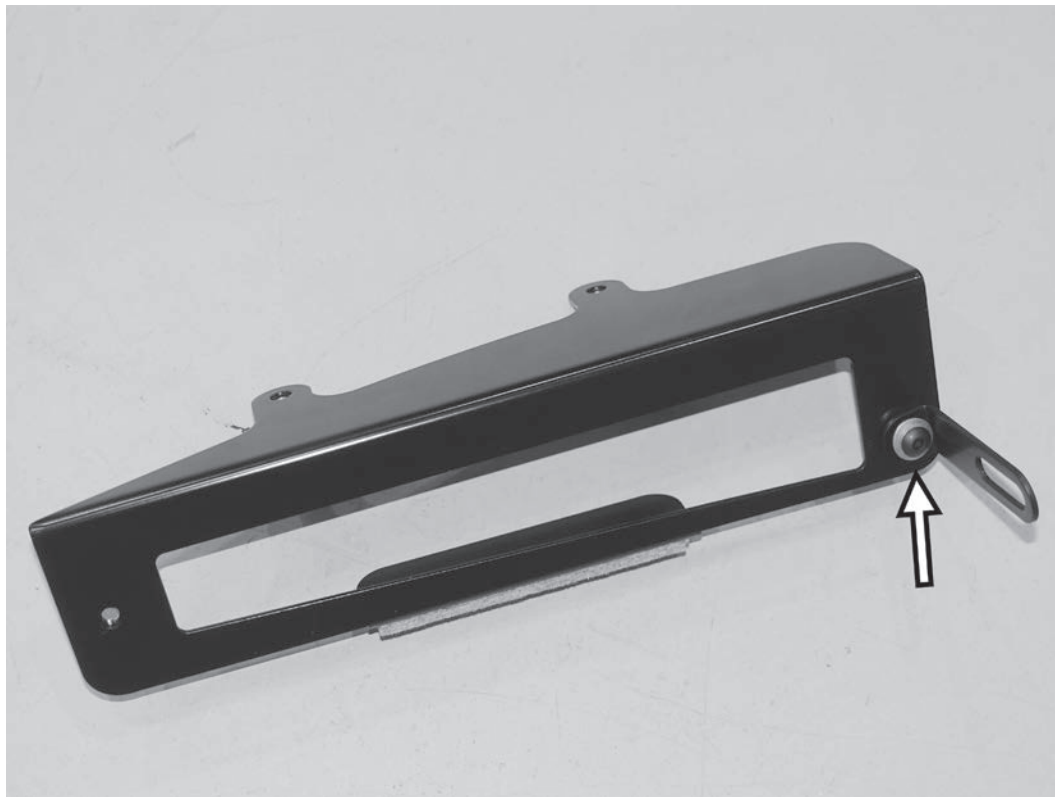

1) Mount the “L” bracket included in CI100035 or CI100039 to the side of the CI100020-D bracket as shown, using one of the 3MM allen screws and rubber washer included with CI100020-D.

2) Connect the other side of the “L” bracket assembly to CI100035 or CI100039 as shown with the two 3MM allen screws and washers included with the intake kit.

When mounting the intake in the car, use the two supplied T30 screws to connect the top of CI100020-D to the top of the radiator core support.





3) Once the APR intake is installed, be sure to clean a visible location under the hood and affix the supplied sticker in order to aid inspection of the vehicle under the California Smog Check program.



#TL100179

***GOAPR.COM***