



1979-1993 Ford Mustang Coyote Swap Exhaust Installation Instructions



**Thank you for your purchase, we appreciate your business.
If additional assistance is needed, please contact Kooks Headers and Exhaust
Toll free at 1-866-586-KOOK or contact your local dealer.**




System Layout

TOP VIEW

Components to ship with:

- (1) BK101 - 2015+ Header Bolt kit
- (1) BK105 - 2011-2014 Header Bolt kit
- (10) RK-TAS300 - 3" Band Clamp
- (1) 755392 - Cometic MLS Header Gasket

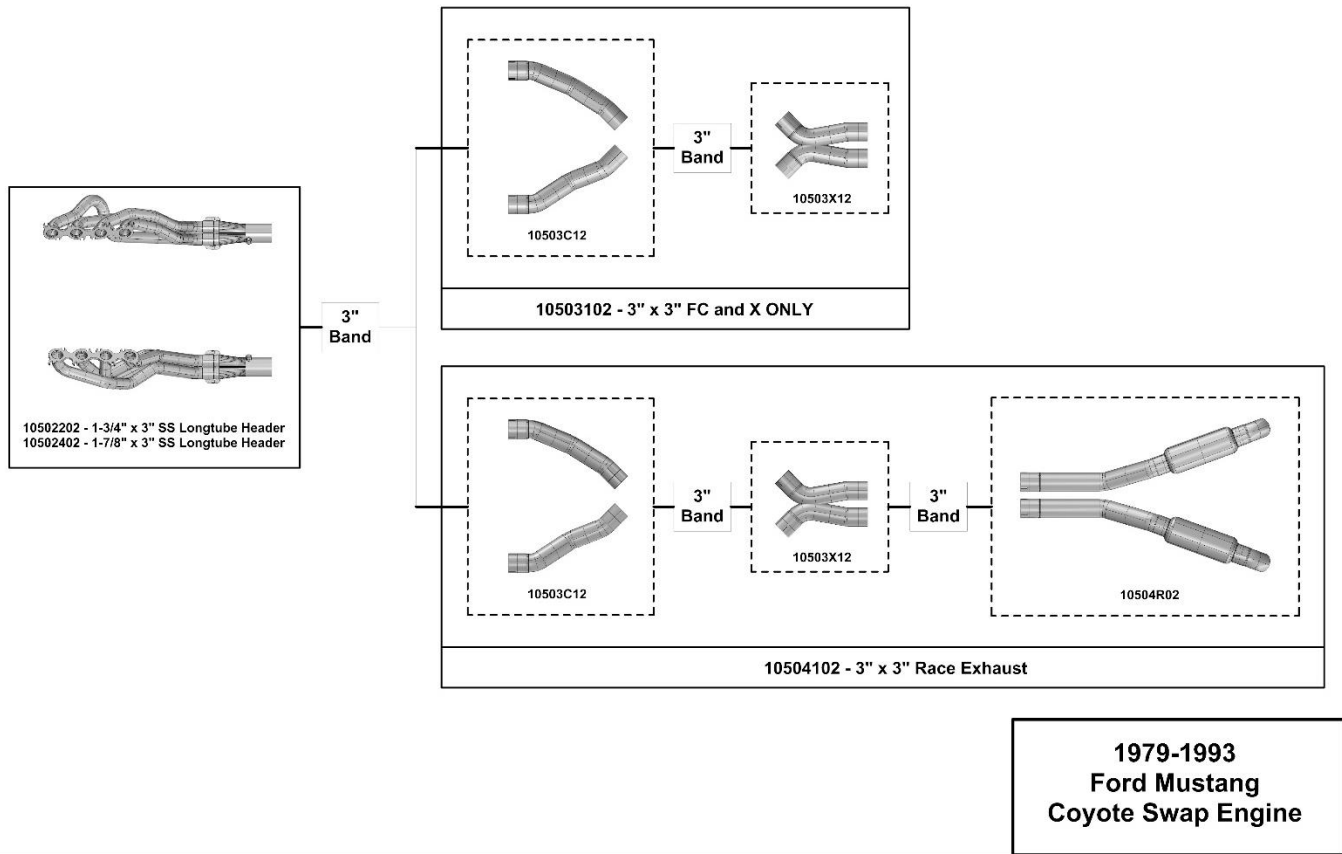

Do not attempt this installation if proper safety equipment is not available to you - seek the assistance of a professional installer

Read and understand all instructions before beginning



Vehicle Preparation

****Raise and Support Vehicle (Refer to Owner's Manual for specified jacking points) ****

Always disconnect the battery before performing this type of work on any vehicle

2 Post Lift Recommended

KOOKS Headers and Exhaust Installation

- Clean all gasket sealing surfaces prior to installation of headers
- Install new HEADER GASKETS
- Remove STEERING SHAFT if installed
- Remove STARTER if installed
- Loosen engine mounts from K-member
- Lift engine as needed to allow installation of headers
- Install HEADERS ****BOTH INSTALL FROM UNDERNEATH VEHICLE****
- Front most tube on passenger side is a two-piece design
 - o Remove collector
 - o Install head half of tube first
 - o Install collector half of tube second
 - o Align mounting tabs for tube
 - o Tighten bolt between both tabs to secure tube
 - o Install collector
- Rear most tube on driver side installs separate from other three banked tubes
 - o Remove collector
 - o Install banked tubes first
 - o Install rear most tube second
 - o Install collector
- Tighten HEADER BOLTS to OEM torque specs using supplied hardware
 - o 2011-2014 Coyote engines use bolt kit BK112
 - o 2015+ Coyote engines use bolt kit BK109
- Install OXYGEN SENSORS if applicable
- Re-Install STEERING SHAFT

HEADERS ONLY STOP HERE

- Install FRONT CONNECTIONS using supplied band clamps
- Install X-PIPE using supplied band clamps
- Install REAR CONNECTIONS using supplied band clamps
- Install TURNOUTS using supplied band clamps
- Clean all fingerprints/oil/grease from exhaust prior to starting engine
- Start engine and check for exhaust leaks (tighten clamps as needed)
- Allow engine to complete one full heat cycle (heat to operating temp, cool to ambient temp)
- Re-torque all connections

****Because of the CUSTOM nature of these parts,
CUSTOMER assumes all responsibility of HANGING EXHAUST upon purchase****



**Thank you for your purchase, we appreciate your business.
If additional assistance is needed, please contact Kooks Headers and Exhaust
Toll free at 1-866-586-KOOK or contact your local dealer.**