

Installation Instructions
2010-15 Chevrolet Camaro 6.2L
Super Street Headers #22501300




Thank you for your purchase, we appreciate your business.
If additional assistance is needed, please contact Kooks Headers and Exhaust
Toll free at 1-866-586-KOOK or contact your local dealer.


- System Layout -

Components to Ship With-

- 1) PY-8024-AL
- 1) SB-B60029
- 1) SB-B60074

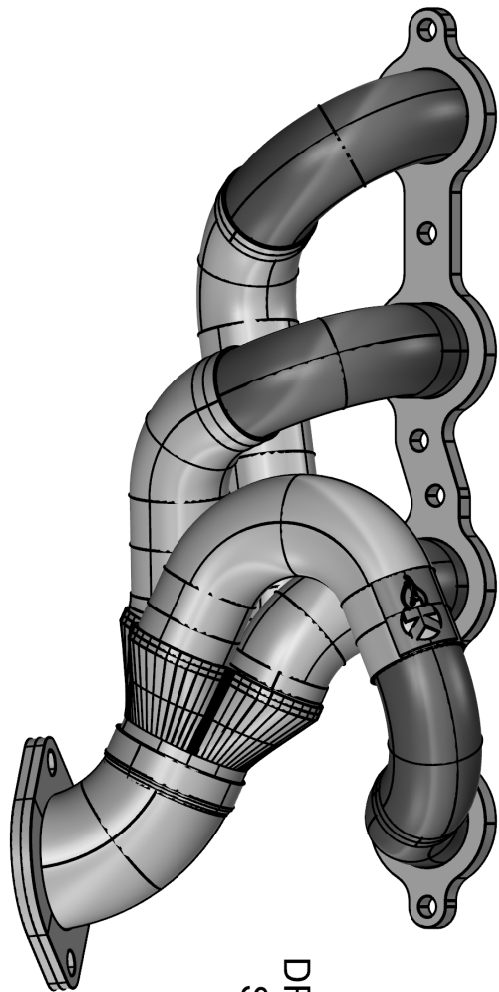

DRIVER
SIDE

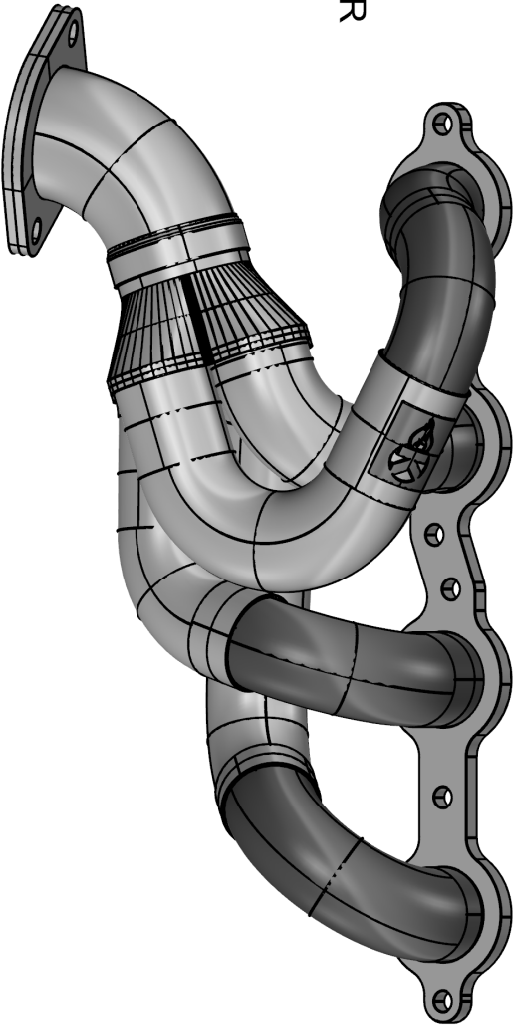


PASSENGER
SIDE

22501300

1 3/4" x 1 7/8" Super
Street Series Header

2010 - 2015 Camaro 6.2L

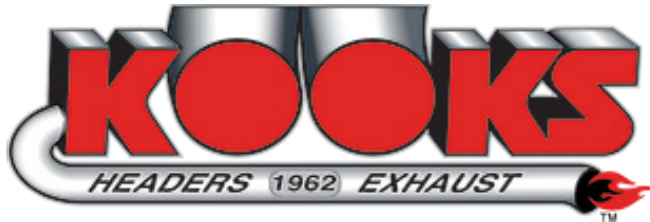

Do not attempt this installation if proper safety equipment is not available to you - seek the assistance of a professional installer

Read and understand all instructions before beginning

Vehicle Preparation


****Raise and Support Vehicle when required (Refer to Owner's Manual for specified jacking points) ****

Always disconnect the battery before performing this type of work on any vehicle

2 Post Lift Recommended

KOOKS Installation (OEM parts removal)

- **From engine bay:**
- Remove airbox and adjoining tubes.
- Remove oil cap to remove plastic engine cover, then re-install oil cap.
- Remove spark plug wires, coils, and spark plugs.
- Remove dipstick and dipstick tube.
- Unplug the oxygen sensors at the back of the engine.
- Remove nuts holding stock manifolds in place. Leave 2 outermost nuts loose but, on.
- Raise and Support Vehicle
- **From underside:**
- Loosen the clamps on the rear of catted pipes and unplug oxygen sensors at the transmission.
- Remove the flanged nuts at the collectors of the stock manifolds.
- Remove the last loosened bolts from the passenger side manifold and remove from bottom.
- Remove the last loosened bolts from the driver side manifold and remove from top side.
- Remove stock gaskets and clean mating surfaces well.
- Place Steering wheel in straight locked position and wrap seatbelt through to ensure it does not move. Remove the bolt on the steering u-joint at the rack and pinion shaft. Slide shaft up and out of the way.

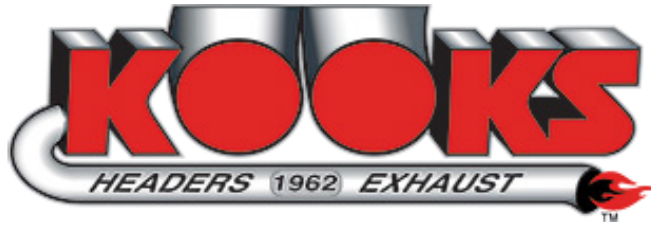

KOOKS - Super Street Headers Installation

- **Passenger Side**

- Put Header and gasket in from bottom side.
- Connect OEM Catted pipe to collector outlet of header.
- Re-install Spark plugs, Spark plug wires and coil covers.

- **Drivers Side**

- Put Header and gasket in from Top side.
- Re-install steering shaft and u-joint bolt.
- Re-install all 4 oxygen sensors and connect them.
- Re-install dipstick tube and dipstick.
- Connect OEM Catted pipe to collector outlet of header.
- Re-install Spark plugs, Spark plug wires and coil covers.
- Torque everything.
- Re-install air box, engine cover and other related components.
- Re-connect battery.

----- **Start engine and heat cycle** -----

- Re-torque all fasteners.

Installation Complete - Enjoy!

**Thank you for your purchase, we appreciate your business.
If additional assistance is needed, please contact Kooks Headers and Exhaust
Toll free at 1-866-586-KOOK or contact your local dealer.**