

Instructions Body Mount Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

Rusty bolts may require lubricant prior to loosening.

Loosen all bolts but only remove/service one side at a time.

Only lift body enough to remove old bushings.
Use a jack with timber to ensure no damage to body.

Be mindful of fan shrouds and brake lines when lifting body.

Refer position information and location below.
Re-use any existing shims.

Tighten bolts to manufacturers spec - re-check after initial 500kms after settle period

Application -


- Chev Chevelle 1965-1967
- Chev El Camino 1965-1967
- Excluding Convertibles
- (Refer current catalogue listing)*

Contents -

- Bushing 90671 x 10
- Bushing 90672 x 12
- Bushing 90673 x 2
- Bushing 90674 x 2
- Bushing 90675 x 2
- Tube 14mm ID x 12
- Tube 18mm ID x 2
- Washer 13mm ID x 26
- Washer 19mm ID x 2

Position #1	Position #3	Position #2/4/5/6/7
Washer 13mm ID	Vehicle Body	Vehicle Body
Bushing 90672	Washer 19mm ID	Washer 13mm ID
Vehicle Body	Bushing 90674	Bushing 90671
Bushing 90673	Chassis	Chassis
Washer 13mm ID	Bushing 90675	Bushing 90672
Chassis	Washer 13mm ID	Washer 13mm ID
Tube 14mm ID	Tube 18mm ID	Tube 14mm ID

Use original nuts and bolts in all positions.
For positions 2 to 7 - use original upper washer above body.

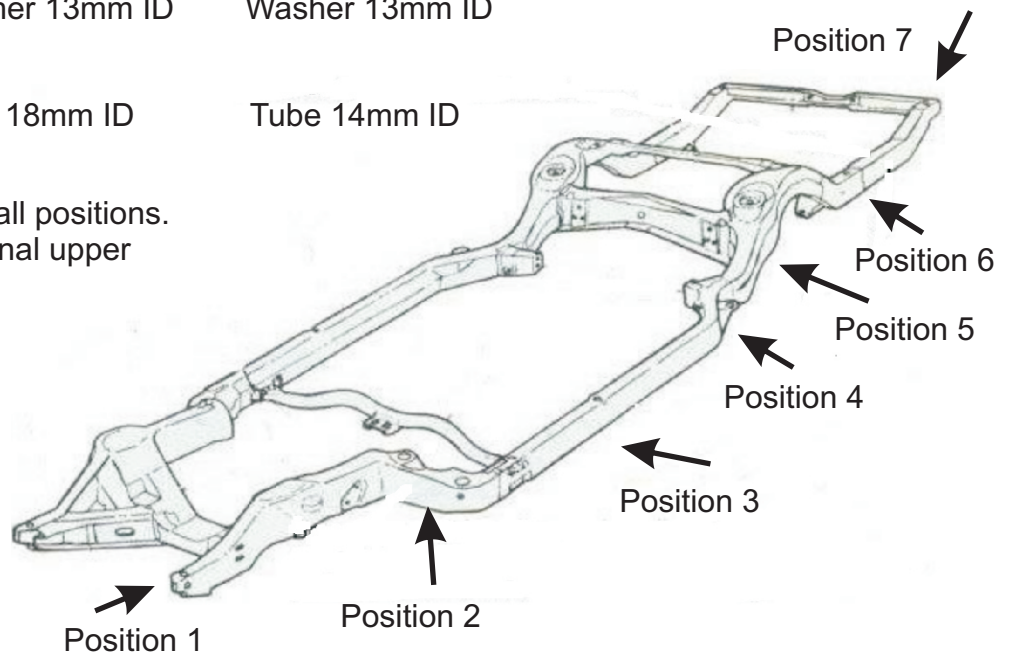

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.