


# Instructions Diff Bushing

Application: Nissan 240Z

**N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.**

Note: Do not remove original outer steel shell from mustache brace.

1. Raise vehicle evenly and safely support.
2. Support the differential and proceed to remove the 'mustache' from the vehicle.
3. The rubber needs to be removed from the steel outer shell - this can be done by heating up the rubber until bond is broken.
4. Be sure shell is free of any excess rubber or dirt.
5. Grease supplied bushing ID and face.
6. Use supplied washers for bushing flange protection.
7. Tighten all bolts to manufacturers specification.

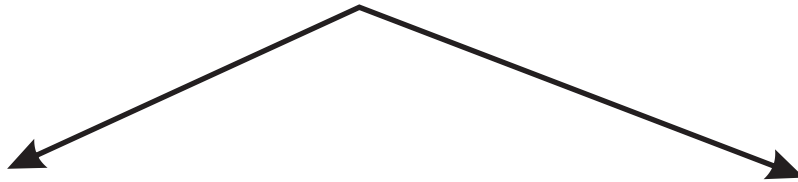

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.