

# Instructions

## Front Coil Spring Spacer - Levelling Kit

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Raise vehicle evenly and safely support.

*Never rely on a Jack only*

- Start by loosening and removing lower shock bolts - you may want to place a Jack under the Axle to support.

- The Coil spring can now be removed - un-bolt upper and lower steel clamps.

Note - supplied threaded spacer - screw this onto the existing stud on spring platform. Tighten to 75 ft-lbs.

- Place Spring pad on platform. Re-fit Coil Spring. Bolt up original lower spring clamp to new threaded spacer.


- You may have to lower vehicle on its wheels to bolt up lower shock bolts.

- A wheel alignment after install is recommended.

**Application** - Ford Bronco 4WD  
- Ford F150 4WD  
- 1981-1996

*Always refer complete catalogue listing*

**Contents** - Spring Pad 91941 x2  
- Steel threaded spacer x2

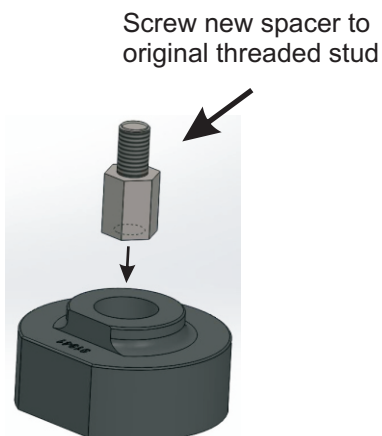

Spring spacer installed - note flat section face forwards

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.