

Instructions


Vertical Mount Beam Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.


Application - BMW E30

(Refer current catalogue for complete listing)


Contents - 2x Bushing 91234
 - 2x bushing 91235
 - 2x steel tubes
 - Grease

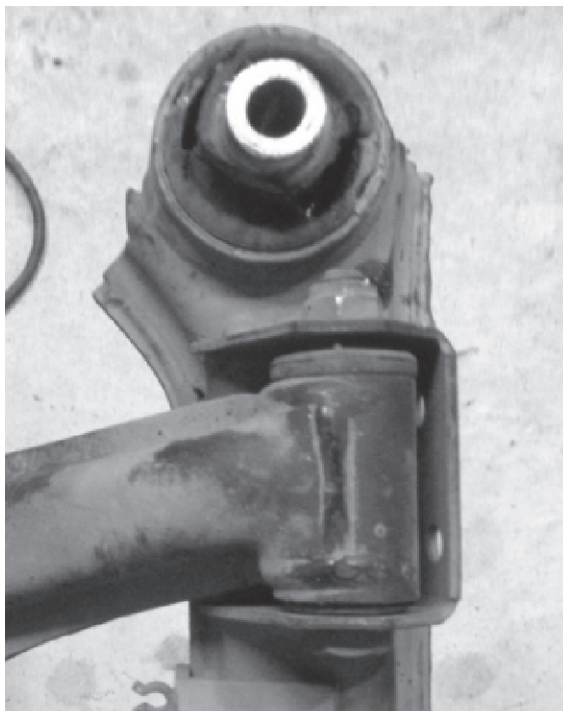

- Raise vehicle evenly and safely support.
Never rely on a Jack only
- Un-bolt and lower Beam - careful of brake lines.
- The bushings can be removed in vehicle - the bushing can be 'pulled' downwards with a threaded mechanical Puller OR use a Air-hacksaw to cut a slit in bushing.
- Once removed, clean Eye of any dirt or rubber.
- Push in large bushing 91234 from the bottom.
- Push small bushing 91235 over the top - refer image below.

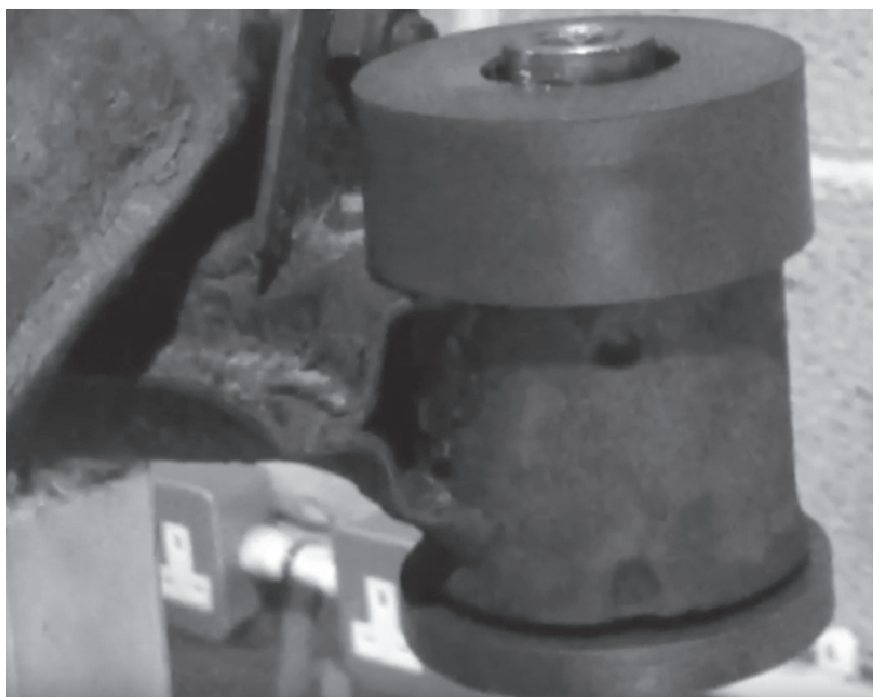

- Grease bushing ID and face with supplied grease only.
- Re-fit Beam to vehicle.
- Road test and re-check all bolts.
- A wheel alignment is recommended.

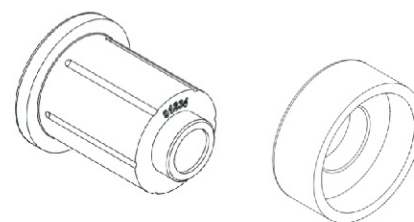

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.