


Instructions

Front Swaybar Kit

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Use plates to lower swaybar

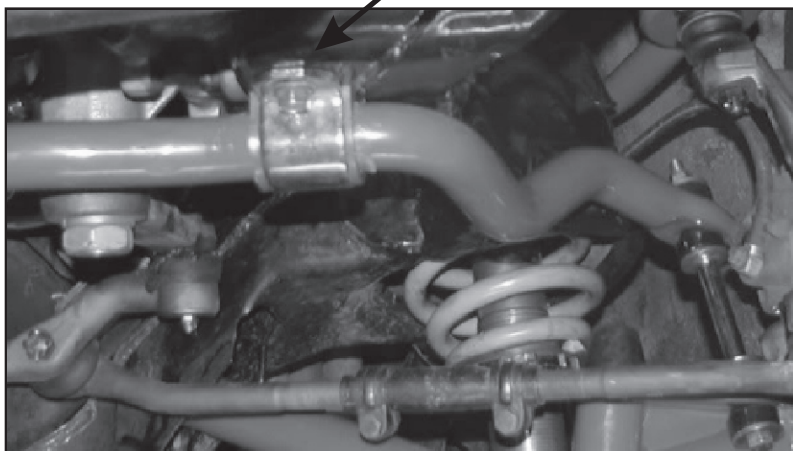

Application:

Chevrolet:
Chevelle 68-72
El Camino
Monte Carlo 70-77

Kit Contents:

1x Swaybar
4x Flat plates
2x Saddles
2x D bushings
2x Link bolts
2x Link Spacer tubes
8x Cupped washers
2x Nyloc nuts
4x Flat washers
8x Link bushings
4X Metric bolts
4x 5/16 bolts
1x Grease

1. Raise vehicle evenly and safely support.
2. Grease and position D bushings on swaybar.
3. Place saddles over bushing and mount sway bar to vehicle - use 4 flat plates to lower sway bar.

Confirm swaybar is central. Use supplied bolts but do not tighten yet.

4. Assemble swaybar link bolts to control arm initially, using supplied bushings and cupped washers - position cupped washers so they face away from bushing. Use supplied link spacer tubes also.
5. Proceed to assemble swaybar link to swaybar - position cup washers on link bushing so they face away from bushing.

Confirm link is near perpendicular to swaybar at ride height. Also confirm no clearance issues.. Tighten link nyloc nuts.

NOTE - do not over tighten link bushings.

6. Road test and re-check all nuts bolts.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.