

Installation Guide


Shock bush lower

Z 5057

Suits: Toyota Landcruiser 120 Series

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

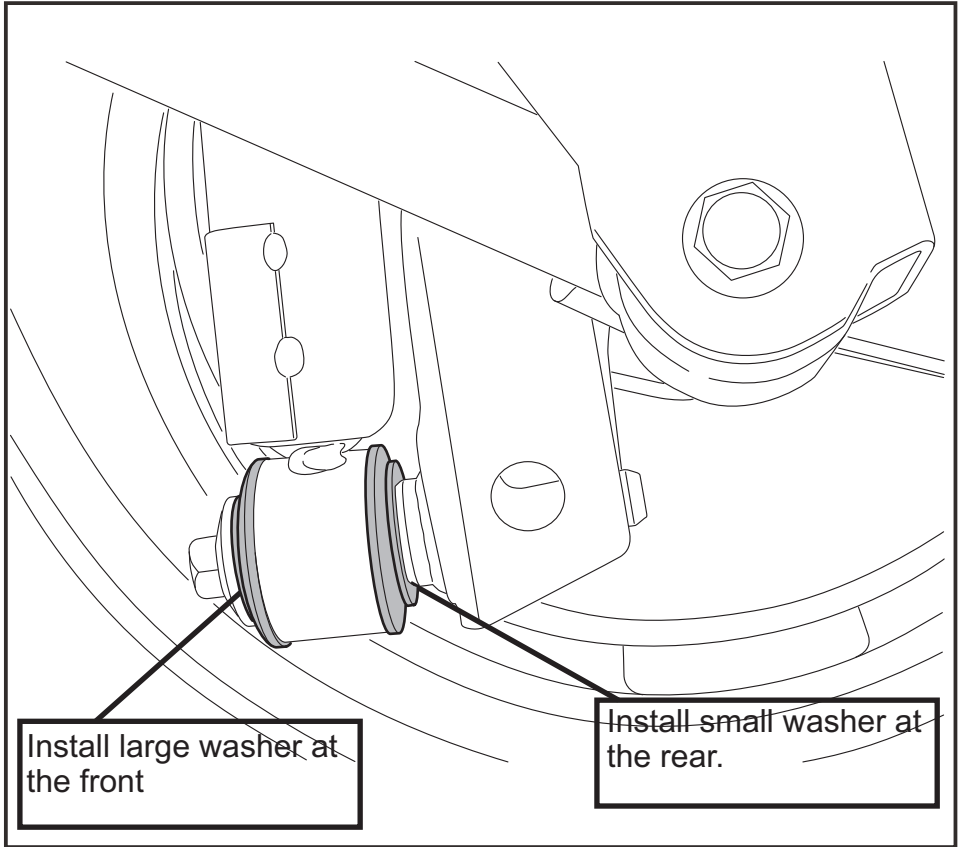

Contents:

- 4 x 67062 bushes
- 2 x tubes
- 2 x small washers
- 2 x large washers
- 1 x grease satchet

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.