



Instructions

Rear Sub-Frame Front Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

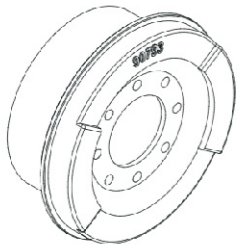

Upper bushing

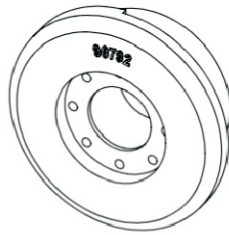

Lower Bushing

Application - BMW E46
- Z4

Contents - 2x Upper bushings 90792
- 2x Lower bushings 90793
- 2x steel tubes
- Grease

- Original bushings can be pulled out. Or cut out. Drill a hole between inner and outer sleeves (near welded side of sub-frame).
- Confirm Original bushing including outer shell has been removed - remove image below.
- Push in supplied upper bushing **90792** into Sub-frame Eye.
- Followed by lower bushing **90793**.
- Grease bushing ID and face with supplied grease only. Push in supplied tube.

- Re-fit Sub-frame to vehicle using original bolts and washers.
- Tighten bolts to manufacturers spec - re-check after 100kms travelled.

Remove original bushing including outer shell



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.