

Instructions

Radiator and Body Mount Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

Rusty bolts may require lubricant prior to loosening.

Loosen all bolts but only remove/service one side at a time.

Only lift body enough to remove old bushings.
Use a jack with timber to ensure no damage to body.

Be mindful of fan shrouds and brake lines when lifting body.

Re-use any existing shims - place back in their original position.
Re-use original washers/sleeves.

Original bolts, nuts and washers to be re-used.

Note bushing position and orientation below.

Tighten bolts to manufacturers spec - re-check after initial 500kms after settle period.

Application - Chev Camaro
- 1967-81
(Refer current catalogue listing)

Contents - Bushing 90742 x 2
Bushing 90743 x 2
Bushing 90744 x 2
Bushing 90745 x 2
Bushing 90746 x 2

Radiator Position

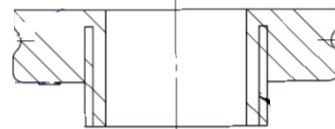
90745



90742



Positions 2 and 3

90746
(pos 2)90743
(pos 3)90744
(pos 2)90744
(pos 3)

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.