

Shifter Base bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Dodge Neon SRT
- 2003-05

Always refer complete catalogue listing


Contents - Bushing 91613 x4
- Bushing 91210 x4

The removal of the centre console is required -

- Start by removing 2 screws inside cup-holders.
- Followed by the 4 screws in rear bin. Lift up Console.

Note - you will have to pop clips around shifter boot.

- Loosen and remove the 4 nuts.

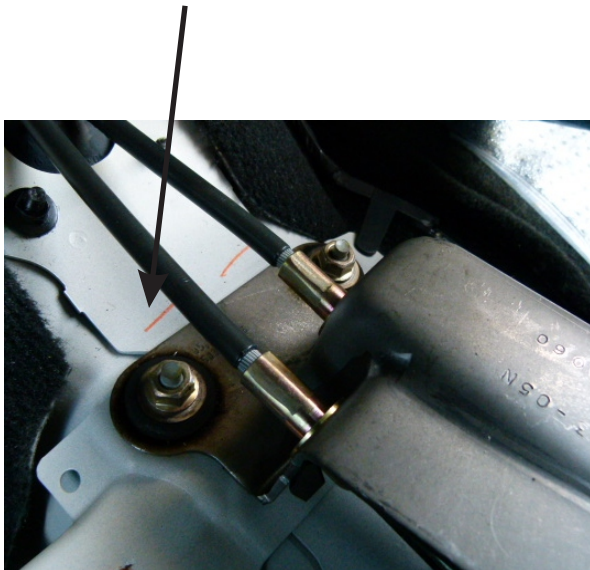

- Pop out the old rubber bushings.
- Place original steel cup inside bushing 91613.
- Place small bushing 91210 on bottom
- Tighten back up with original nuts
- Re-fit console



Lower bushing

Upper bushing



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.