

Instructions

Body Mount Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Ford Truck -
F100 - F150 - F250 - F350

Important notes:

- It is recommended all bolts are lubricated prior to removal.
- Carry out Body mount repair on one side at a time.
- Only lift Body as high as required - careful of fan shrouds in engine bay.
- Note any existing shims - re-use in original position.
- Re-use original hardware.

1. Loosen all body mounting points initially.
2. Proceed to completely remove bolts from one side.
3. Once the bolts are removed, you may find the mount will not separate - using the existing loose bolt, wind this back into the lower nut from the bottom (not top).


Using a Pin Punch, hit the bolt downwards from upper side - this should dis-lodge the lower washer.

4. Once all mounts are separated, slowly lift the body with a Jack and timber.


Refer diagram for bushing position/part number.

5. Re-assemble mounts and start bolts, but do not tighten until all points are replaced.
6. Once all points are replaced, tighten to manufacturers specifications.


Position #1 (front of vehicle)

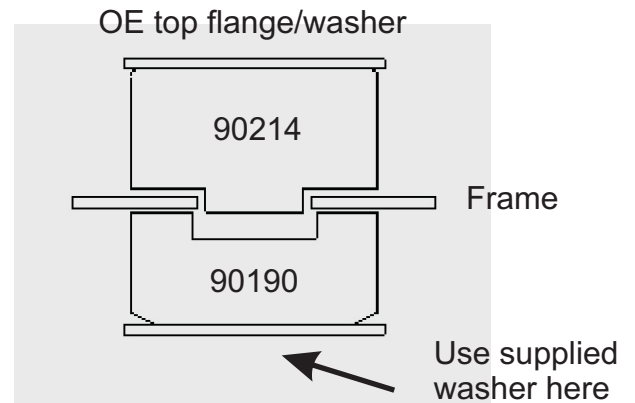

Position #2

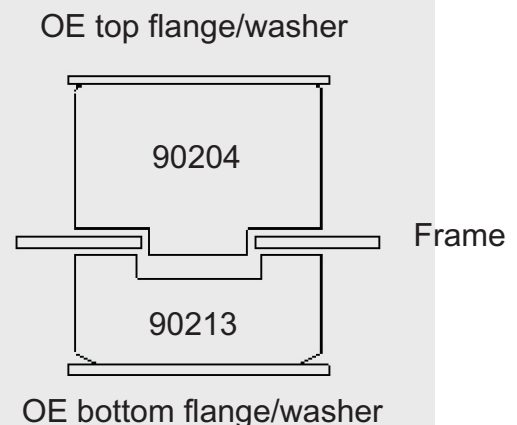

Position #3

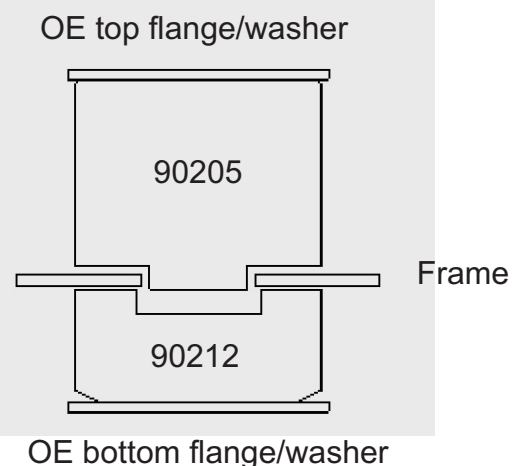

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.