

Motor Mount - Inserts

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Remove only 1 mount at a time. You may need to support engine with Jack and timber.

Application - Dodge Neon
- 1995-1999

Always refer complete catalogue listing

- Start by removing rubber grommets from inside wheel well.


Contents - Insert 91924 x1
- Insert 91925 x1
- Insert 91926 x1
- Insert 91927 x1
- Insert 91928 x2
- Washer 18x5.5x1.5 x6

Note - don't tighten any bolts until all are started.

RIGHT SIDE - remove the major bolt, then 2 smaller bolts - place inserts 91926 and 91927 Refer image below.

LEFT SIDE - Start by un-bolting and removing battery and battery tray, then remove the 3 small bolts holding mount to body.

LOWER FRONT - Remove the lower main bolt and 3 smaller bolts. Place inserts 91928

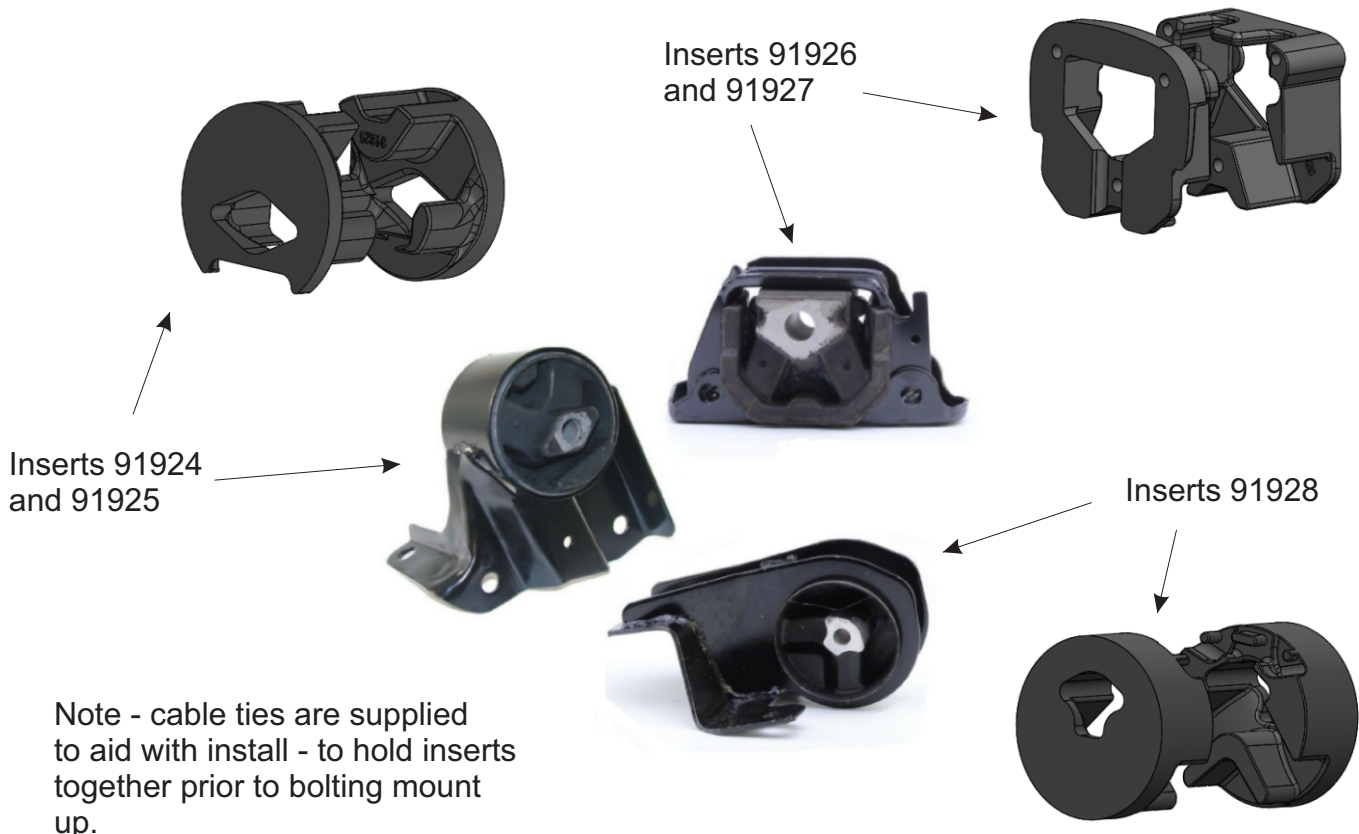

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.