

Instructions

Rear Diff Carrier Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.


Application: Corvette 1984 -1991

1. Raise rear of vehicle evenly and safely support.
2. Remove rear wheels and place Jack under Diff housing.
You may wish to use wood between Diff and Jack.
3. Remove Diff Carrier from vehicle.

The OE bushings have a steel outer shell - these bushings will need to be completely pressed out.
Note the steel flange on one side of these bushings - press from the opposite side.

4. Using a press tool with OD of approx. 54mm, press out original bushings.
5. Once removed, clean eye from any burrs and push new supplied 2-piece bushings in place. No need for grease.
6. Re-fit Carrier with OE bolts - tighten to manufacturers specs.
7. Test drive and re-check bolts after initial 100kms travelled.

Note steel flange on one side

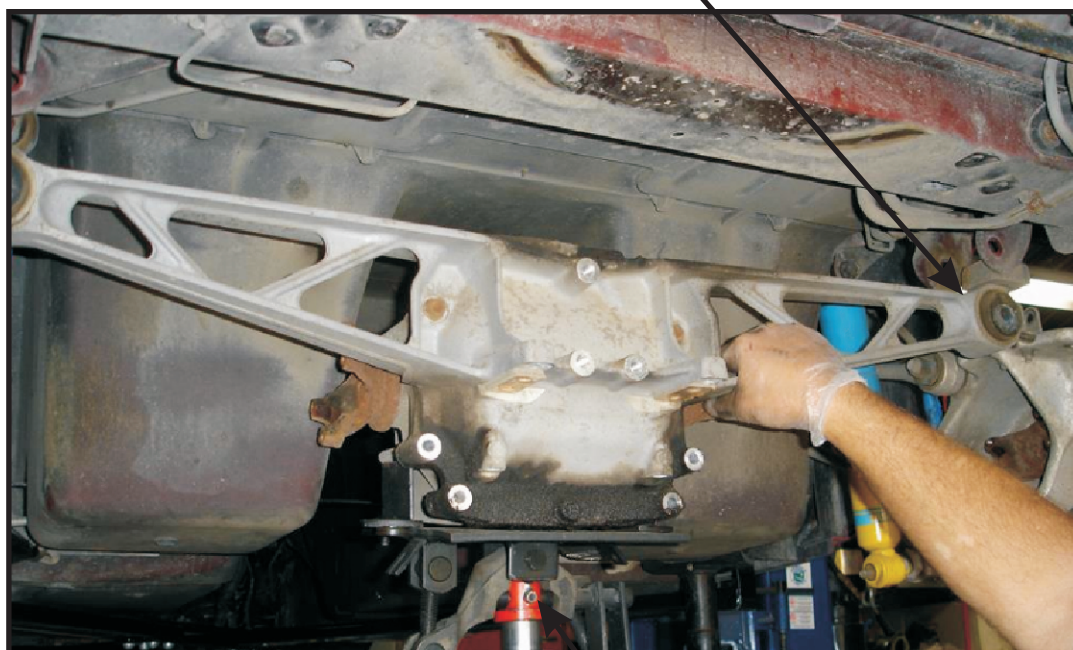

Support Diff housing

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.