

Steering Rack Mount Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Chev Silverado 2WD
- 1999-2006

Always refer complete catalogue listing

Contents - 2x bushing 91944
- 2x steel tubes 25.4x19x58.4
- Grease


- Raise vehicle evenly and safely support with stands.

Never rely on a Jack only.

- In order to remove the original rubber bushings, you can use a threaded puller to remove 'in-car',

Or - completely remove the steering rack from vehicle. Refer workshop manual for proper procedure only.

- Press out old rubber bushings - be careful of the aluminium housing.
- Push in new supplied bushings 91944 (use small amount of supplied grease to help with install)
- Re-fit Rack to vehicle. Tighten bolts to manufactures spec.
- Carry our a wheel alignment.

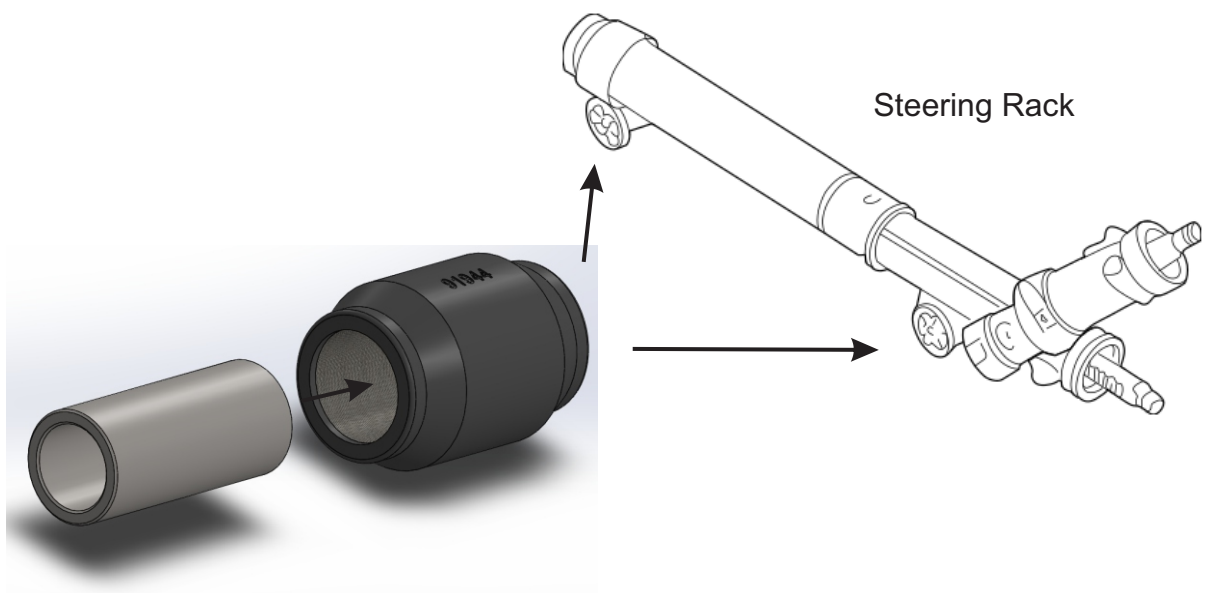

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.