

Instructions

Rear Diff Front Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

- Raise rear of vehicle evenly and safely support.
Never rely on a Jack only.
- Remove old bushings with a mechanical puller.



Or use a Drill and Air-hacksaw to cut a slit in the steel outer shell of original bushing.

The slit should be on outer side.


- Push new supplied bushing into clean Eye Ring.
- Grease bushing ID and face/flange with supplied grease only.
- Push in supplied steel tube, followed by steel washer.
- Re-fit diff to vehicle with original bolts.

Application - BMW E36 - 3 Series
(Refer current catalogue listing)

Contents - 1x bushing 91086
- 1x steel tube
- 1x steel washer
- Grease

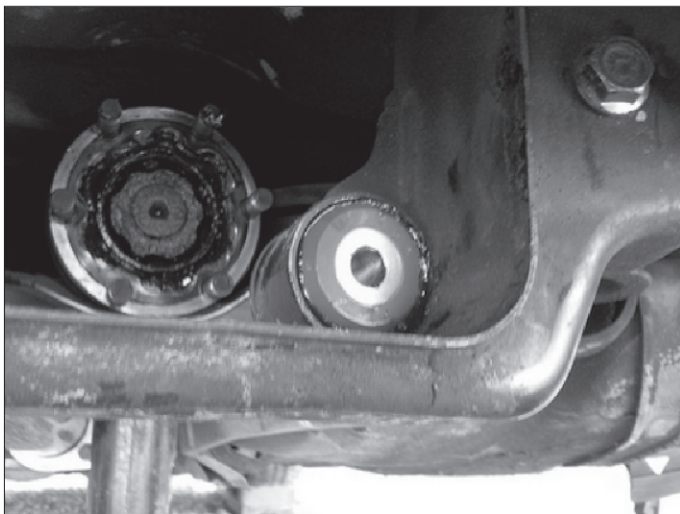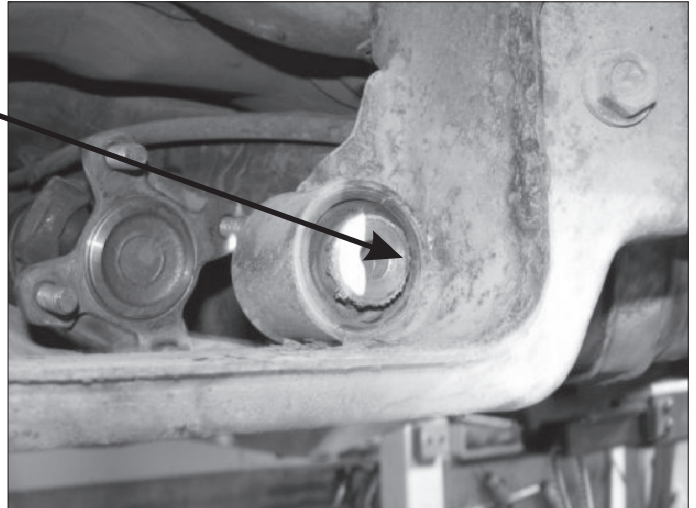

Note - bushing flange to face front of vehicle.

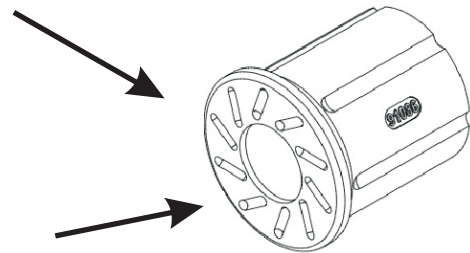

Place supplied washer against flange - grease flange face prior.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.