

Instructions

Power Steering Ram Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application: Corvette - 1963 to 1982

Contents: 2x Bushings
1x Steel tube
2x Washers
1x Castle nut
1x Split pin

1. Raise front of vehicle evenly and safely support.

**Note - thread may require lubrication prior to removal.
Do not damage ram rod surface with mechanical tools.**

2. Remove split pin and nut - remove old bushings and inner tube.

3. Confirm eyelet is clean.


4. Install new supplied bushings with new supplied inner tube and nut.

5. No need to over-tighten nut - do nut up until seats against tube, then proceed to tighten until split pin is in position.

Lubricate thread prior to removal.

Clean Eyelet prior to install of new bushings.

Do not over-tighten - use new supplied split pin.

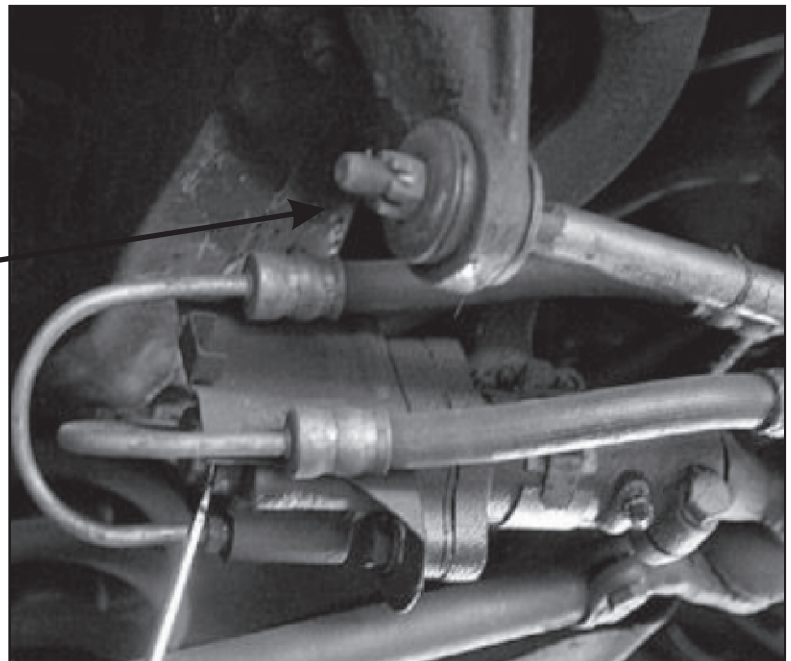

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.