

Instructions

Lower Engine Steady Mount - Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Install Guide

- Raise vehicle evenly and safely support.
Never rely on a Jack only
- Proceed to un-bolt and remove lower mount assy.
- A drill will be required - use a 15mm drill to separate steel bracket from OE bushing.
- Press out original bushing including steel outer shell.
- Press new bushing into aluminium housing - soapy water help with install.
- Grease bushing ID and face with supplied grease only.




Push in supplied steel tube (stepped side to face towards steel bracket).

- Place steel washer between bushing and gearbox (to protect bushing).

Application - VW Golf MK5 MK6
- Audi A3 S3

(Refer current catalogue for complete listing)

Content - 1x bushing 90570
- 1x steel tube
- 1x steel washer
- Grease

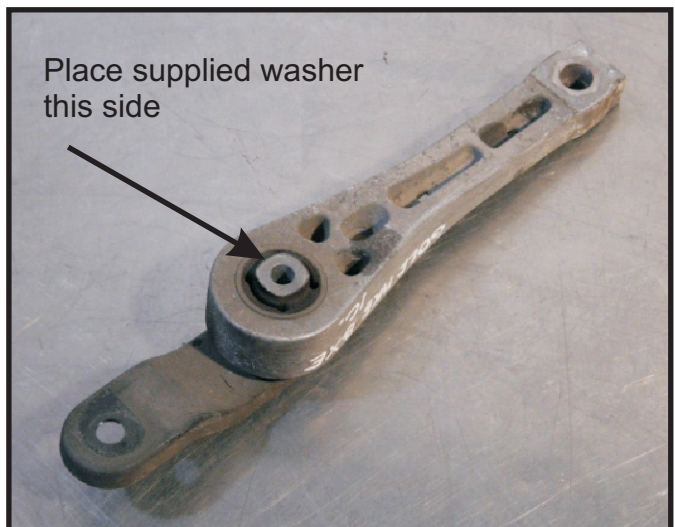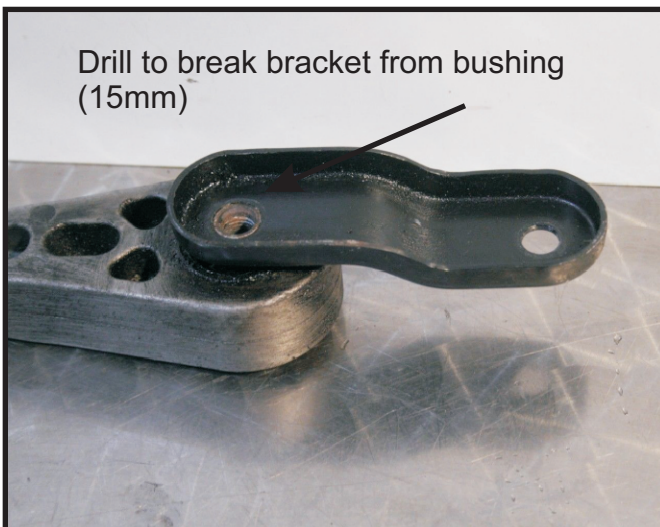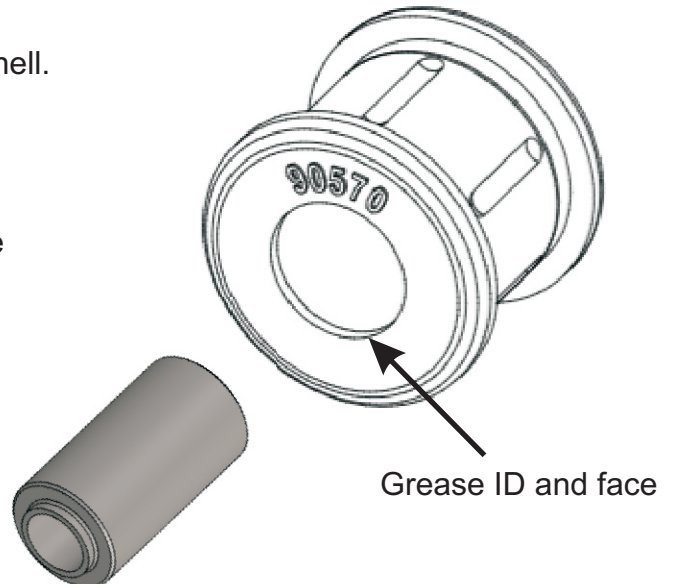

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.