

# Instructions

## Rear Strut Rod Bushings

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

**Application:** Corvette 1963-1982

**Kit Contents:** 8x 90762 bushings  
8x 90763 bushings  
4x tubes  
4x washers  
Grease

1. Raise rear of vehicle evenly and safely support.
2. Un-bolt lower shock point and proceed to remove Rod Shaft.


Note: the inner point has OE eccentrics - mark their position for re-assembly.

3. Remove OE inner eccentrics - now remove strut rods.
4. Press out the original bushings - confirm Eye Rings are clean.

Note: Bushing **90762** to suit early Corvette - bushing **90763** to suit late Corvette.

5. Push in supplied bushings, grease bushing ID and face. Push in supplied tubes.
6. During re-assembly, place supplied washer on front side of Strut rod (on both inner and outer points).
7. Tighten bolts to manufacturers specifications - use new split pins.
8. Carry out a wheel alignment.
9. Re-check all bolts after initial 100kms.

Mark eccentric prior to removal

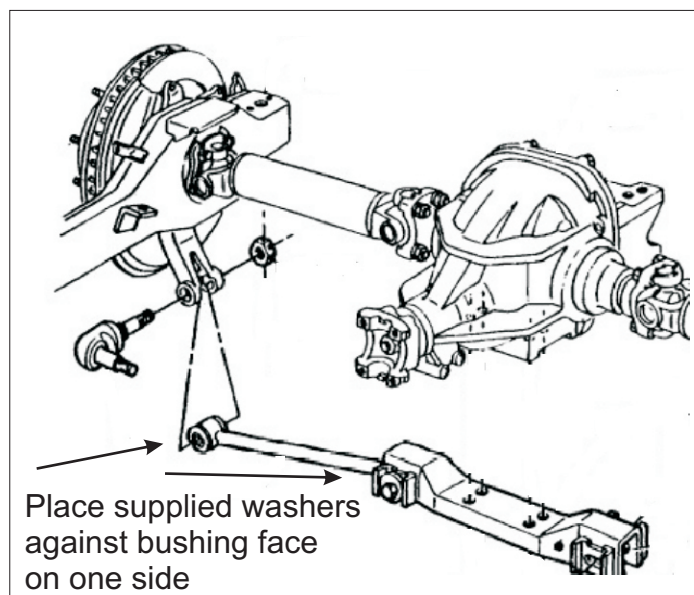

**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.