


Install the new bracket in the vehicle using the five original mounting holes and hardware. Torque mounting hardware to 129 ft-lbs.

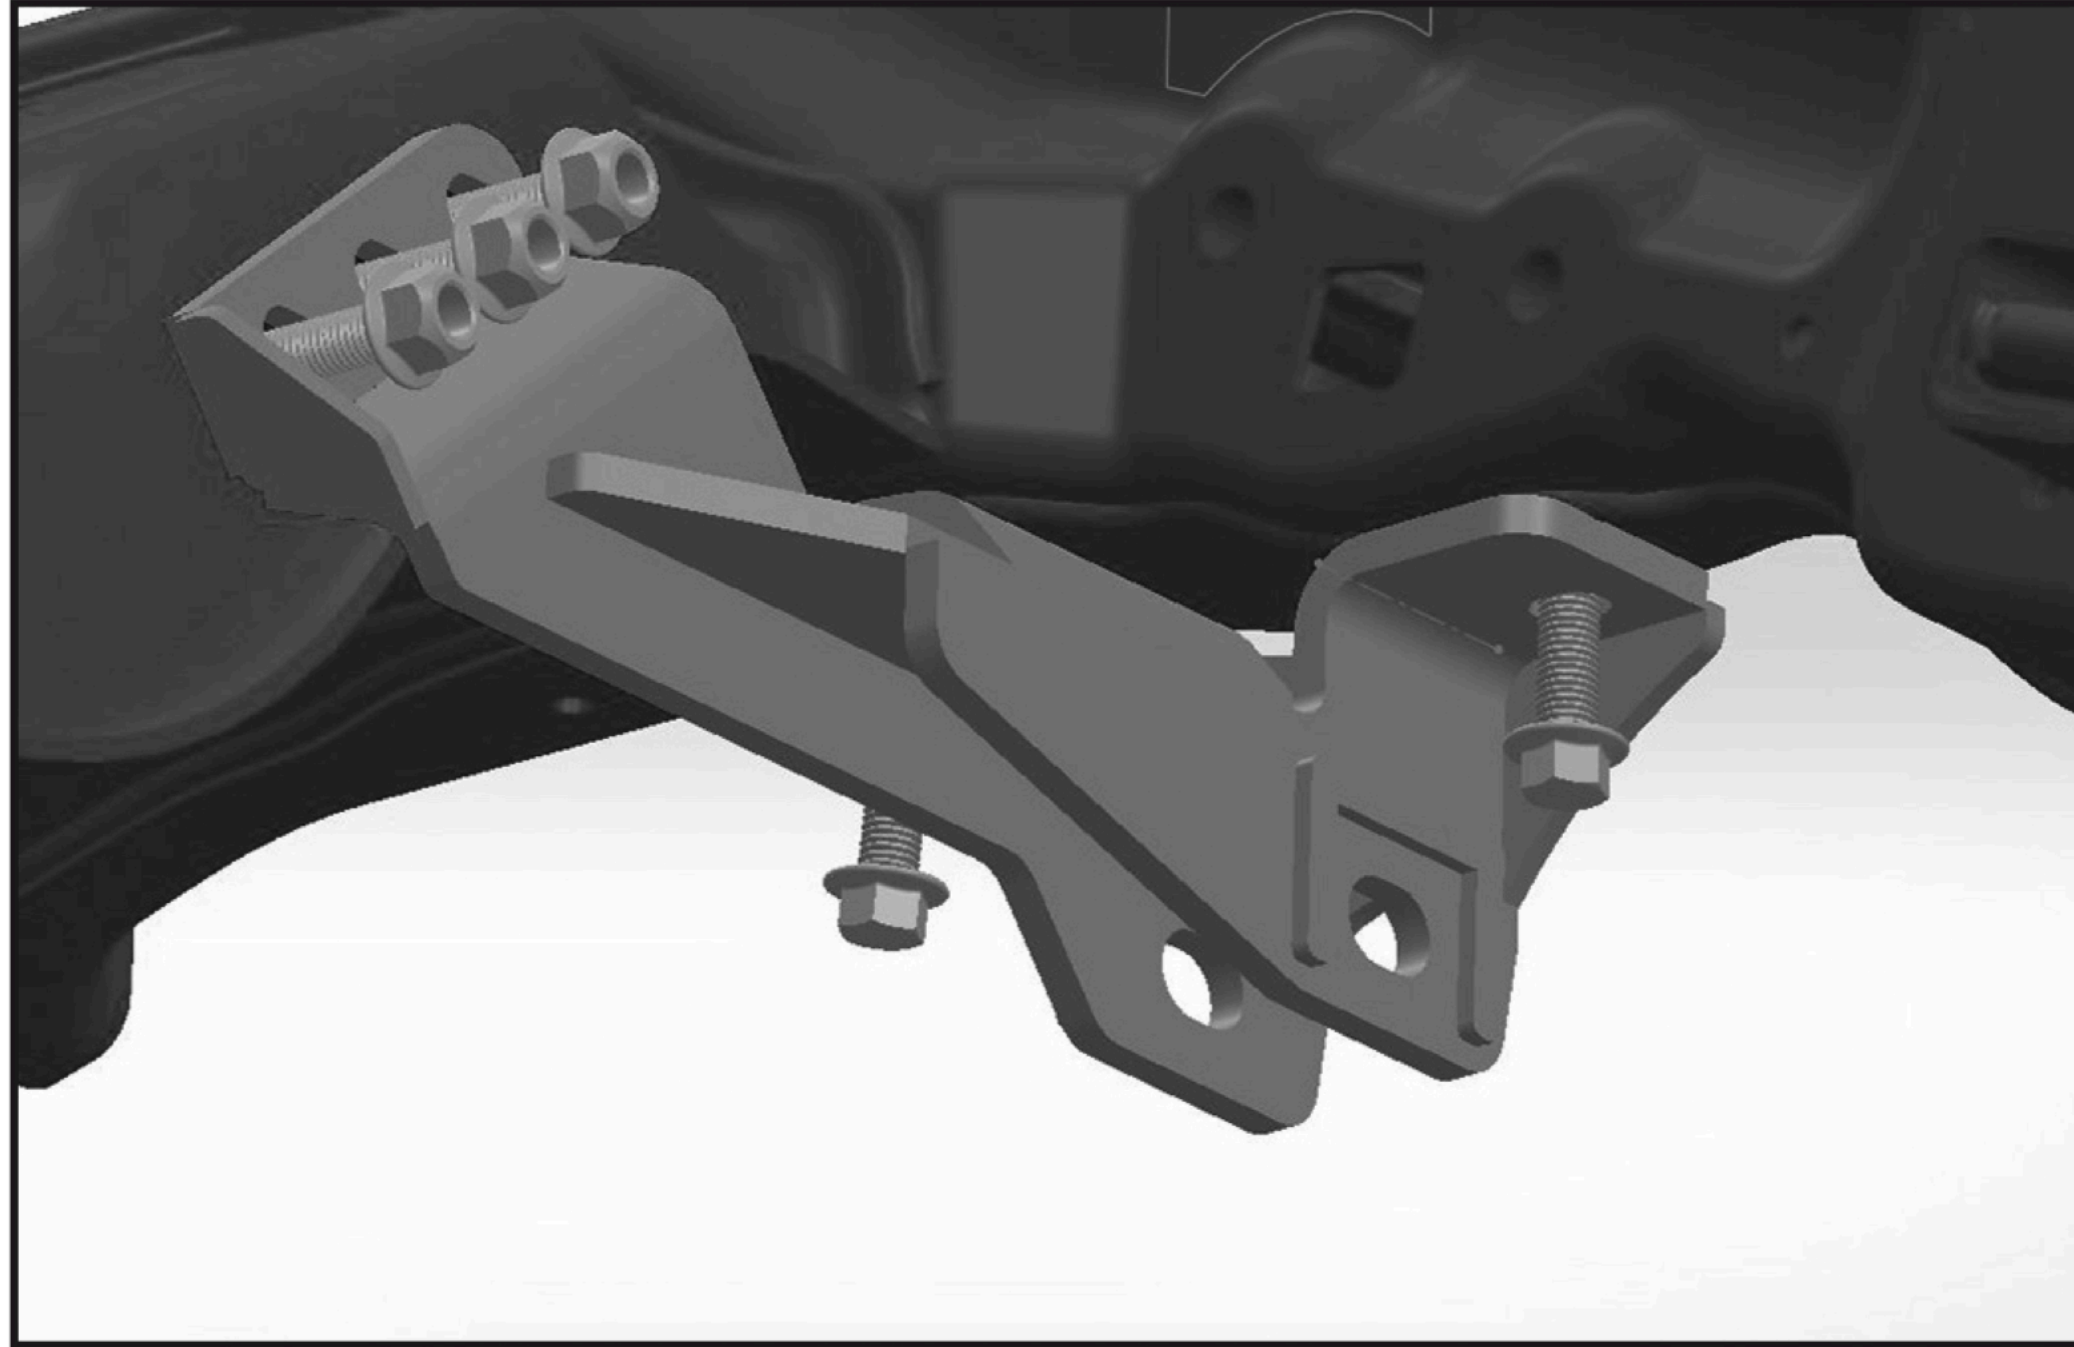

Install cams with bolt hole towards passenger side

Torque the track bar mounting bolt to 406 ft-lbs.

Check all hardware for proper torque.

Check hardware after 500 miles.