



AIR SUSPENSION SOLUTIONS

Installation Instructions Rev.01

1-3" LIFT BUMPSTOP SPACER KIT

88-31190-3 GM 1500 (2019+)

WARNING! – READ BEFORE USE

READ INSTRUCTIONS THOROUGHLY AND COMPLETELY BEFORE INSTALLATION.

INSTALLATION BY A CERTIFIED PROFESSIONAL MECHANIC IS HIGHLY RECOMMENDED.

LOGIQ™ IS NOT RESPONSIBLE FOR ANY DAMAGE OR FAILURE RESULTING FROM IMPROPER INSTALLATION.



**5^{PSI} MINIMUM AIR SPRING
OPERATING PRESSURE**



150^{PSI} MAX AIR SPRING PRESSURE



**NEVER EXCEED MANUFACTURER'S
MAXIMUM PAYLOAD OR GVWR**



CALIFORNIA RESIDENTS - PROP 65

WARNING: This product can expose you to chemicals including Di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov/product.

WARRANTY

LOGIQ™ provides a limited lifetime warranty to the original purchaser of products, that the product be free from defects in workmanship and materials when used on cars and trucks as specified by LOGIQ™ and under normal operating conditions. This warranty is subject to the requirements and exclusions set forth in the full Limited Warranty and Return Policy that is available at logiqair.com/warranty. Air compressors are a wearing component and are covered by a 2-year warranty from the date of purchase. The warranty does not provide coverage for abuse, operation in a manner not consistent with the product's design, or damage resulting from exposure to the elements.



WARNING & DISCLAIMERS

By installing this product you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than that of factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.



Installation Instructions 1-3" LIFT BUMPSTOP SPACER KIT

88-31190-3 GM 1500 (2019+)

TOOLS REQUIRED
SAFETY GLASSES
FLOOR JACK OR LIFT
JACK STAND (X2)
TORQUE WRENCH
3/8" DRIVE RATCHET
5/16" HEX DRIVE SOCKET
PRY BAR
DEADBLOW HAMMER

QTY	PARTS INCLUDED
2	1" STACKABLE BUMPSTOP SPACER CAP
4	1" STACKABLE BUMPSTOP SPACER
2	3/8"-16 X 1.75" SOCKET HEAD CAP SCREW
1	2ML RED THREADLOCKER PACKET

APPLICATION NOTES
TRUCK COMPATIBILITY
ONLY FOR USE WITH 88-31190 PAIRED WITH A 1-3" REAR LIFT IF LIFT KIT CAME WITH BUMPSTOP SPACERS THEY MUST BE REMOVED BEFORE INSTALLING THE LOGIQ BUMPSTOP SPACERS

STEP 1 PREPARE TRUCK


Note original ride height measurement from center of rear fender arch to ground.

Safely lift truck and support with jack stands under frame in order to droop the suspension. This will give you more room to work.

NOTE: IF YOUR LIFT KIT CAME WITH BUMPSTOP SPACERS THEY MUST BE REMOVED BEFORE INSTALLING THE LOGIQ LIFT KIT BUMPSTOP SPACERS.


NOTE: If the aluminum bumpstop spacers on your 88-31190 air spring kit do not have the tapped hole in the center, call customer service.

STEP 2 INSTALL FIRST BUMPSTOP SPACER

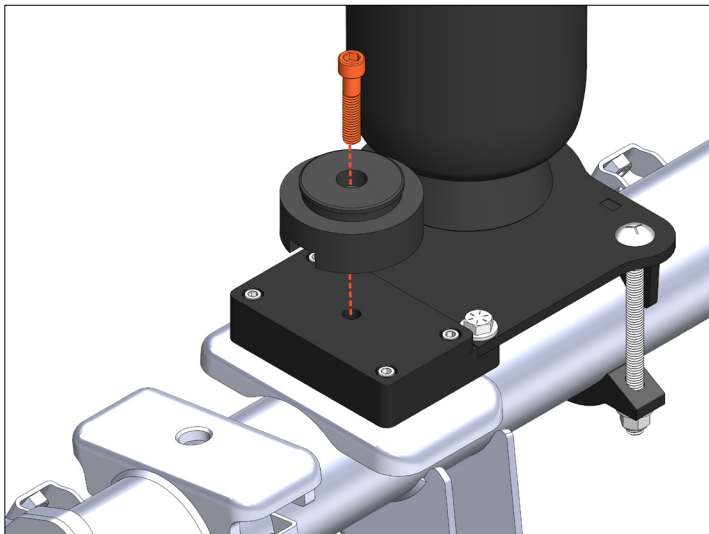

Install one of the plastic bumpstop spacers onto the center of the aluminum bumpstop spacer using one of the supplied socket head cap screws and some threadlocker.

Repeat for passenger side.

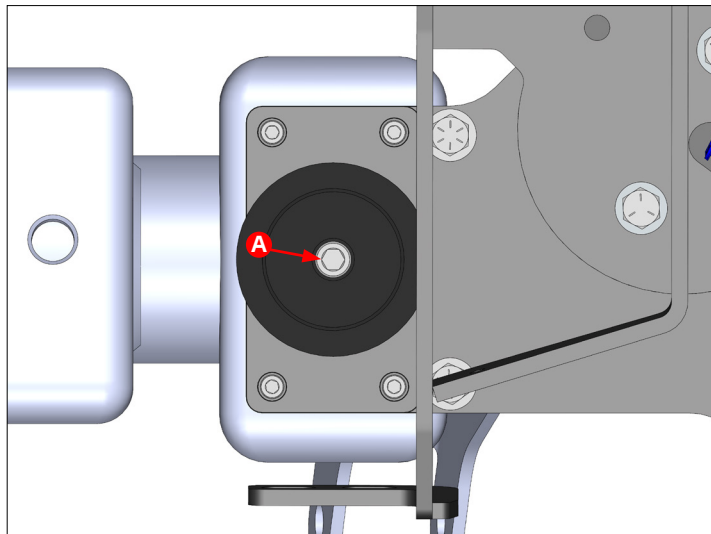


A Torque the 3/8" socket head cap screws to 10 FT. LB.

If you have a 1" rear lift then you are done with the install.

STEP 3 2" & 3" LIFT INSTALL


Reference the section on the following pages that matches your rear lift amount and follow the steps to install the rest of the plastic bumpstop spacers.

2" LIFT

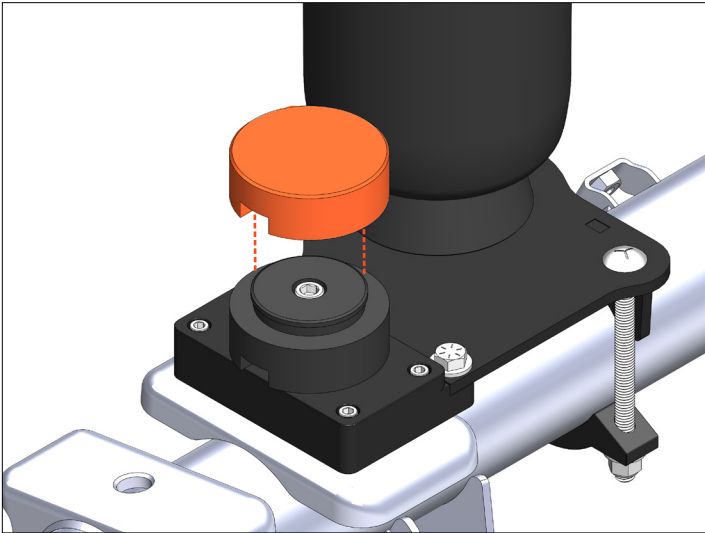

For install with a 2" lift you will stack one of the plastic bumpstop spacer caps on top of the base spacer.

Align and place the bumpstop spacer cap on top of the base spacer as shown.

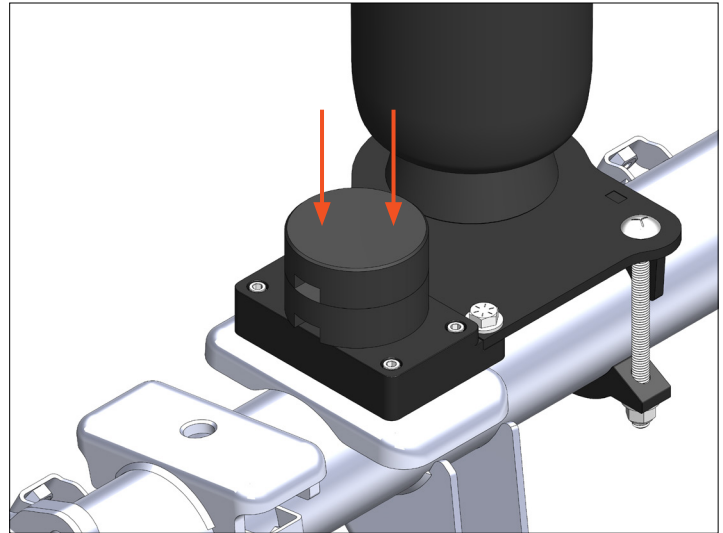


Rest a pry bar or other similar tool across the top of the bumpstop spacer cap and use a deadblow hammer to click it into place on the base spacer.

Ensure the cap has fully seated around the ring on the base spacer.


Repeat for passenger side.

3" LIFT

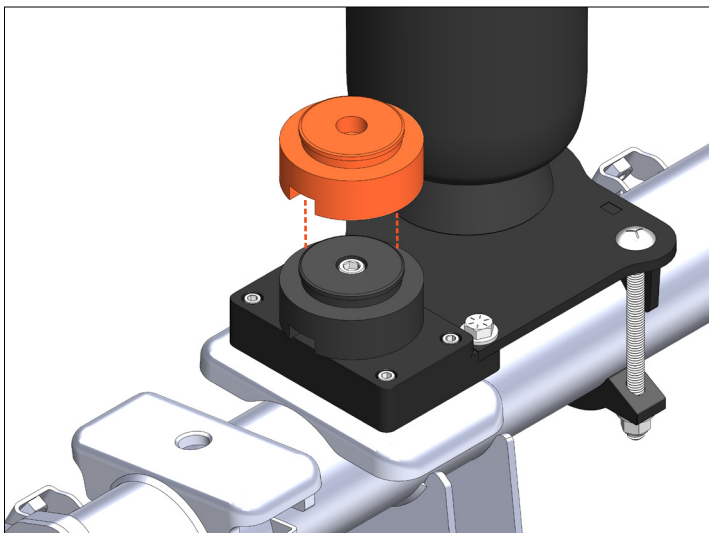


For install with a 3" lift you will stack an additional plastic bumpstop spacer on top of the base spacer.

Align and place the bumpstop spacer on top of the base spacer as shown.

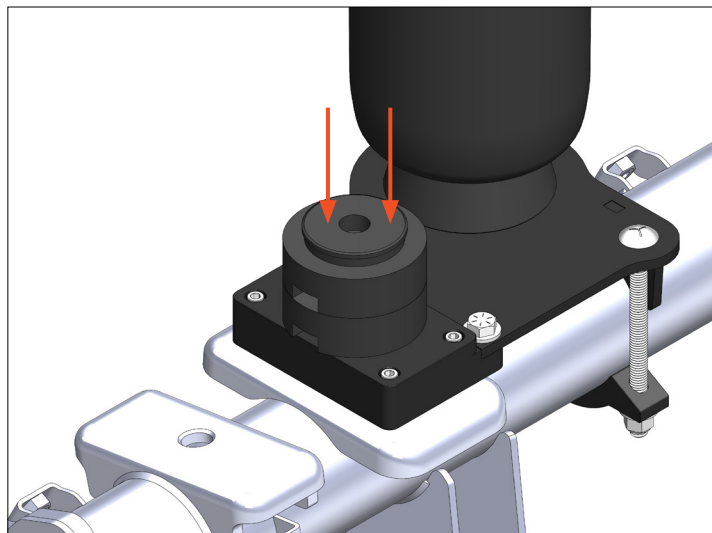


Rest a pry bar or other similar tool across the top of the bumpstop spacer and use a deadblow hammer to click it into place on the base spacer.

Ensure the spacer has fully seated around the ring on the base spacer.

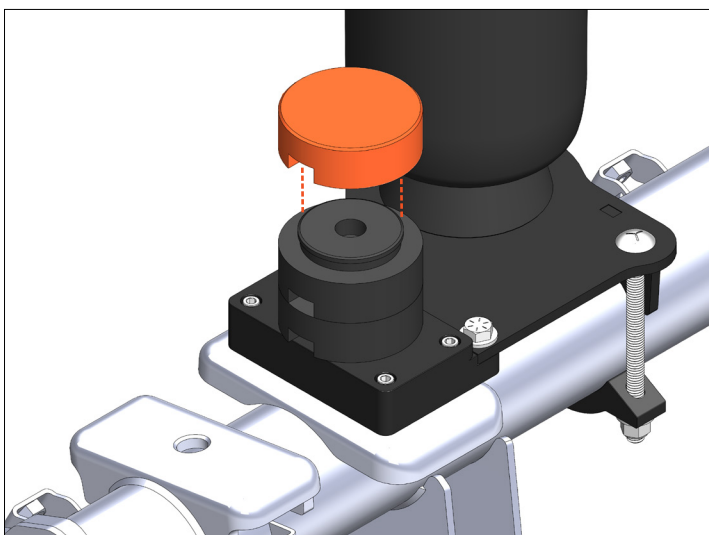

Repeat the spacer attachment process to attach one of the plastic bumpstop spacer caps to the stack.

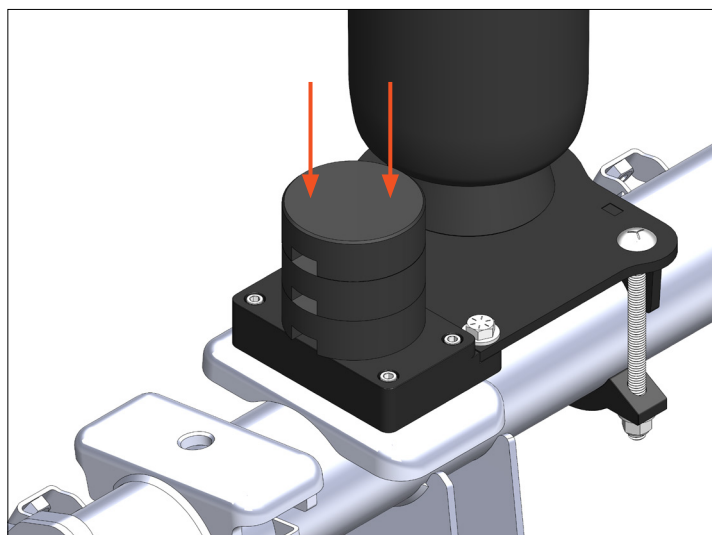

Ensure the cap has fully seated around the ring on the spacer.

Repeat entire process for passenger side.

STEP 4 FINAL SAFETY CHECKS

Verify all fasteners are torqued properly.

Verify at least 5 PSI in air springs before driving.

WARNING & DISCLAIMERS CONTINUED

Safety Warnings

MISUSE OF THIS PRODUCT COULD LEAD TO INJURY OR DEATH.

Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control during abrupt maneuvers.

Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death.

Driver and passengers must **ALWAYS** wear seat belts, avoid quick sharp turns and other sudden maneuvers. LOGIQ™ does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your vehicle under the influence of alcohol or drugs.

Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.

It is the responsibility of the retailer and/or the installer to review all state and local laws, with the end user of this product, related to bumper height laws and the lifting of their vehicle before the purchase and installation of any LOGIQ™ products.

Raised vehicles have altered viewing angles than stock vehicles. This can lead to larger or different blind spots than the driver is accustomed. It is the responsibility of the driver to be aware of this and check their surroundings at all times while the vehicle is in motion and immediately prior to operating vehicle. Failure to do so can lead to damages, injury, or death.

Installation Warning

All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks.

Use caution during all disassembly and assembly steps to ensure suspension components are not over extended causing damage to any vehicle components and parts included in this kit.

Included instructions are guidelines only for recommended procedures and are not meant to be definitive. Installer is responsible to insure a safe and controllable vehicle after performing modifications.

LOGIQ™ recommends the use of an OE Service Manual for model/year of vehicle when disassembly and assembly of factory and related components.

Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual.

Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort.

Larger tire and wheel combinations may increase leverage on suspension, steering, and related components.

Due to payload options and initial ride height variances, the amount of lift/lower is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.



WARNING & DISCLAIMERS

SAEJ2492 Warning

By installing this product, you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than that of factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.

Headlamp Warning

A lifted or lowered vehicle may have different headlight aim performance. LOGIQ™ recommends marking and recording the headlight beam position before kit installation and then adjusting, if necessary, the headlamps to the same height settings after kit installation. Set the vehicle on a level surface 10' to 15' from a solid wall or garage door. (This is a general distance with some manufacturers requiring different distances.) Note the top height of the low beam's bright spot, the top of the most intense part of the beam, for driver and passenger side. Height may vary from side to side. Repeat this procedure and adjust after lift kit is installed. Adjust if the aim is off by turning the adjusters gradually (a quarter of a turn) and looking to see where the new alignment falls. It may be easier to block one headlamp while adjusting the other. Consult the owner operation manual for procedures to adjust headlights - many automakers offer headlight aiming specs. Some states have their own specifications when it comes to headlight aim, so it's best to follow those rules when aligning headlights.

FAILURE TO PERFORM THE POST INSPECTION CHECKS MAY RESULT IN VEHICLE COMPONENT DAMAGE AND/OR PERSONAL INJURY OR DEATH TO THE DRIVER AND/OR OTHERS.

Final Checks & Adjustments

Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to ensure proper torque. Torque lug nuts to the wheel manufacturer specs. Move vehicle backwards and forwards a short distance to allow suspension components to adjust. Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance. Test and inspect steering, brake and suspension components for tightness and proper operation. Inspect brakes hoses and ABS lines for adequate slack at full extension, adjust as necessary.

RECHECK ALL HARDWARE FOR PROPER TORQUE VALUES AFTER 500 MILES, AND THEN PERIODICALLY AT EACH SERVICE INTERVAL THEREAFTER.

Vehicle Handling Warning

Increasing the height of your vehicle raises the center of gravity and can affect stability and control. Use caution on turns and when making steering corrections.

Vehicles with larger tires and wheels will handle differently than stock vehicles. Take time to familiarize yourself with the handling of your vehicle.

Wheel Alignment/Headlamp Adjustment

It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician. Align the vehicle to factory specifications. It is recommended that your vehicle alignment be checked after any off-road driving.

In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment. If the vehicle is equipped with active or passive safety/collision monitoring and/or avoidance systems including, but not limited to, camera- or radar-based systems, check and adjust your vehicle's systems for proper aim and function.