

LIMITED 3-YEAR WARRANTY



Contact us for service under the warranty

Phone: 1 (888) 554-8789
Email: customerservice@workspport.com
Website: www.workspport.com

WARRANTY DETAILS

For a period of three (3) years after your purchase date of an applicable product, Workspport warranties the product to be free from defects in material and workmanship on all aluminum framing, plastics, and hardware against manufacturer defects.

If you discover a defect in an applicable product covered by this warranty, we will, at our discretion, repair the product using new or refurbished components, or if repair is not possible, replace the item.

EXCLUSIONS

This warranty covers defects in manufacturing discovered while using the product as recommended on the truck model for which it was intended. The warranty does not cover improper service or installation, loss or theft, and coverage does not extend to damage caused by misuse, abuse, unauthorized modification, improper storage conditions, acts of God, wind- or weather-related damage, normal wear and tear, or other causes not related to or arising from defective materials or workmanship. The warranty does not cover parts that are subject to normal wear and tear replacement requirements. Workspport does not warranty any tonneau covers that come off while driving. **It is the user's responsibility to check clamps before driving.**

WARRANTY CLAIM

If you believe your product is subject to a warranty claim, you must submit a Warranty Claim Form. Based on information provided, Workspport will determine whether your product is defective under the terms of this warranty. Upon a determination that your product is defective under the terms of this warranty, Workspport will decide, at its sole discretion, whether to repair or replace the defective part/product. In case the product must be returned to Workspport, an appropriate RGA# must be included for Workspport to accept the part/product as a return. Returned items do not constitute an accepted warranty. Until accepted in writing, to either the vendor or the enduser, Workspport will not issue credit or replacement of products. Warranty claims will be accepted or rejected solely at Workspport's discretion.

Certain documentation (including original purchase receipt with product description and date) and pictures may be required for Workspport's review of the warranty claim.

USER RESPONSIBILITIES

Ensure the cover is firmly fastened in either the fully closed or fully open position. Do not over tighten clamps and check clamps regularly.
Only use mild soap and water to clean and condition the tonneau cover.
Cargo must not be allowed to touch the cover in any position. Workspport does not recommend placing items on top of the cover, as it may damage the cover.

LIMITATIONS OF LIABILITY

Should the product fail, your sole recourse shall be repair or replacement, as described in the preceding paragraphs. In no event shall Workspport be liable for any direct, indirect, punitive, incidental, special, consequential damages to property or life, whatsoever arising out of or connected with the use or misuse of Workspport products. Damages include, but are not limited to, lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product. In no event will Workspport be liable for more than the amount of your purchase price, not to exceed the current recommended list price of the product, and excluding tax, installation, shipping, and handling charges.


NON-TRANSFERABLE

This warranty applies only to the original retail consumer and is not assignable or transferable The warranty is voided if the product is removed or installed on a vehicle different from the vehicle for which the product was originally purchased. Workspport disclaims all other warranties or guarantees, express or implied. By installing or using the product, the user accepts all terms and conditions described herein.

SHIPPING COSTS

The cost of shipping or related charges to the manufacturer, or authorized repair center as well as payment of any custom clearance fees or duties are the responsibility of the user unless expressly approved otherwise by Workspport.

DRIVING POSITIONS

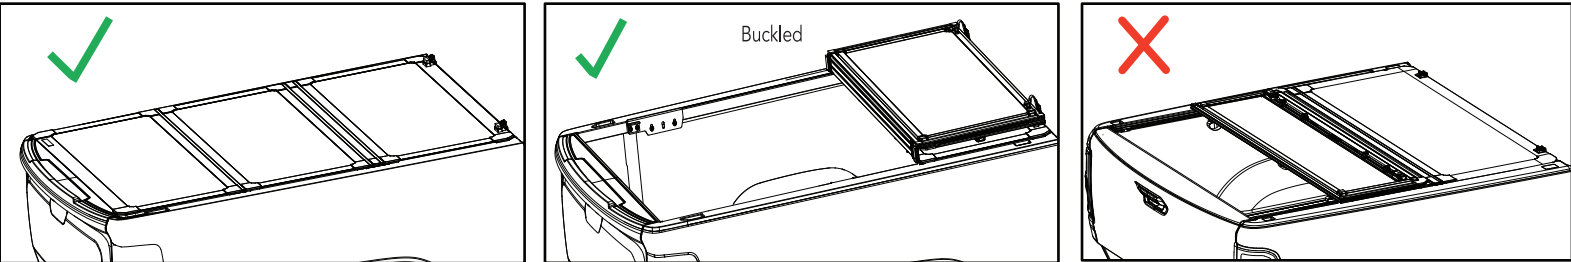

INSTALLATION SHEET #4741251



HARD, LOW PROFILE, THREE PANEL COVER

Workspport's AL3 comes with all the features you would expect in a quality tonneau cover and is proudly designed, stocked, and made in the USA with domestic and imported parts and offer free, same-day shipping on all our products.

For additional information or any questions about Workspport products, please contact our customer service teams located in Canada and the US or visit us at www.workspport.com.

BY EMAIL customerservice@workspport.com | BY PHONE 1 (888) 554-8789

Packing List:


1 X 474125 - Honda Ridgeline (17-24) 5' Tonneau Cover

Hardware Kit 102525:



- 1) 1 X #102287 Front Bracket, LH Side
- 2) 1 X #102288 Front Bracket, RH Side
- 3) 1 X #102289 Rear Bracket, LH Side
- 4) 1X #102290 Rear Bracket, RH Side
- 5) 2 X #102284 Retainer Hook Assembly, Ext

Tools Required:

- Utility Knife
- No. 2 Phillips Head Screwdriver
- T50 Torx Bit

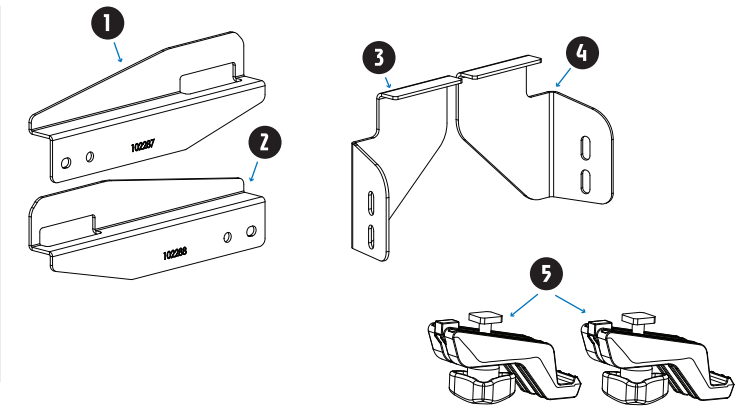


STEP ONE

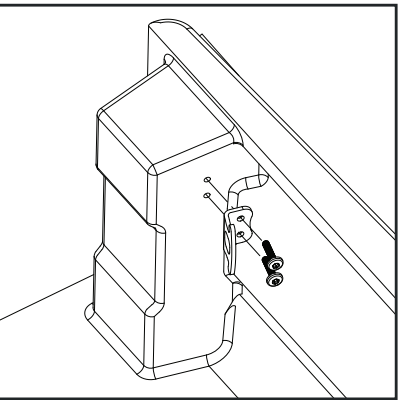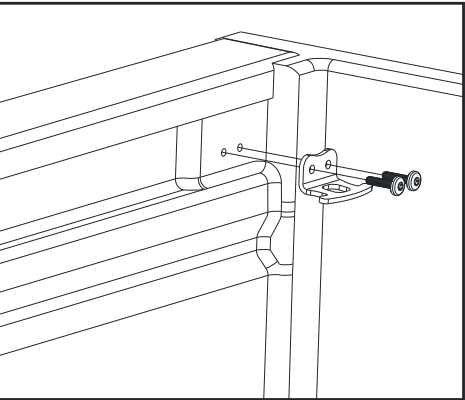

1. Using a T50 Torx bit, remove the 2 bolts from all 4 tie down brackets.

STEP TWO

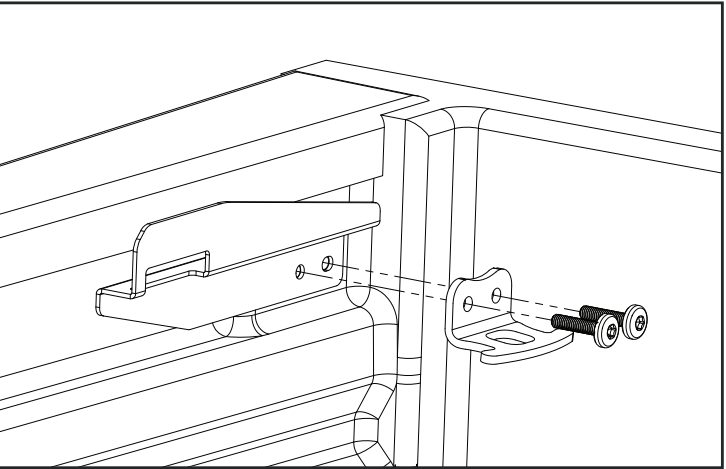


1. Using a T50 Torx bit, install the front LH side bracket and the tie down using the bolts removed from Step 1 in the orientation shown.

2. Repeat this process on the RH side using the same method.




STEP THREE

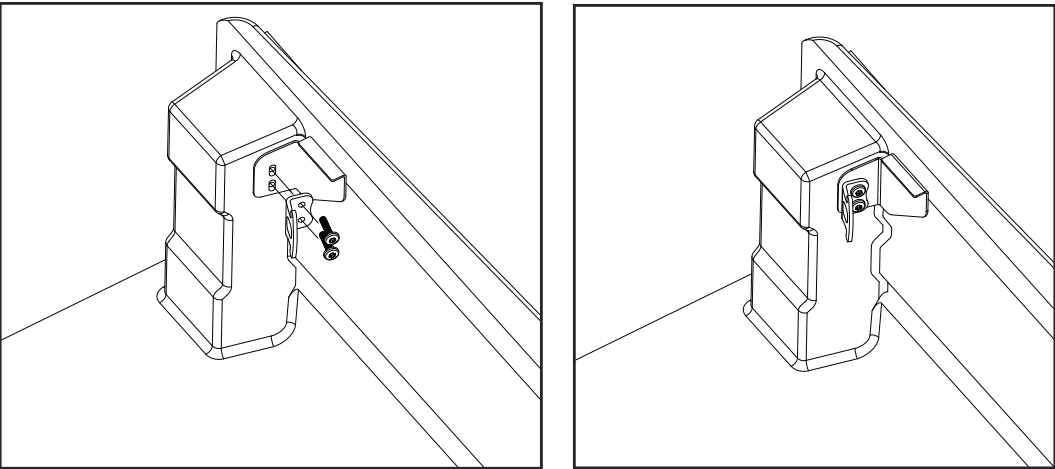


- 1. Using a T50 Torx bit, install the front LH side bracket and the tie down using the bolts removed from Step 1 in the orientation shown.
- 2. Repeat this process on the RH side using the same method.
- 3. Vertical adjustments can be made once the cover is installed.

STEP FOUR

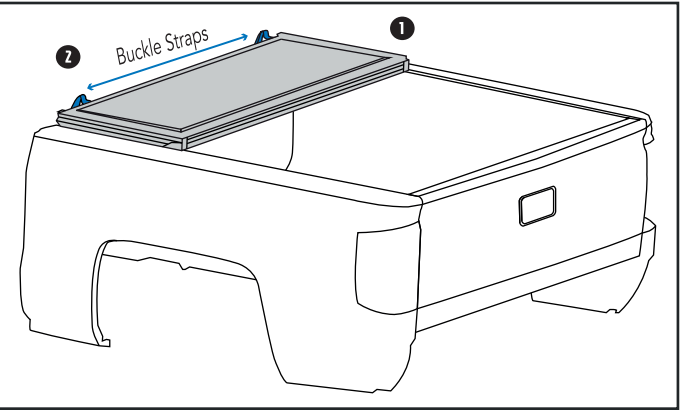


- 1. With assistance from another person, take the tonneau cover from the box and place it near the bulkhead of the truck. * DO NOT UNFOLD AT THIS TIME
- 2. Make sure that the buckle straps are facing the cabin and the cover remains folded.

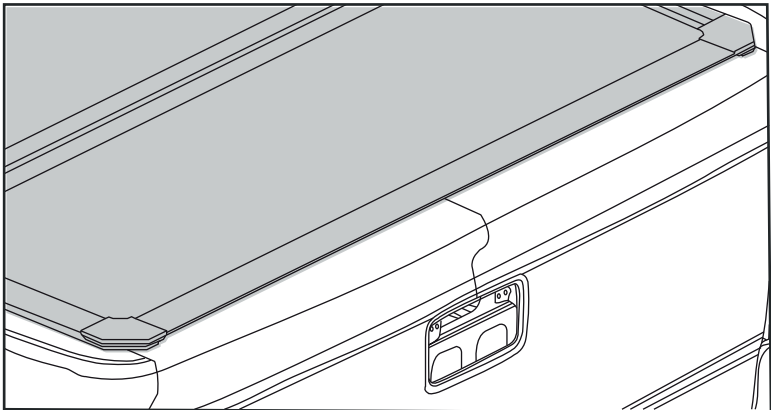


- 3. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.
- 4. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing the truck bed.

STEP FIVE

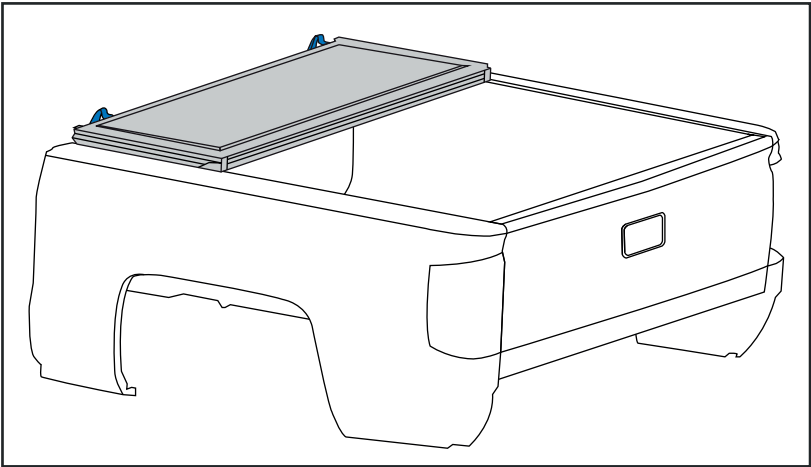


- 1. Refold the cover back open as shown. Then move to step 6.
- *Use caution to not move the alignment of the cover or you must repeat step 4.

STEP SIX

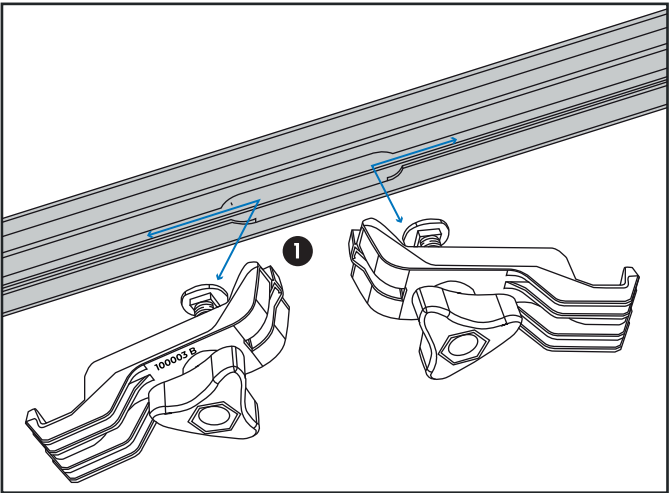


- 1. Locate the cutout in the center of the front panel crossbeam. Install retainer hook assembly (item #3) on both the sides of cover one by one as shown in the picture above.

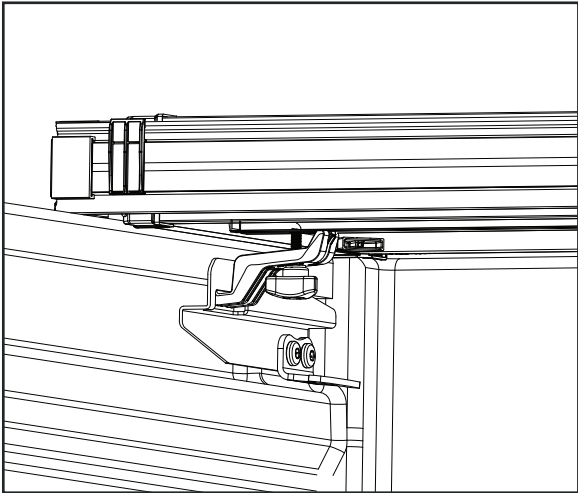


- 2. Slide the hook assembly towards the side walls of your truck bed. Lower the hook down by loosening the knob. Slide the hook assembly into the bracket. Ensure the hook is positioned under the lip of the bracket. Tighten the knob to secure the latch.
- 3. Lift up on both side of the cover to confirm engagement of retainer hooks **BEFORE** unfolding. Visually inspect engagement also at this time.

STEP SEVEN

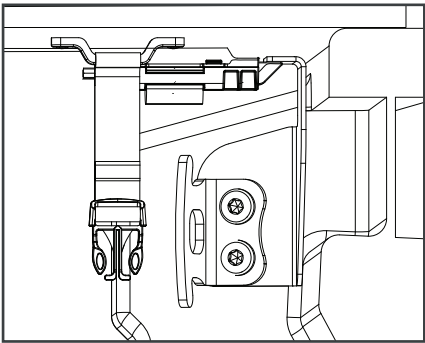

- 1. Vertical adjustment of the rear bracket can be done by loosening the two previously installed bolts and moving up or down slightly. The striker tab should touch the slam latch in a relaxed position.

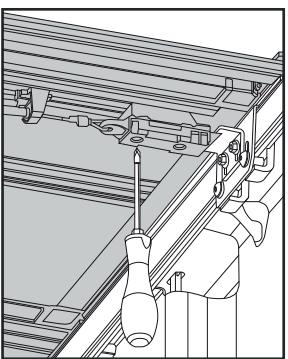

- 2. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.
- If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.