LIMITED 3-YEAR WARRANTY

Worksport™

Contact us for service under the warranty
Phone: 1 (888) 554-8789
Email: customerservice@worksport.com
Website: www.worksport.com

WARRANTY DETAILS

For a period of three (3) years after your purchase date of an applicable product, Worksport warranties the product to be free from defects in material and workmanship on all aluminum framing, plastics, and hardware against manufacturer defects.

If you discover a defect in an applicable product covered by this warranty, we will, at our discretion, repair the product using new or refurbished components, or if repair is not possible, replace the item.

EXCLUSIONS

This warranty covers defects in manufacturing discovered while using the product as recommended on the truck model for which it was intended. The warranty does not cover improper service or installation, loss or theft, and coverage does not extend to damage caused by misuse, abuse, unauthorized modification, improper storage conditions, acts of God, wind- or weather-related damage, normal wear and tear, or other causes not related to or arising from defective materials or workmanship. The warranty does not cover parts that are subject to normal wear and tear replacement requirements. Worksport does not warranty any tonneau covers that come off while driving. **It is the user's responsibility to check clamps before driving.**

WARRANTY CLAIM

If you believe your product is subject to a warranty claim, you must submit a Warranty Claim Form. Based on information provided, Worksport will determine whether your product is defective under the terms of this warranty. Upon a determination that your product is defective under the terms of this warranty, Worksport will decide, at its sole discretion, whether to repair or replace the defective part/product. In case the product must be returned to Worksport, an appropriate RGA# must be included for Worksport to accept the part/product as a return. Returned items do not constitute an accepted warranty. Until accepted in writing, to either the vendor or the enduser, Worksport will not issue credit or replacement of products. Warranty claims will be accepted or rejected solely at Worksport's discretion.

Certain documentation (including original purchase receipt with product description and date) and pictures may be required for Worksport's review of the warranty claim.

USER RESPONSIBILITIES

Ensure the cover is firmly fastened in either the fully closed or fully open position. Do not over tighten clamps and check clamps regularly.
Only use mild soap and water to clean and condition the tonneau cover.
Cargo must not be allowed to touch the cover in any position. Worksport does not recommend placing items on top of the cover, as it may damage the cover.

LIMITATIONS OF LIABILITY

Should the product fail, your sole recourse shall be repair or replacement, as described in the preceding paragraphs. In no event shall Worksport be liable for any direct, indirect, punitive, incidental, special, consequential damages to property or life, whatsoever arising out of or connected with the use or misuse of Worksport products. Damages include, but are not limited to, lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product. In no event will Worksport be liable for more than the amount of your purchase price, not to exceed the current recommended list price of the product, and excluding tax, installation, shipping, and handling charges.


NON-TRANSFERABLE


This warranty applies only to the original retail consumer and is not assignable or transferable The warranty is voided if the product is removed or installed on a vehicle different from the vehicle for which the product was originally purchased. Worksport disclaims all other warranties or guarantees, express or implied. By installing or using the product, the user accepts all terms and conditions described herein.


SHIPPING COSTS

The cost of shipping or related charges to the manufacturer, or authorized repair center as well as payment of any custom clearance fees or duties are the responsibility of the user unless expressly approved otherwise by Worksport.

DRIVING POSITIONS

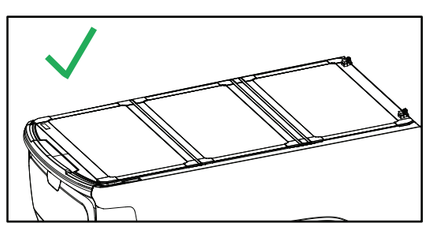

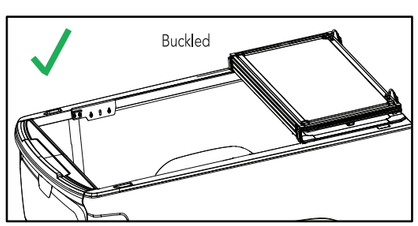

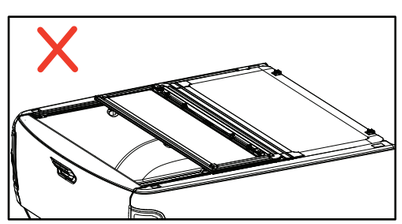

INSTALLATION SHEET #4716250

Worksport™ AL3

HARD, LOW PROFILE, THREE PANEL COVER

Worksport's AL**3** comes with all the features you would expect in a quality tonneau cover and is proudly designed, stocked, and made in the USA with domestic and imported parts and offer free, same-day shipping on all our products.

For additional information or any questions about Worksport products, please contact our customer service teams located in Canada and the US or visit us at www.worksport.com.

BY EMAIL customerservice@worksport.com | **BY PHONE** 1 (888) 554-8789

Packing List:


1 X 471625 - Chevy/GMC Canyon/Colorado (15-22) 5'3" Tonneau Cover

Hardware Kit 103160:


1) 1 X #102834 Rear Striker Long Bracket, Right Hand Side
2) 1 X #102833 Rear Striker Long Bracket, Left Hand Side
3) 2 X #102269 Retainer Hook Assembly
4) 1 X #100378 5mm Hex Allen Key
5) 1 X #100267 Bulkhead Wall Seal


Tools Required:

- Utility Knife
- No. 1 or No. 2 Phillips Head Screwdriver
- 10mm box/open wrench

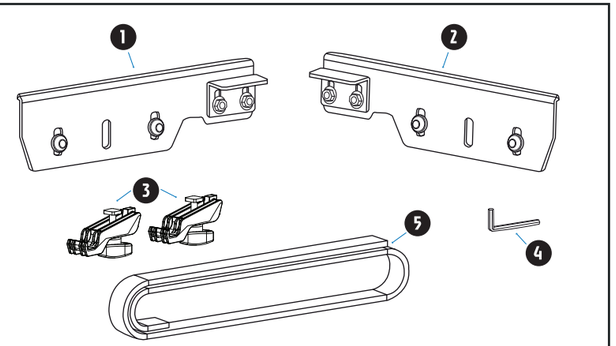

STEP ONE

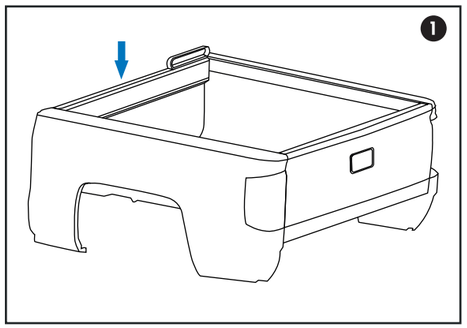


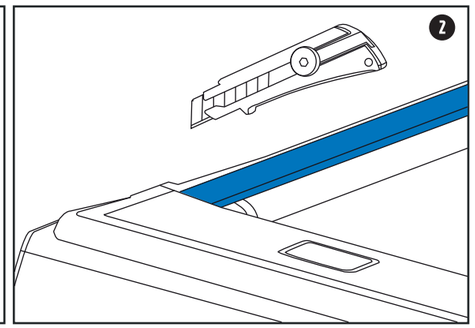

1. Clean the bulkhead wall of your truck bed. Unpack the bulkhead wall seal (item #5). Pull off the liner and apply the adhesive foam seal.

2. Make sure not to leave any gap between the seal and the side plastic caps of the bed. Cut the excess length using a knife if required.

STEP TWO

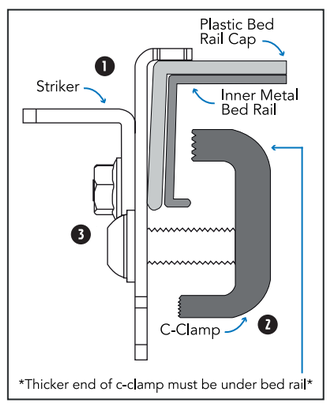

1. Identify and install the latch striker brackets (items #1 and #2). Check the packing list for a detailed description of each part.


2. If required, loosen the two C-clamps on each bracket and place them on the bed rail one by one. Ensure the two C-clamps are behind the plastic and metal bed rail layers as in the picture.

3. Slightly fasten the brackets as shown using the hex key (item #4) so that they do not fall off. Do not fully tighten the clamps at this point.

Worksport™

101862


STEP THREE

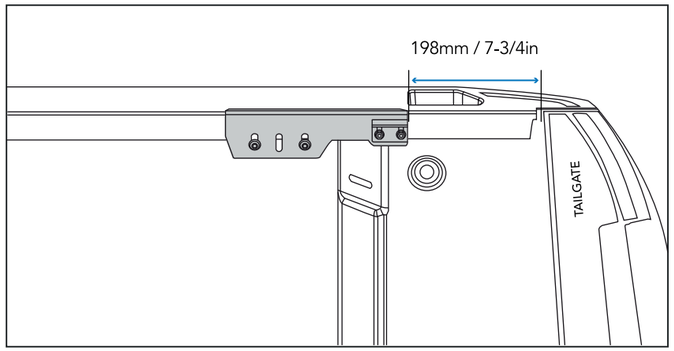

1. Keep the tailgate closed, use a tape measure to determine the location of the striker brackets. You can do this by measuring from the inside edge of the tailgate as displayed.

2. Maintain the same distance for the opposite side brackets and completely tighten the clamps using the hex key


STEP FOUR

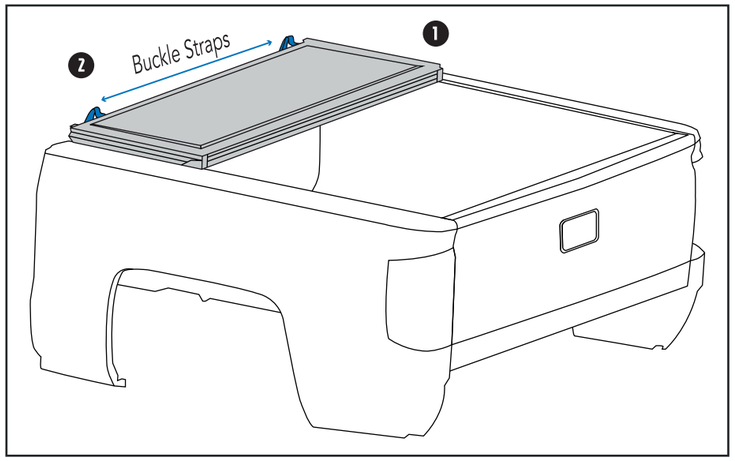

1. With assistance from another person, take the tonneau cover from the box and place it near the bulkhead of the truck.

2. Make sure that the buckle straps are facing the cabin and the cover remains folded.


STEP FIVE

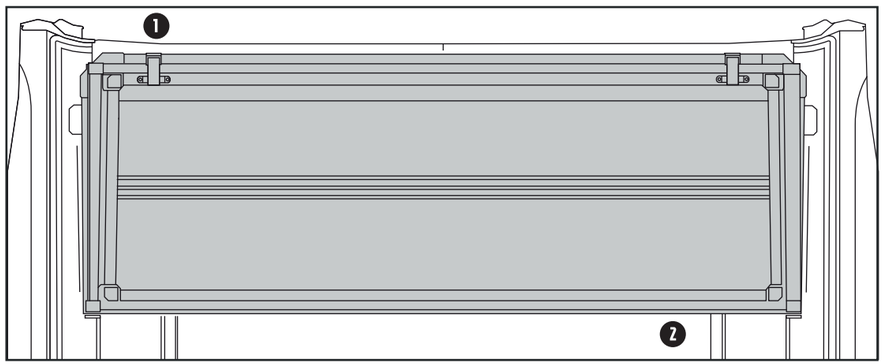

1. Align the tonneau cover on the bulkhead to the truck bed evenly spaced over the truck bed rails.

2. Ensure that the bulkhead fin seals are properly sitting on the previously applied adhesive foam seal (item #5).

STEP SIX

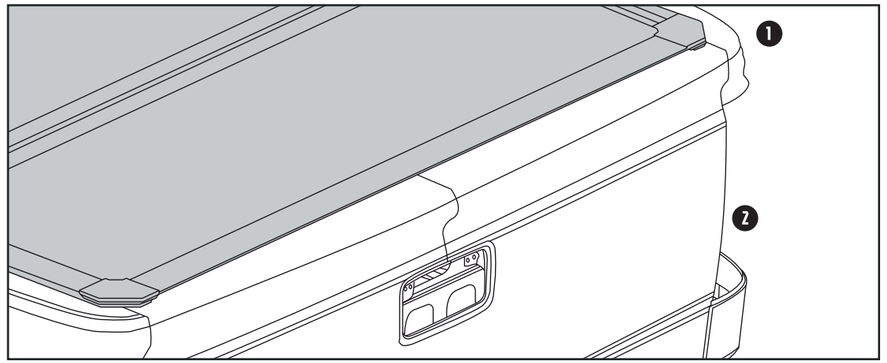



1. Close the tailgate and completely unfold the cover to check if it properly aligns on the tailgate.

2. Move the cover to the front and back or left and right as required to ensure it's evenly spaced and sealing the truck bed.

Once the cover is correctly situated, fold it gently open so the tonneau does not move from the aligned position.

STEP SEVEN

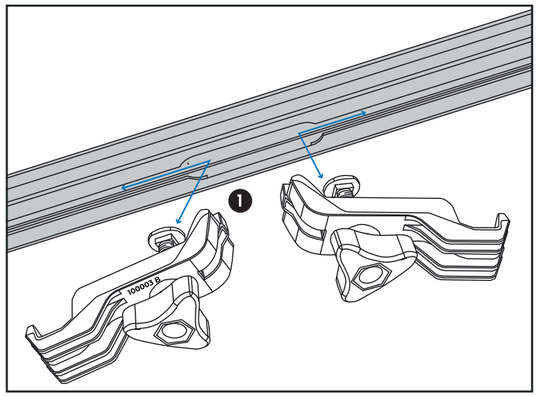


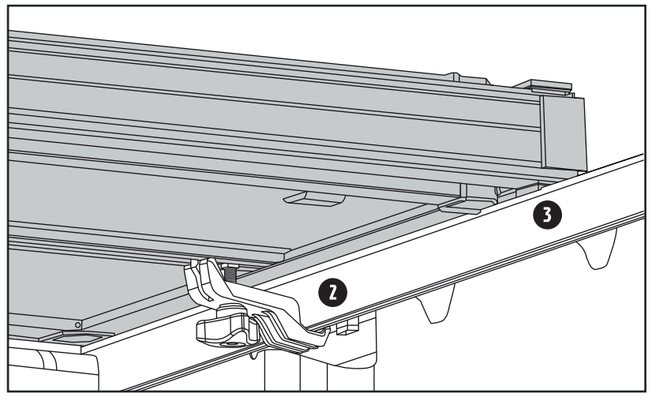


1. Locate the cutout in the center of the front panel crossbeam. Install retainer hook assembly (item #3) on both the sides of cover one by one as shown in the picture above.

2. Slide the hook assembly towards the side walls of your truck bed. Lower the hook down by loosening the knob. Slide the hook assembly under bed rail lip. Ensure the hook is positioned under both the plastic and metal layers of the bed rail lip. Tighten the knob to secure the latch.

STEP EIGHT

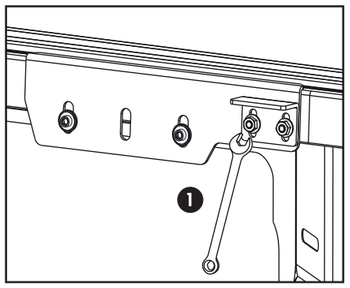

1. If required adjust the striker height and latch position using a 10mm wrench.

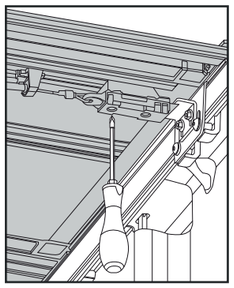

2. Completely fold and unfold the tonneau cover a couple of times to make sure it functions properly.

If needed, adjust the position of the quick latches using a #2 Phillips screwdriver. Loosen both screws and slide the quick latch to engage the striker approximately 6mm (1/4"). Tighten screws securely.