


Owner's Manual

3020-CP

This Owner's Manual provides assembly, install and user guidance. It applies to all **3020-CP** sold by Ranger Design. For a list of compatible models, visit our website at rangerdesign.com.

Contents

Warnings.....	2
Parts Included.....	3
Tools Required (Not Included)	4
Assembly	5
Installation.....	9

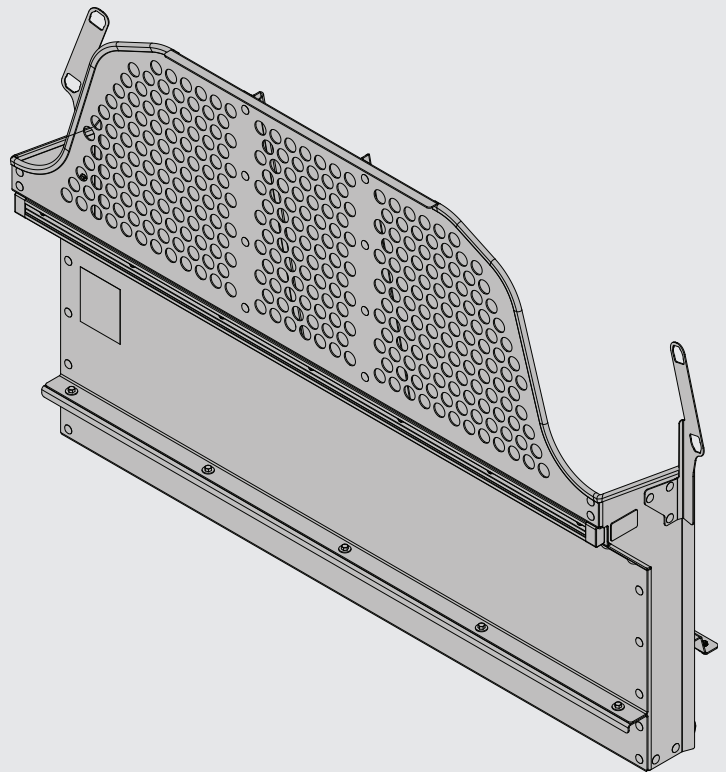

3020-CP
as shown



Scan the QR code for the latest Installation Guide. For more information, visit rangerdesign.com.



This Owner's Manual must remain in vehicle at all times.

Warnings

READ, UNDERSTAND, AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW THESE DIRECTIONS MAY RESULT IN PROPERTY DAMAGE, SERIOUS BODILY INJURY, AND/OR DEATH. RANGER DESIGN IS NOT RESPONSIBLE FOR ANY PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH THAT OCCURS WHILE USING ANY RANGER DESIGN PRODUCTS.

THE FINAL ALTERER AND/OR MODIFIER SHOULD REVIEW THE WARNING SHEET WITH THE CUSTOMER BEFORE THE VEHICLE IS RELEASED TO THE CUSTOMER FOR GENERAL USE. THESE INSTRUCTIONS SHOULD REMAIN WITH THE VEHICLE AT ALL TIMES.

WARNINGS – Prior To Starting

- Ranger Design products must be assembled and installed by individuals qualified to use the tools required and have experience with similar products. If there is any question as to competence or experience, please contact a professional alterer or modifier.
- Failure to use Ranger Design-provided fasteners, brackets, and proper installation guidelines could increase risk of serious personal injury and/or death.
- Prior to installation, inspect the vehicle to ensure that installation will not interfere with, or cause obstruction of, any critical components such as electrical wiring, fuel tanks, fuel cells, locks, latches, etc.
- The final alterer and/or modifier is responsible for ensuring all equipment is sufficiently secured to wall and floor structures or suitable anchorages.
- Do not install systems into any weak or unsound materials such as plastics, woods, thin-walled metals, etc., without proper reinforcement.
- Do not install this product where it could interfere with the deployment of airbags. Failure to comply could result in death or serious injury.
- Do not install this product where it could ingress on the Vehicle Occupant Protection Zone. Failure to comply could result in death or serious injury.
- Incorrect installation could cause water leaks, electric shock, or fire.
- Any cargo vehicle with any cargo or equipment should use a certified partition which can be found on the Ranger Design website. (<https://rangerdesign.com>)
- Mounting rails and floors are strongly recommended for any attachment to the vehicle and can be found on the Ranger Design website. (<https://rangerdesign.com>)
- Any modification or unintended use of this product voids any warranty and could create a hazardous condition.
- Ranger Design provides recommended assembly and installation instructions which must be followed to ensure correct operation. Failure to do so could invalidate the product's compliance and/or warranty and cause injury.
- The final stage vehicle alterer and/or modifier is responsible for the integration, installation, and compliance of the product in its final location with all applicable regulations and standards. Failure to maintain compliance of the vehicle with applicable regulations and standards could be punishable by law. Alterers and/or modifiers should consult with all local authorities prior to commissioning.


- Any materials, padding, or glazing installed in the vehicle must comply with FMVSS/CMVSS 201/205/302, as applicable.

WARNINGS – Prior To Drilling

- Improper drilling can cause property damage to vehicles and could lead to electric shock, fire, or even death.
- Ensure that drilling is only performed on areas of the vehicle allowed by the vehicle's Original Equipment Manufacturer's Body Builders Layout Book (or equivalent document).
- Ensure that you will not hit any critical parts of the vehicle like the gas tank, wiring harnesses, or hoses. Consult the vehicle's OEM documentation as necessary. When drilling, use a drill collar to reduce the risk of damage to the vehicle.

WARNINGS – Prior To Operating Vehicle

- The heaviest items must be placed towards the bottom of the vehicle, while the lightest ones can be arranged upwards. Vehicle cargo loading weight proportion should follow the guidelines shown here.
- Check your vehicle's tare weight and remaining load capacity with all equipment installed. Never exceed the maximum Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Ratings (GAWRs), or other maximum loads permitted by the vehicle's Original Equipment Manufacturer (OEM) and required by law.
- All items in the cargo area should be properly secured and partition doors closed while the vehicle is in motion.
- All system components should be regularly inspected, cleaned, and maintained pursuant to Ranger Design guidelines.

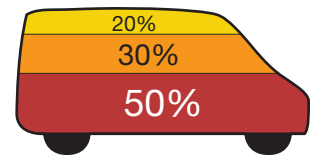


WARNING – In Event Of An Accident

- In the event of a motor vehicle accident or collision where a Ranger Design system has been installed, especially ones where the vehicle's structure has been damaged and/or the air bags have deployed and/or the vehicle has been towed, the system must be inspected to ensure continued soundness and safety before returning the vehicle to service. Damaged components should be replaced as necessary.

 FR: Si vous avez besoin de ces instructions en français, s'il vous plait contacter notre service à la clientèle. +1-800-565-5321







 ES: Si necesita estas instrucciones en español, comuníquese con el Servicio de atención al cliente de Ranger Design. +1-800-565-5321


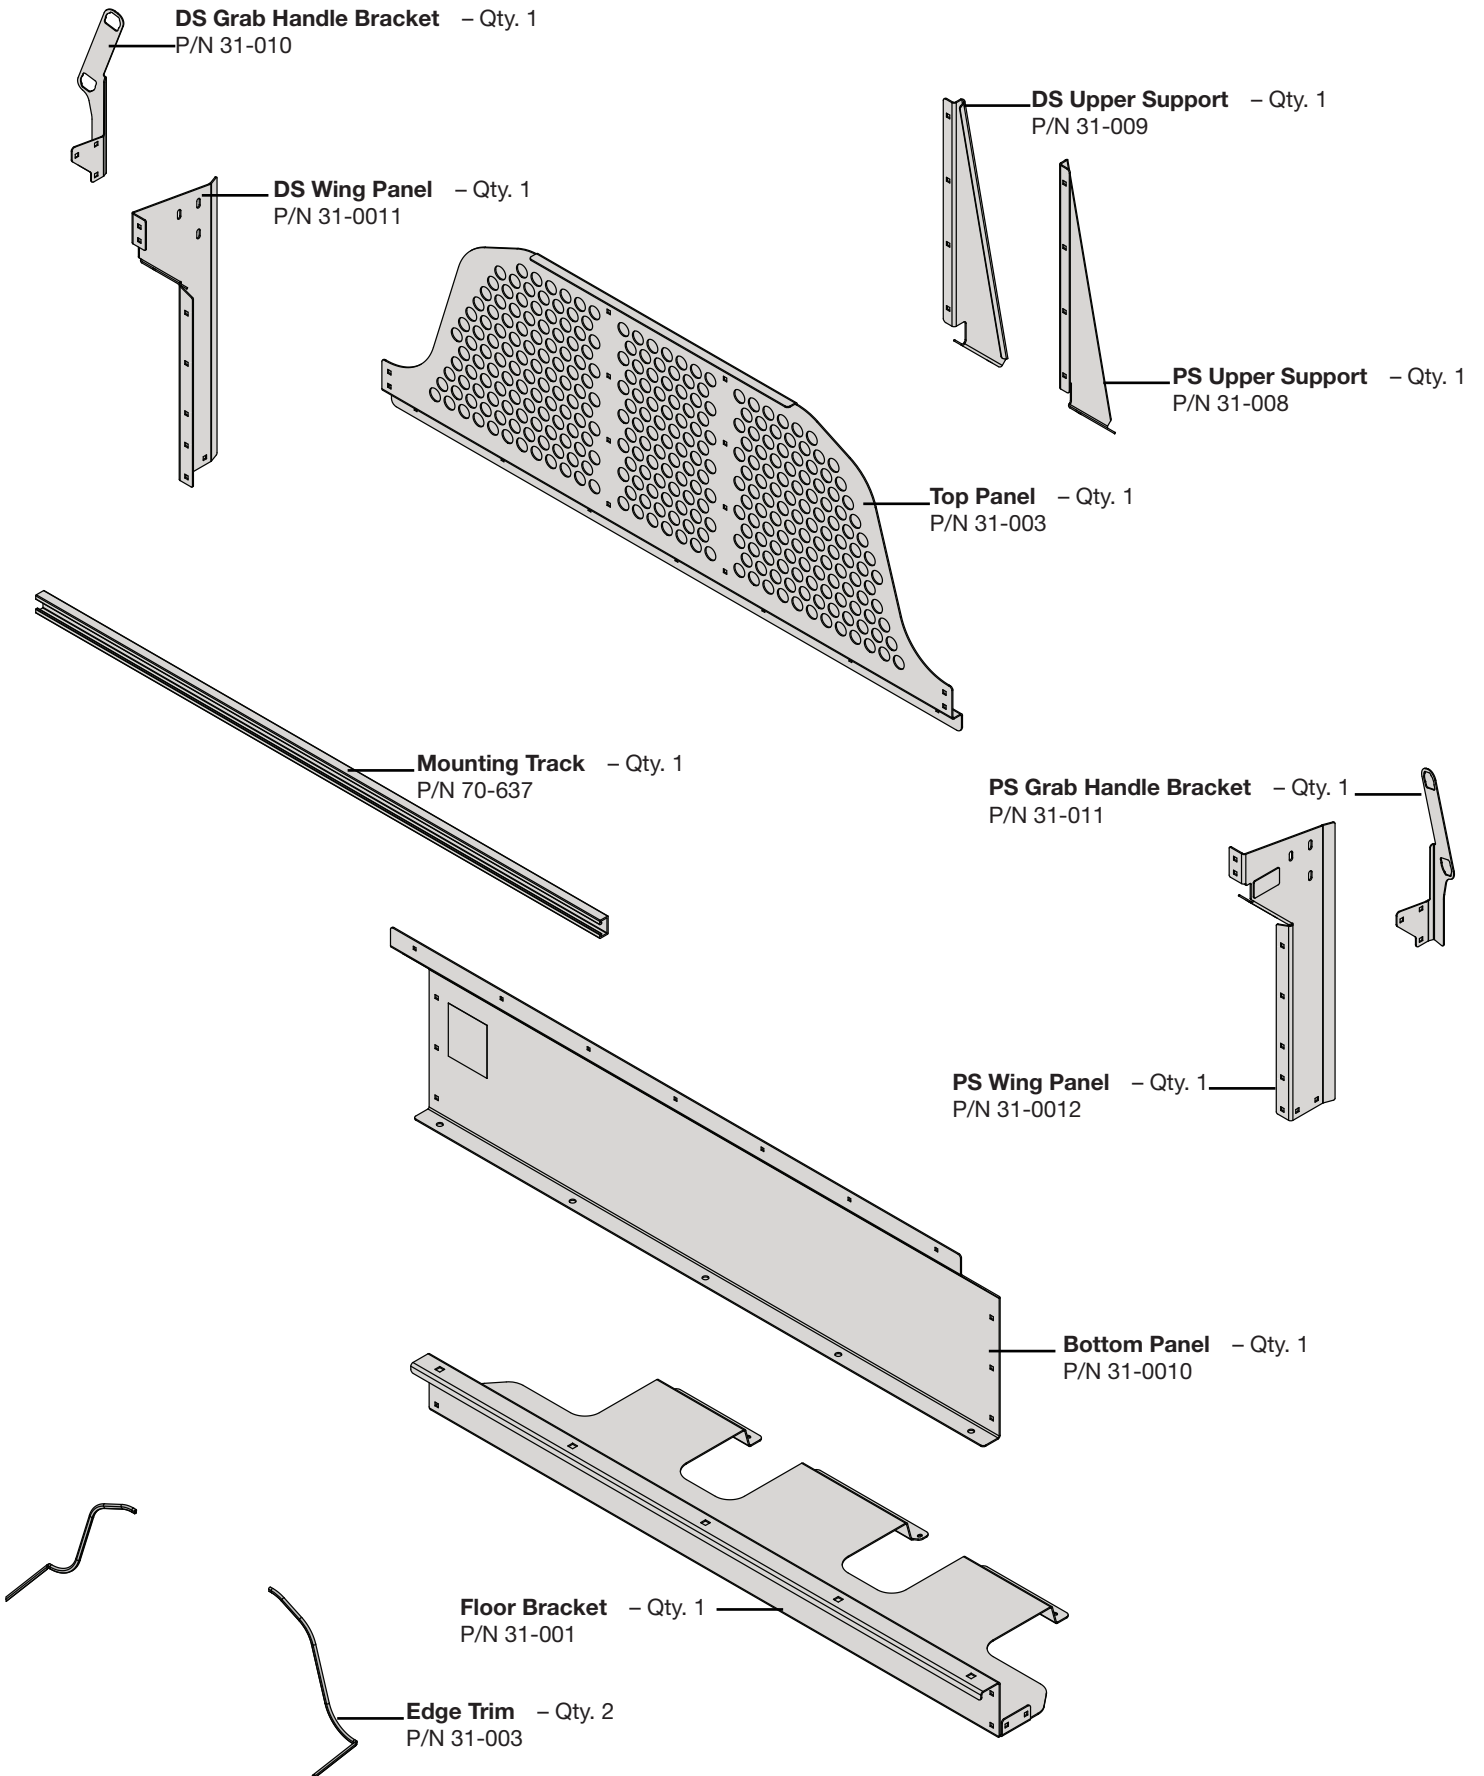





Parts Included

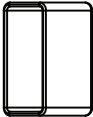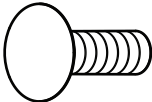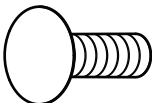

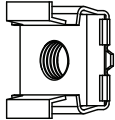Parts Included

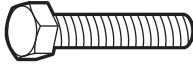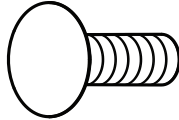Fastener Kit Content

Part	P/N & Description	P/N 94-2030 Qty.
	P/N 10-557 End Caps	2
	P/N 90-390 Bolt Carriage 1/4"-20 x 5/8" ZINC	7
	P/N 90-482 Bolt Carriage 5/16"-18 x 1/2" ZINC	32
	P/N 94-112 Serrated Nut 1/4" ZINC	7
	P/N 94-116 Serrated Nut 5/16" ZINC	32
	P/N 94-255 Snap-In Nut 5/16"-18 ZINC	5

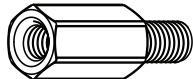
Part	P/N & Description	P/N 96-2030 Qty.
	P/N 90-206 Hex Bolt 5/16"-18 x 7/8" Zinc	5
	P/N 90-482 Bolt Carriage 5/16"-18 x 1/2" ZINC	8
	P/N 94-116 Serrated Nut 5/16" ZINC	8
	P/N 94-257 Serrated Nut M5 x 0.8 mm Zinc	6
	P/N 98-157 Spacer 0.375 ID x 1.00 OD Nylon	6
	P/N 98-116 Flat Washer 5/16" SST	5
	P/N 99-115 Male-Female Hex M5 x 0.8 mm ZINC	6

Tools Required (Not Included)

- Cordless Impact Driver
- Cordless Drill
- Tape Measure
- Marker
- 7/16" Socket
- 7/16" Wrench
- 1/2" Socket
- 1/2" Wrench
- 7/16" Drill Bit w/ Drill Collar
- 8mm Socket
- 10mm Socket
- 11mm Socket

Assembly

STEP 1 Pre-assemble top and bottom panels with the mounting track and wing panels before installing inside the van.

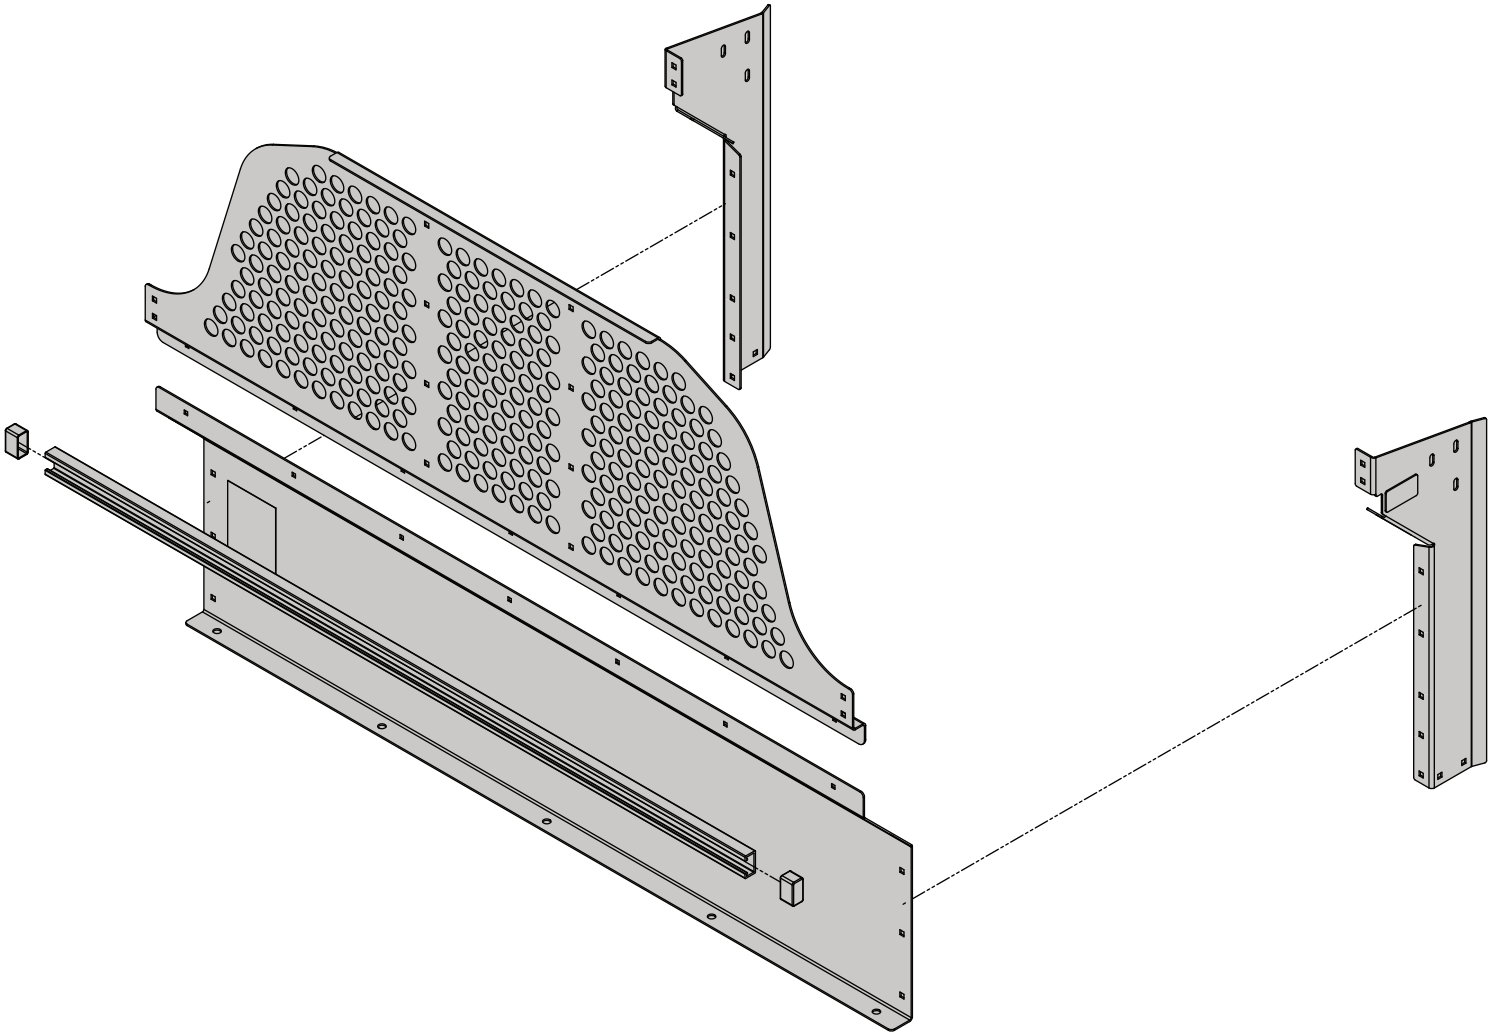

Assembly

STEP 2 Assemble using Ranger provided hardware.

HARDWARE

Carriage Bolt 1/4"-20 × 5/8" Qty: 7
Serrated Nut 1/4"-20 Qty: 7



**Torque to
8 ft-lbs.**

TOOLS

- 1/2 Wrench
- 1/2 Socket
- 7/16 Wrench
- 7/16 Socket
- Impact Driver

Carriage Bolt
Serrated Nut

Carriage Bolt
Serrated Nut

Carriage Bolt
Serrated Nut

HARDWARE


Carriage Bolt 5/16"-20 × 5/8" Qty: 14
Serrated Nut 5/16"-20 Qty: 14



**Torque to
12 ft-lbs.**

Assembly

STEP 3 Assemble the upper supports on the partition.

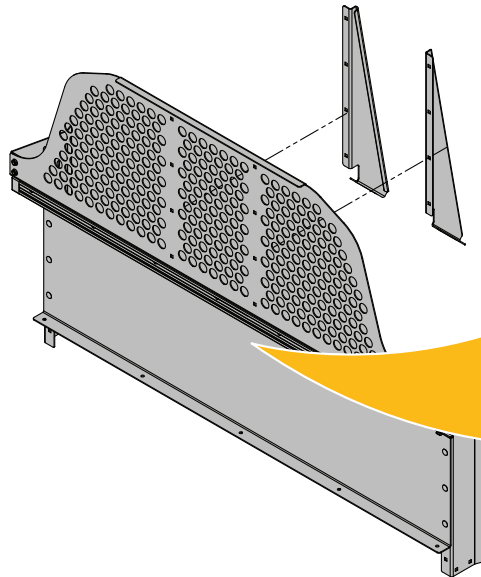

TOOLS

- 1/2 Wrench
- 1/2 Socket
- Impact Driver


HARDWARE

Carriage Bolt 5/16"-20 x 5/8" Qty: 4
Serrated Nut 5/16"-20 Qty: 4

Carriage Bolt
Serrated Nut

HARDWARE

Carriage Bolt 5/16"-20 x 1/2" Qty: 8
Serrated Nut 5/16"-20 Qty: 8

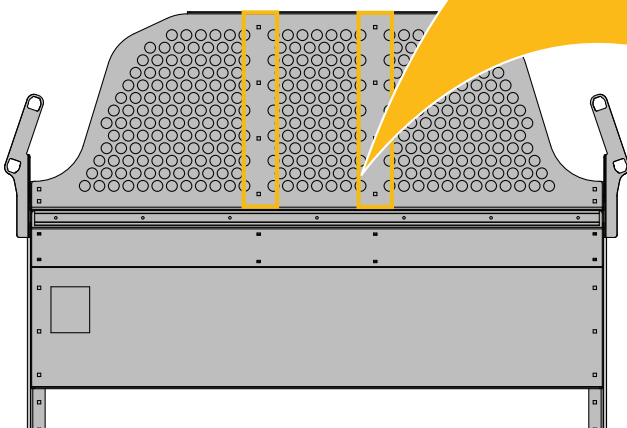


Carriage Bolt
Serrated Nut



**Torque to
12 ft-lbs.**

Assembly

STEP 4 Insert the partition edge trim.

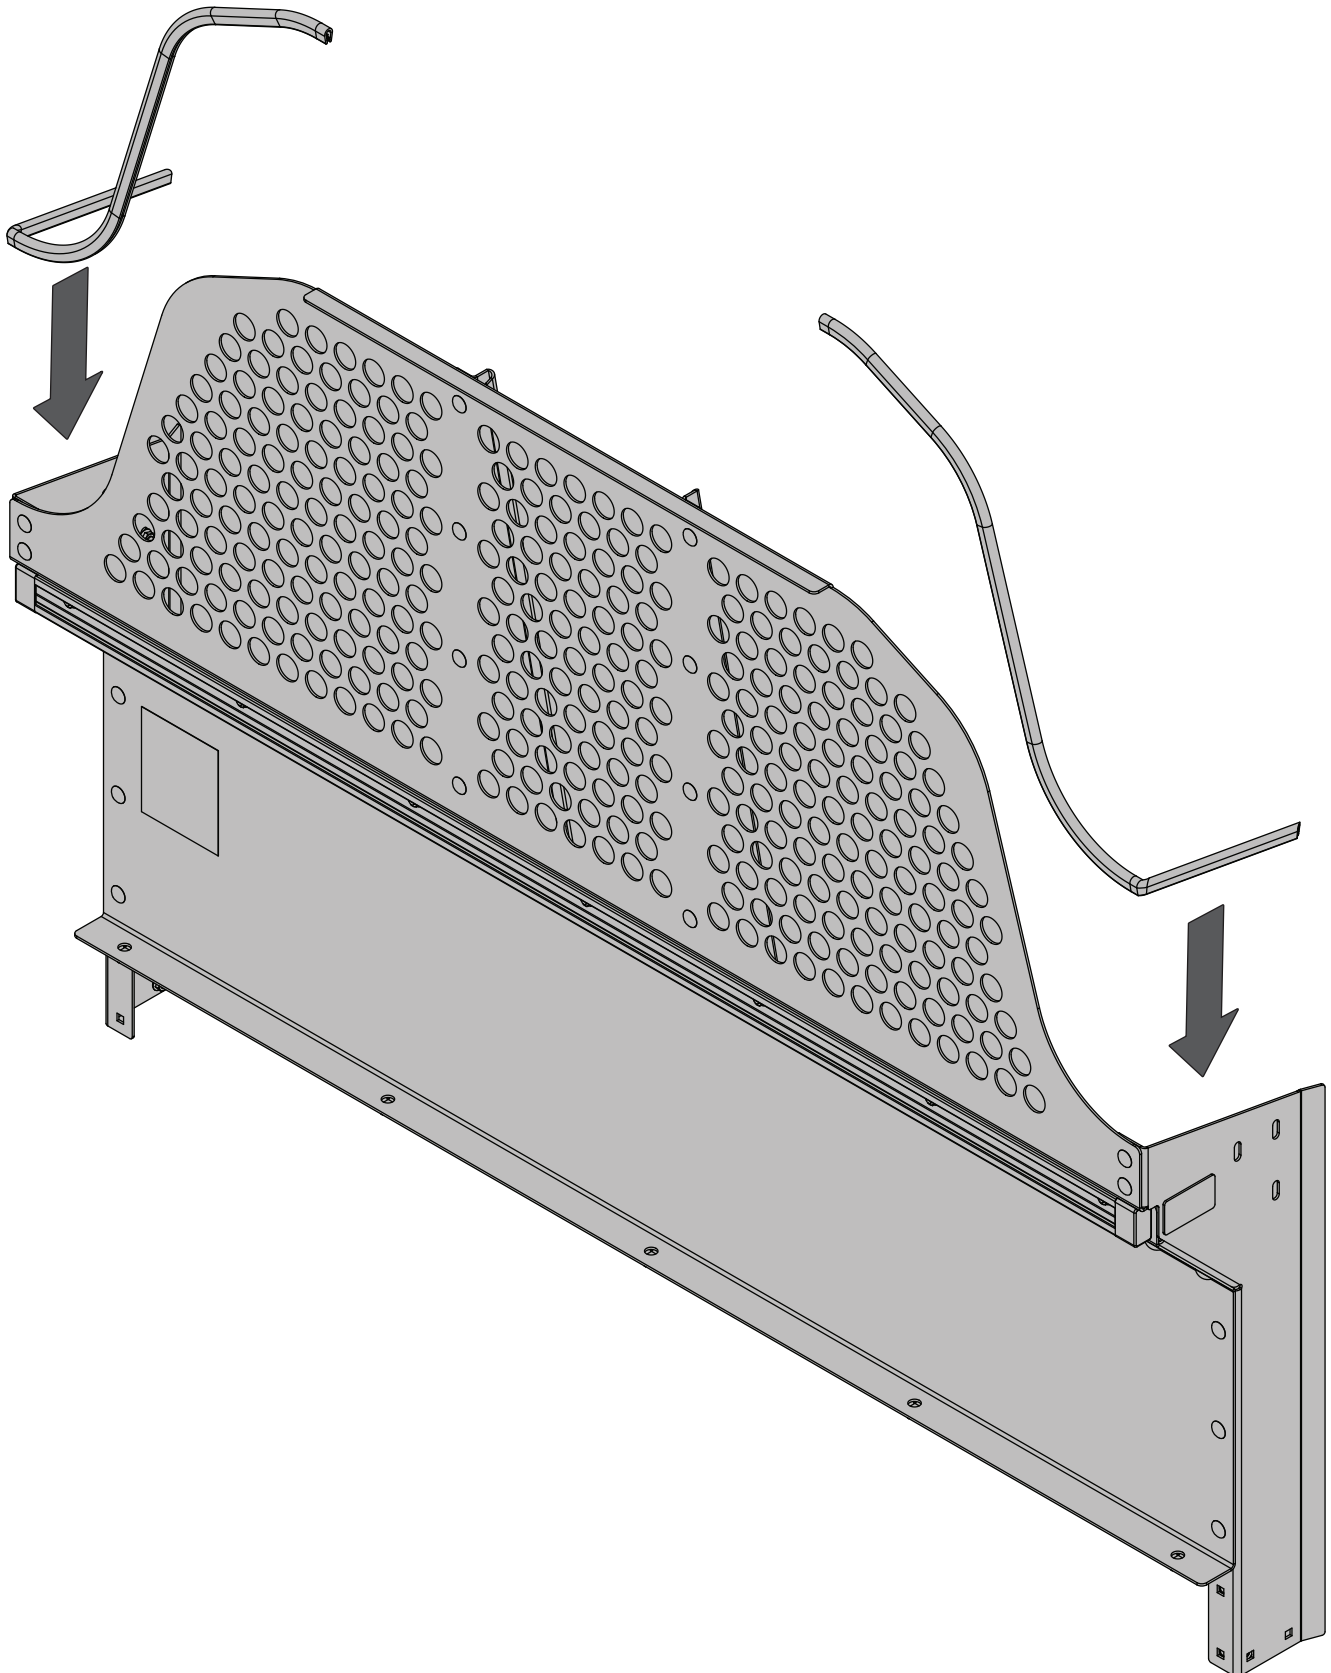


Installation


STEP 5 Install floor bracket to floor.

a. Bottom attachment preparation.

- 1. Remove plastic cap.
- 2. Uninstall OEM hex bolt.
- 3. Install threaded hex.
- 4. Return OEM floor carpets before installing bottom attachment.

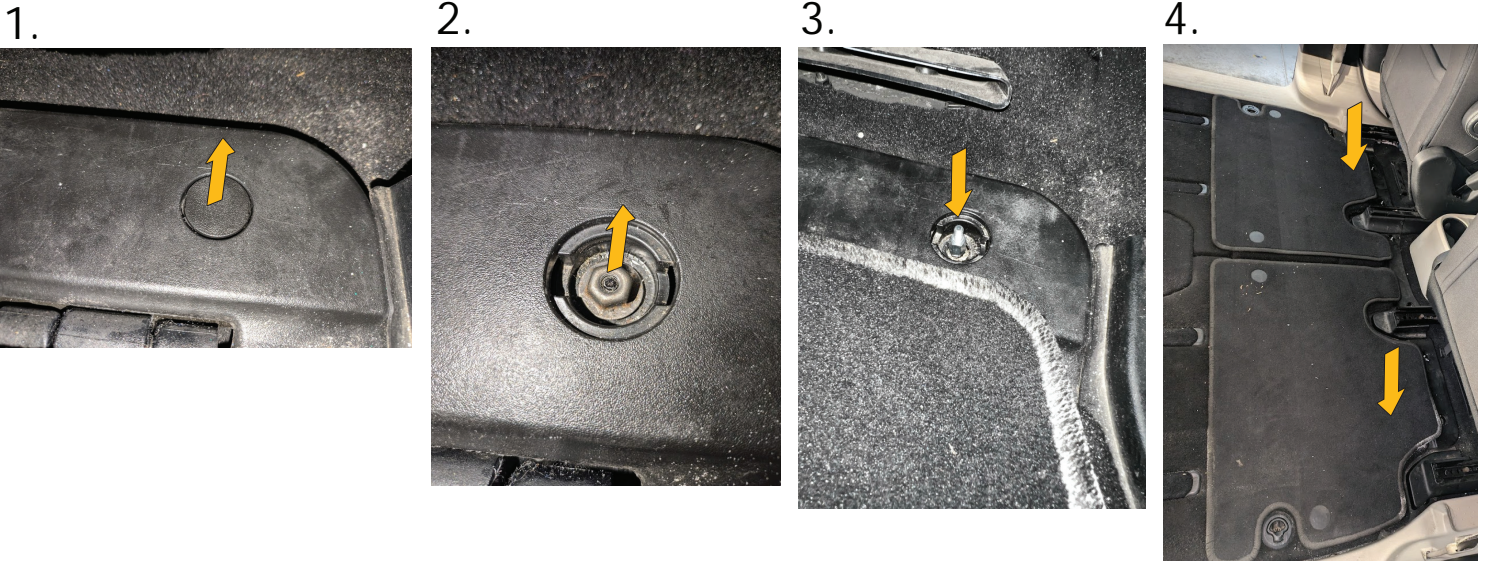

b. Install floor bracket to van floor.

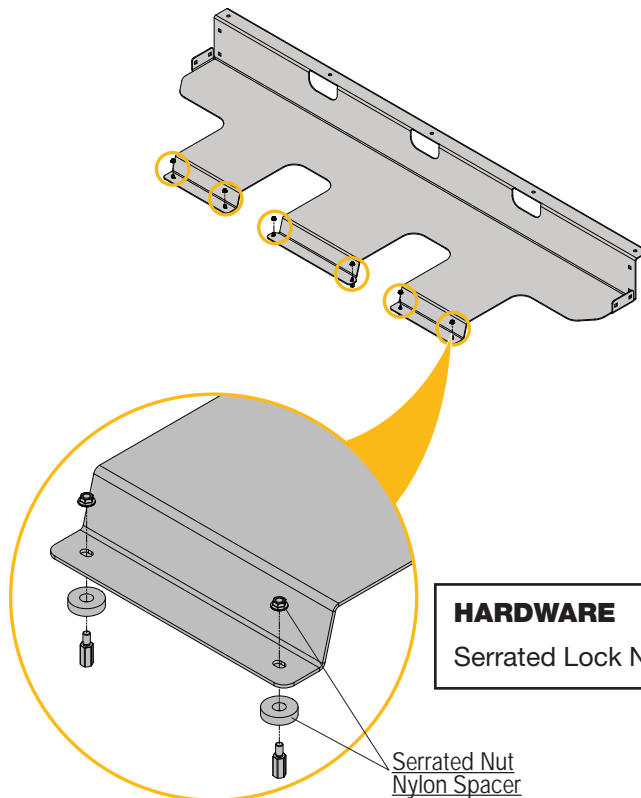

TOOLS

- 11mm Socket
- Impact Driver

HARDWARE

Serrated Lock Nut M5 x 0.8mm Qty: 6




Torque to
12 ft-lbs.


Installation

STEP 6 Partition installation into the van.

- a. Install snap in nut, then install floor bracket into the pre-assembled partition.

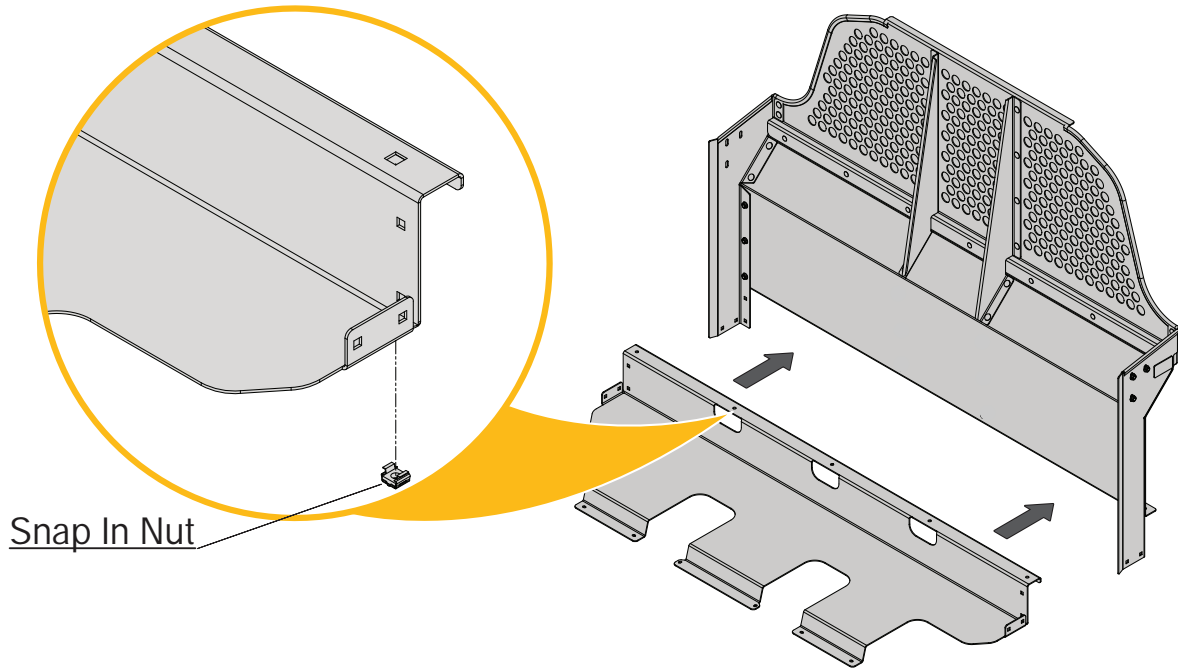

- b. Fasten the lateral partition and bottom partition using ranger provided hardware.

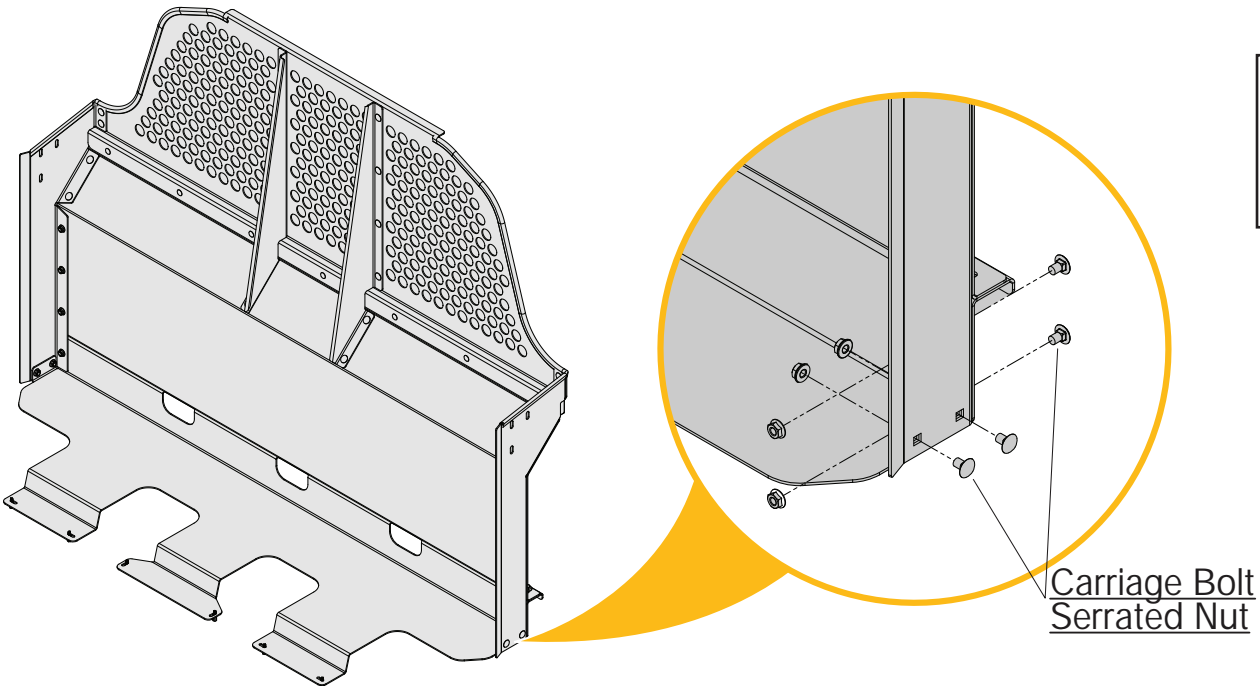

TOOLS

- 1/2 Wrench
- 1/2 Socket
- Impact Driver

HARDWARE


Carriage Bolt 5/16"-18 x 1/2" Qty: 8
Serrated Nut 5/16"-18 Qty: 8



Torque to
12 ft-lbs.


Installation

STEP 7 Fasten the bottom panel and the floor bracket together .

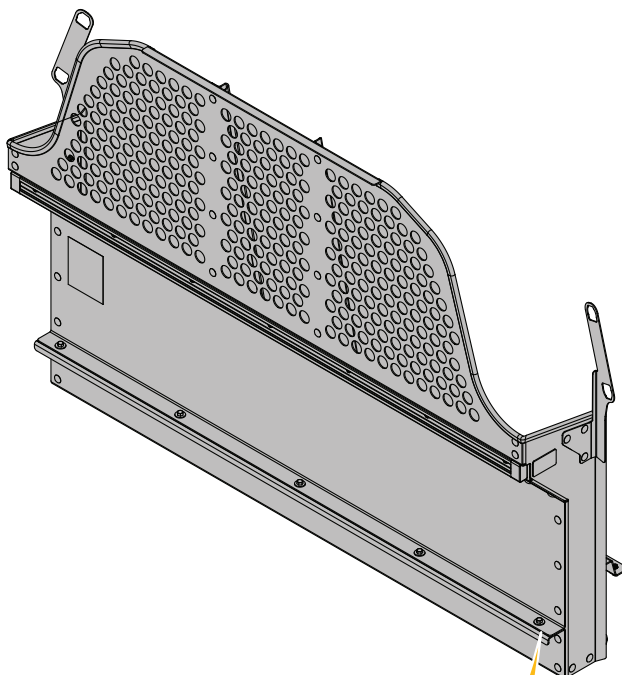

TOOLS

- 1/2 Wrench
- 1/2 Socket
- Impact Driver

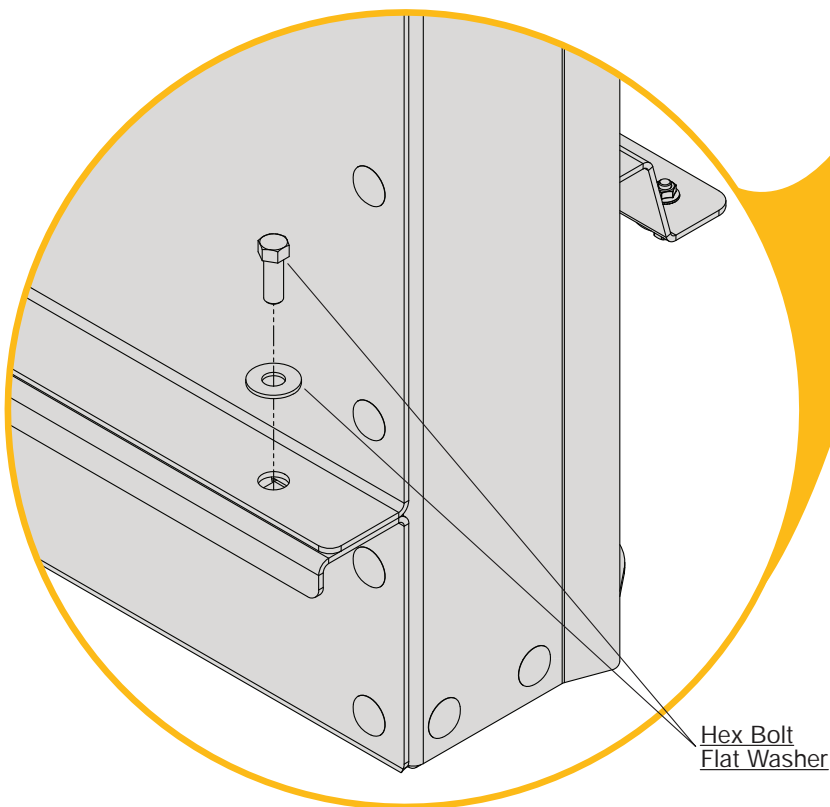

HARDWARE

Hex Head Bolt 5/16"-20 × 1/2" Qty: 8
Flat Washer 5/16"-20 Qty: 8




**Torque to
12 ft-lbs.**

Installation

STEP 8 Install partition handle holder into the van together with the OEM grab handles.

- a. Remove OEM grab handles.

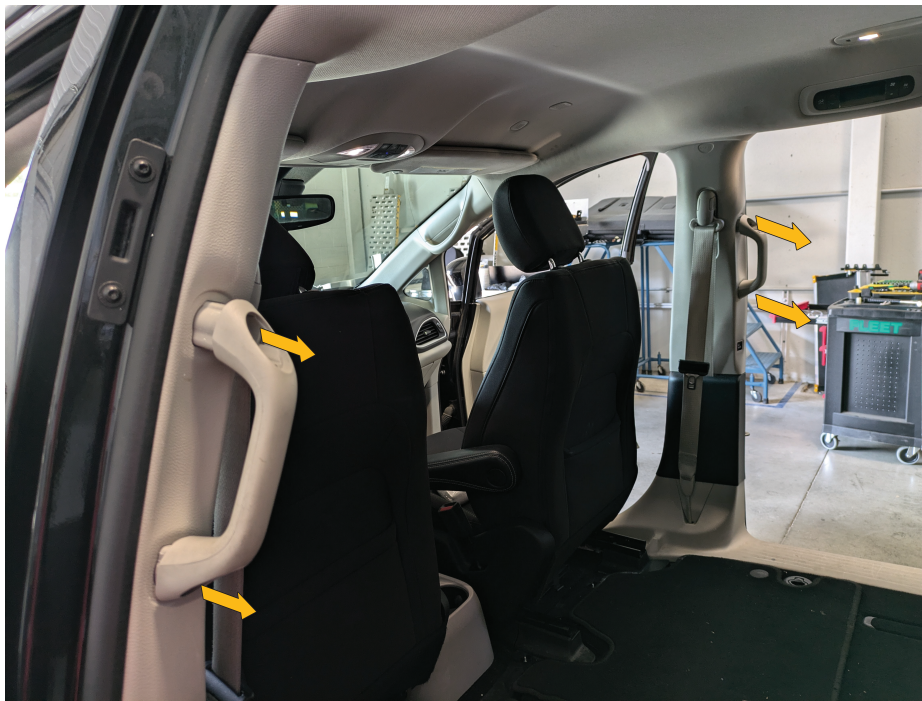


- b. Install partition brackets together with OEM grab handles.




Installation

STEP 9 Attach the handle holder into the partition.

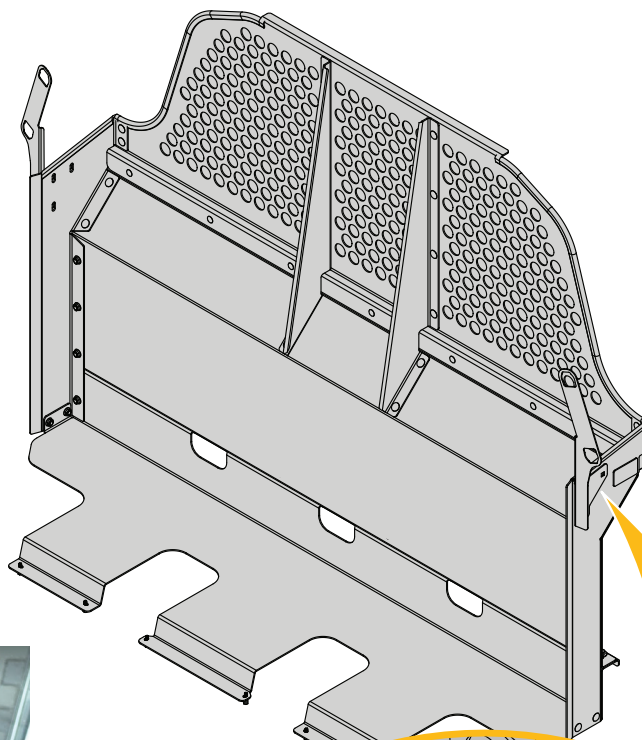

TOOLS

- 1/2 Wrench
- 1/2 Socket
- Impact Driver

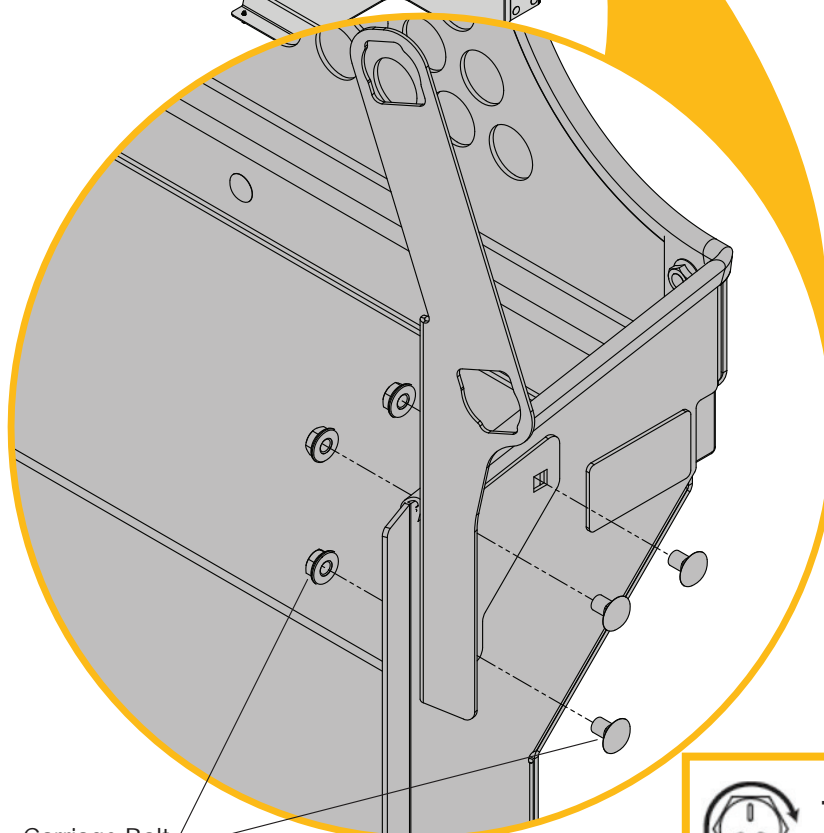

HARDWARE

Carriage Bolt 5/16"-20 x 1/2" Qty: 6
Serrated Nut 5/16"-20 Qty: 6

Carriage Bolt
Serrated Nut



**Torque to
12 ft-lbs.**



You have successfully assembled and installed your Partition.

Thank you for doing business with us.

For technical support, contact us at 1-800-565-5321.

For any feedback or suggestions you may have, please contact cs@rangerdesign.com.

Copyright © 2024

All rights reserved. This manual or any portion thereof may not be reproduced or used in any manner whatsoever without the express written permission of Ranger Design, Inc.