

INSTALLATION GUIDE



CLAMP RACK

1625-DH, 1625-GS
1625-FTR, 1625-FTL
1625-MM, 1625-PHL
1625-PHM, 1625-PHS
1625-PHX




ORDER OF OPERATION



CLAMP RACK




Click on this icon next to each unit to be redirected to the respective Install Guides.

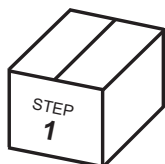




16-UCD72 16-UCDGS (for Savana) 16-UCD66 (for Metris)

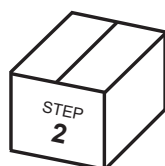

16-UCL77

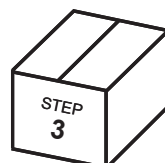

16-U1127

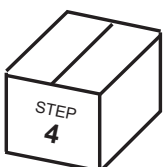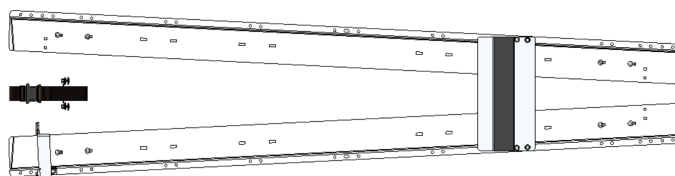

FORD

TRANSIT 130" 18-U0042

TRANSIT 148" 18-U0030

RAM

PROMASTER 118" 18-U0020

PROMASTER 136" 18-U0022

PROMASTER 159" 18-U0032

PROMASTER 159" Ext. 18-U0034

MERCEDES-BENZ

SPRINTER 18-U0018

SPRINTER w/OEM Tracks 18-U0019

METRIS 18-U0043

*Universal Bolt-Through foot Mounts 18-U0047

*For 18-U0047: 1 kit per crossbar required.