

INSTALLATION GUIDE



MAX RACK

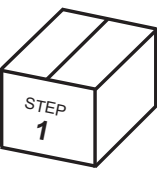

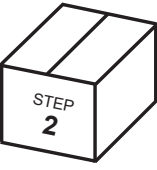
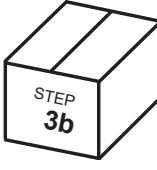
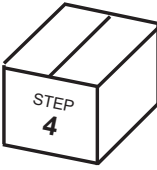

1840-FTL,	1850-FTL,	1850-FTL3
1840-FTR,	1850-FTR,	1850-FTR3
1840-GS,	1850-GS,	1850-GS3
1840-MM,	1850-MM,	1850-MM3



ORDER OF OPERATION

LOW ROOF MAX RACK

 Click on this icon next to each unit to be redirected to the respective Install Guides.

	16-UCD72 (Transit) 	16-UCDGS (for Savana) 	16-UCD66 (for Metris) 										
													
	16-UCS72 (Transit) 	16-UCSGS (for Savana) 	16-UCS66 (for Metris) 										
													
*Optional (for 1850-3 only)													
 	 												
*Optional (for 1850 series or 1850-3 series)													
	 <table border="0"><thead><tr><th data-bbox="300 1627 373 1659">FORD</th><th data-bbox="868 1627 1104 1659">MERCEDES-BENZ</th></tr></thead><tbody><tr><td data-bbox="300 1690 479 1732">TRANSIT 130"</td><td data-bbox="868 1690 974 1732">METRIS</td></tr><tr><td data-bbox="300 1753 479 1795">TRANSIT 148"</td><td data-bbox="1347 1690 1469 1732">18-U0043 </td></tr><tr><td data-bbox="584 1690 706 1732">18-U0042 </td><td data-bbox="868 1816 1469 1869">*Universal Bolt-Through foot Mounts 18-U0047 </td></tr><tr><td data-bbox="584 1753 706 1795">18-U0030 </td><td></td></tr></tbody></table>			FORD	MERCEDES-BENZ	TRANSIT 130"	METRIS	TRANSIT 148"	18-U0043 	18-U0042 	*Universal Bolt-Through foot Mounts 18-U0047 	18-U0030 	
FORD	MERCEDES-BENZ												
TRANSIT 130"	METRIS												
TRANSIT 148"	18-U0043 												
18-U0042 	*Universal Bolt-Through foot Mounts 18-U0047 												
18-U0030 													
*For 18-U0047: 1 kit per crossbar required.													