


INSTALLATION GUIDE

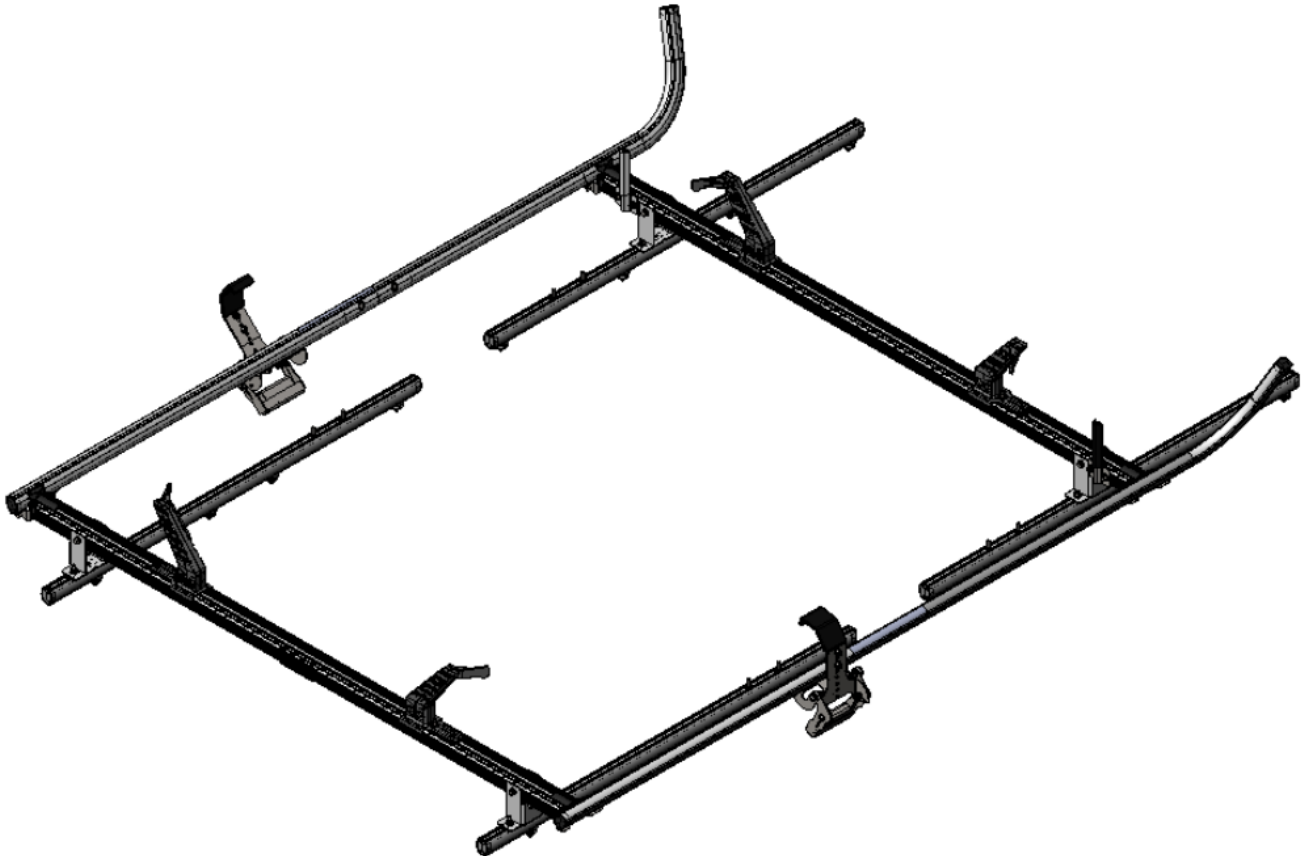

CLAMP RACK

1630-FTL,	1630-FTL3,	1630-FTR,	1630-FTR3
1630-GS,	1630-GS3,	1630-PHL,	1630-PHL3
1630-MM,	1630-MM3,	1630-PHM,	1630-PHM3
1630-PHS,	1630-PHS3,	1630-PHX,	1630-PHX3
1630-DH,	1630-DH3		


RANGER
DESIGN

ORDER OF OPERATION



CLAMP RACK





Click on this icon next to each unit to be redirected to the respective Install Guides.

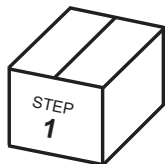




16-UCD72 16-UCDGS (for Savana) 16-UCD66 (for Metris)

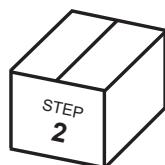

16-UCS72 16-UCSGS (for Savana) 16-UCS66 (for Metris)

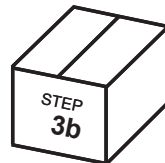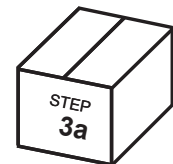

16-UCL77

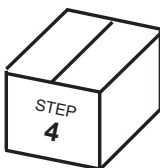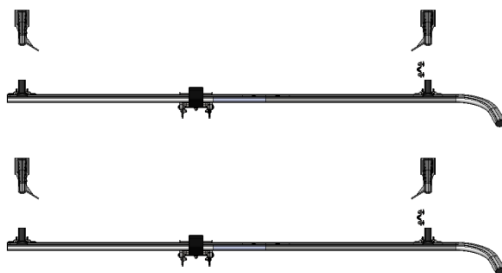

FORD

TRANSIT 130" 18-U0042

TRANSIT 148" 18-U0030

RAM

PROMASTER 118" 18-U0020

PROMASTER 136" 18-U0022

PROMASTER 159" 18-U0032

PROMASTER 159" Ext. 18-U0034

MERCEDES-BENZ

SPRINTER 18-U0018

SPRINTER w/OEM Tracks 18-U0019

METRIS 18-U0043

*Universal Bolt-Through foot Mounts 18-U0047

*For 18-U0047: 1 kit per crossbar required.