

INSTALLATION GUIDE



6257-19 BUCKET SEAT SET

Mercedes Benz Sprinter

PLEASE NOTE : These seat covers **ONLY** fit in the 2018+ MY Sprinter with base model seats, not the luxury seats, nor the previous model years



Scan the QR code for latest Install-Guide

RANGER
DESIGN

Warnings

READ, UNDERSTAND, AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW THESE DIRECTIONS MAY RESULT IN PROPERTY DAMAGE, SERIOUS BODILY INJURY, AND/OR DEATH. RANGER DESIGN IS NOT RESPONSIBLE FOR ANY PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH THAT OCCURS WHILE USING ANY RANGER DESIGN PRODUCTS. THE FINAL ALTERER AND/OR MODIFIER SHOULD REVIEW THE WARNING SHEET WITH THE CUSTOMER BEFORE THE VEHICLE IS RELEASED TO THE CUSTOMER FOR GENERAL USE. THESE INSTRUCTIONS SHOULD REMAIN WITH THE VEHICLE AT ALL TIMES.

WARNINGS – Prior To Starting

- Ranger Design products must be assembled and installed by individuals qualified to use the tools required and have experience with similar products. If there is any question as to competence or experience, please contact a professional alterer or modifier.
- Failure to use Ranger Design-provided fasteners, brackets, and proper installation guidelines could increase risk of serious personal injury and/or death.
- Prior to installation, inspect the vehicle to ensure that installation will not interfere with, or cause obstruction of, any critical components such as electrical wiring, fuel tanks, fuel cells, locks, latches, etc.
- The final alterer and/or modifier is responsible for ensuring all equipment is sufficiently secured to wall and floor structures or suitable anchorages.
- Do not install systems into any weak or unsound materials such as plastics, woods, thin-walled metals, etc., without proper reinforcement.
- Do not install this product where it could interfere with the deployment of airbags. Failure to comply could result in death or serious injury.
- Do not install this product where it could ingress on the Vehicle Occupant Protection Zone. Failure to comply could result in death or serious injury.
- Incorrect installation could cause water leaks, electric shock, or fire.
- Any cargo vehicle with any cargo or equipment should use a certified partition which can be found on the Ranger Design website. (<https://rangerdesign.com>)
- Mounting rails and floors are strongly recommended for any attachment to the vehicle and can be found on the Ranger Design website. (<https://rangerdesign.com>)
- Any modification or unintended use of this product voids any warranty and could create a hazardous condition.
- Ranger Design provides recommended assembly and installation instructions which must be followed to ensure correct operation. Failure to do so could invalidate the product's compliance and/or warranty and cause injury.
- The final stage vehicle alterer and/or modifier is responsible for the integration, installation, and compliance of the product in its final location with all applicable regulations and standards. Failure to maintain compliance of the vehicle with applicable regulations and standards could be punishable by law. Alterers and/or modifiers should consult with all local authorities prior to commissioning.


- Any materials, padding, or glazing installed in the vehicle must comply with FMVSS/CMVSS 201/205/302, as applicable.

WARNINGS – Prior To Drilling

- Improper drilling can cause property damage to vehicles and could lead to electric shock, fire, or even death.
- Ensure that drilling is only performed on areas of the vehicle allowed by the vehicle's Original Equipment Manufacturer's Body Builders Layout Book (or equivalent document).
- Ensure that you will not hit any critical parts of the vehicle like the gas tank, wiring harnesses, or hoses. Consult the vehicle's OEM documentation as necessary. When drilling, use a drill collar to reduce the risk of damage to the vehicle.

WARNINGS – Prior To Operating Vehicle


- The heaviest items must be placed towards the bottom of the vehicle, while the lightest ones can be arranged upwards. Vehicle cargo loading weight proportion should follow the guidelines shown here.
- Check your vehicle's tare weight and remaining load capacity with all equipment installed. Never exceed the maximum Gross Vehicle Weight Rating (GVWR), Gross Axle Weight Ratings (GAWRs), or other maximum loads permitted by the vehicle's Original Equipment Manufacturer (OEM) and required by law.
- All items in the cargo area should be properly secured and partition doors closed while the vehicle is in motion.
- All system components should be regularly inspected, cleaned, and maintained pursuant to Ranger Design guidelines.

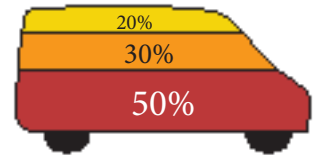

WARNING – In Event Of An Accident

- In the event of a motor vehicle accident or collision where a Ranger Design system has been installed, especially ones where the vehicle's structure has been damaged and/or the air bags have deployed and/or the vehicle has been towed, the system must be inspected to ensure continued soundness and safety before returning the vehicle to service. Damaged components should be replaced as necessary.

FR: Si vous avez besoin de ces instructions en français, s'il vous plait contacter notre service à la clientèle. +1-800-565-5321

ES: Si necesita estas instrucciones en español, comuníquese con el Servicio de atención al cliente de Ranger Design. +1-800-565-5321

QUICK START GUIDE

Phase 1 - Preparation

- 1.1 Remove Headrests..... 4
- 1.2 Raise seat up, slide forward and lean back forward..... 4

Phase 2 - Installation

- 2.1 Install Seat Back Cover..... 4
- 2.2 Install Seat Bottom Cover..... 5
- 2.3 Install Headrest Cover..... 6

BILL OF MATERIALS

Item No.	Description	Qty.
62-573	Seat Back Cover Passenger Side	1
62-571	Seat Bottom Cover Passenger Side	1
62-574	Headrest Cover Passenger Side	1
62-572	Seat Back Cover Driver Side	1
62-573	Seat Bottom Cover Driver Side	1
62-574	Headrest Cover Driver Side	1

General care instructions:


1. In most cases dirt, debris, spills and pet hair can be removed by wiping with a damp cloth.
2. Seat covers can be removed and machine washed on low temperature setting using mild detergent.
Drip dry or machine tumble dry on a no heat cycle.
Straps should be coiled and secured with rubber bands for machine washing and drying.
3. Soil may be removed with spray cleaner or detergent and water.
4. Oil or grease stains should first be treated with a dry cleaning solvent followed by a spray cleaner or detergent and water.
5. Do not use bleach.

PHASE 1 – PREPARATION

1.1 REMOVING

1.1.1 Remove Headrests.

Pull headrests out of the seats by pressing the tabs at the base of the headrests and slide seat forward, raise up, and lean seat back forward.

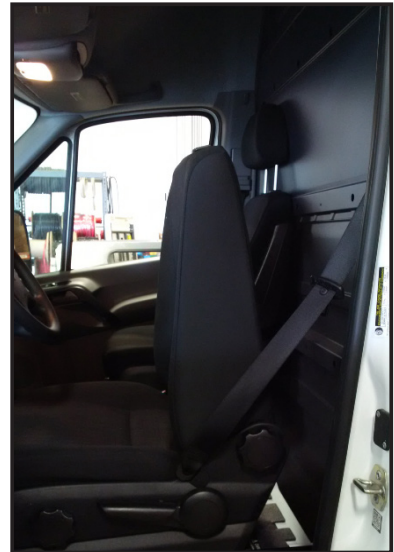

PHASE 2 – INSTALLATION

2.1 SEAT COVER INSTALLATION



2.1.1 Install Seat Back Cover. Ensure the tag inside the cover corresponds with the seat you are working on. Each cover will have a Driver or Passenger tag.

2.1.2 Turn seat cover 3/4 of the way inside out.

2.1.3 Pull seat back cover into position, making sure that the holes in the cover align with the holes in the seat back.

2.1.4 Stretch the cover over the headrest holes.

2.1.5 Continue pulling the cover down the seat back, turning it right side out as you go.

2.1.6 Push flap from front of cover between seat back and seat bottom, out the back of the seat.

2.1.7 Double the end of the flap over to prevent the “hook” Velcro from sticking to the factory upholstery.

2.1.8 Pull the flap tight and attach to the Velcro on the back of the seat.

2.1.9 Fasten flap under armrest.

2.2 INSTALL SEAT BOTTOM COVER



2.2.1 Put cover over seat bottom.

2.2.2 Tuck strings between seat bottom and trim, where the back and bottom meet.

2.2.3 Tuck sides of cover behind plastic trim.

2.2.4 Pull strings tight.

2.2.5 Tie a loop in one string. Run the other string through the loop, pull tight, and tie string back on itself. It is important to pull tight as this is what keeps your cover from shifting.

2.2.6 Push top flap between seat back and seat bottom.

2.2.7 Run front flap over seat adjustment lever, wires, and brackets.

2.2.8 Pull front flap tight and fasten to Velcro on top flap.



2.3 INSTALL HEADREST COVERS.

2.3.1 Put headrests back on seats.

2.3.2 Press tabs at base of headrest and push headrest into seat back.

2.3.3 Pull headrest cover over headrest with “hook” Velcro on the back and “loop” Velcro on the front.

2.3.4 Pull front flap over back flap and fasten.



**“Congratulations, you have successfully installed your
Seat Cover Set!”**

Thank you for doing business with us.”

RANGER
DESIGN