

Instructions

Rear Trailing Arm Bushings

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Page 1 of 2

Application - Subaru Impreza
- 2002-2007

Always refer complete catalogue listing

Install Guide

Contents - 4x large bushings
- 4x small bushings
- 4x steel tubes 22.2x12.2x50
- Grease


- Raise rear of vehicle evenly and safely support

Never rely on a Jack only.

- Proceed to remove rear wheels.
- Un-bolt brackets for ABS wiring and hand-brake cable.
- Remove Trailing Arms from vehicle.
 - The front bushing bolt may be very tight. It may be best to completely remove front bracket bolted to vehicle floor.



Front Trailing Arm Bracket

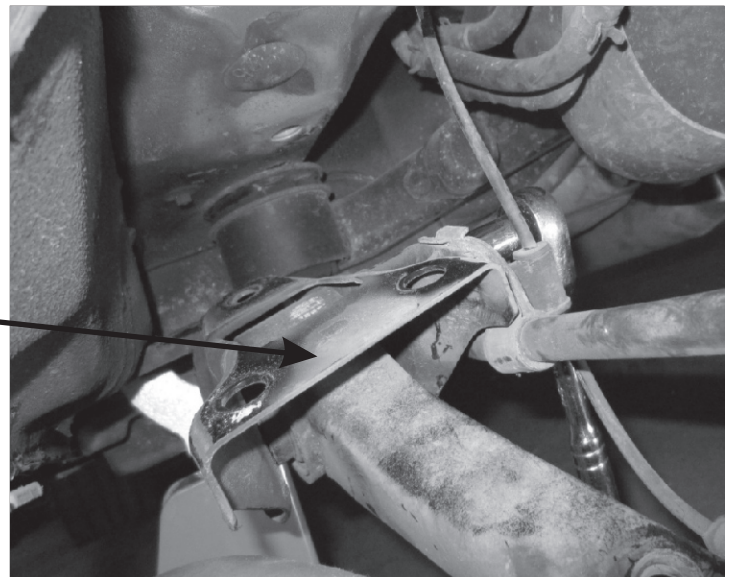

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Instructions

Rear Trailing Arm Bushings

Page 2 of 2

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

- Proceed to press out original bushings.

The rear bushing does not have a steel outer shell.

This bushing can be pushed or pulled out in vehicle with a mechanical puller - refer top image.

- Once bushing removed - clean Eyes of any grease and dirt.

• Push in supplied bushings. Grease bushing internal diameter and face with supplied grease only.

- Push in supplied steel tubes.

• Re-fit arms to vehicle - tighten bolts to 85 Nm.

- Re-check all bolts after 100kms travelled.

